

# Russell Taylors

E-WARRANTY



SCAN HERE

## USER MANUAL FOOD CHOPPER

**FC1**



## INSTRUCTIONS

1. Before using the product for the first time, thoroughly clean the parts that come into contact with food.
2. After turning on the food chopper, press the switch and the machine will start to work; release the switch and the machine will stop.
3. Remove the ribs, bones and skin from the meat before processing.
4. Put the cup on the rubber cover, cut the ingredients into 1-2 pieces and put them into the bowl. The amount of water added should reach the corresponding level, and the total amount should not exceed half of the total capacity of the cup, otherwise it will affect the crushing effect and service life of the product.
5. Close the transparent cover, the position needs to be aligned.
6. Place the motor on the transparent cover.
7. Turn on the power. Press the switch to start chopping, and the continuous working time cannot exceed 30 seconds.
8. After using, disconnect the power supply until the blade stops rotating, take out the motor, open the transparent cover, take out the meat and blade, and take out the ingredients with a spatula or chopsticks.
9. If ingredients stick to the cup, turn off the switch and turn off the power and scrape it with a spatula or chopsticks before processing.
10. Meat grinders and blenders cannot be used to dry hard ground foods, such as beans, rice and coffee.
11. If the product shakes due to uneven distribution of ingredients, stop the machine and distribute the ingredients evenly in the cup, and then turn on the motor.
12. If the expected effect is not achieved within 30 seconds, you should release the power switch first, and then restart the operation after 10 to 20 seconds, which will help extend the product lifetime.

## **MAINTENANCE**

1. Before cleaning the product, be sure to remove the motor and disconnect the power.
2. Please clean the product after each use.
3. When handling, rinse the parts of the cup machine with water and wipe them clean. The blades are sharp. When cleaning the knife holder, do not touch the knife holder with your hands. To avoid injury, rinse with water to avoid cutting your fingers during cleaning
4. The outside of the motor can be wiped with a damp cloth. Do not put the main body in water or other liquids.
5. This product should be stored dry and protected from direct UV light.
6. Before storing the product, it should be ensured that the product is clean and dry.

## **PRECAUTIONS FOR SAFE USE:**

1. Before disassembling, installing or adjusting any part of the product, be sure to disconnect the power.
2. Check whether the power cord, plug and other parts are damaged before use. If you find any damage, stop using the product. Please contact our company's customer service in time. Do not disassemble or repair to avoid danger.
3. Before adding ingredients, make sure that the meat grinder bracket is in place and running smoothly.
4. It is strictly forbidden to work without food in the cup or to overload it.
5. Do not put food that exceeds the ambient temperature of 50 degrees into the cup, and do not use the microwave to sterilize it to avoid cracking the cup.
6. This machine cannot process hard foods, such as coffee beans, dried soybeans and similar ingredients.
7. If the expected effect is not achieved within 30 seconds, you should release the power switch first, and then restart the operation after 10 to 20 seconds, which will help extend the product lifetime.
8. After the chopping is completed, wait for the motor and blade to stop rotating, make sure that the power is off, and then remove the motor.
9. If the product stops working during operation, it is because the built-in thermostat protects the motor during continuous operation. Please turn off the switch, disconnect the power supply, and use it after cooling for 20-30 minutes.

10. Do not put the motor in water or other liquids, or wash the motor with water or other liquids. Do not use corrosive liquids (such as gasoline) to clean products.
11. Do not wash any part of this product in the dishwasher.
12. This product should be stored in a place where relevant experience and technical personnel use this product
13. This machine is only suitable for personal or family use and cannot be used for commercial purposes.