

E-WARRANTY



Russell Taylors

USER MANUAL

FOOD PROCESSOR

www.russelltaylors.co.uk

FP6



SAFETY PRECAUTION


When using electrical appliances, the following basic safety precaution should always be followed and remembered for future reference.

1. This appliance is for household use only.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Young children must be supervised to ensure that they do not play with the appliance.
4. If the supply cord is damaged, it must be replaced by qualified persons in order to avoid a hazard.
5. This appliance includes a safety switch which prevents operation unless the accessories are securely installed.
6. The temperature of accessible surfaces may be high when the appliance is operating.
7. To protect against risk of electric shock, fire or personal injury, do not immerse the power cord, plug or motor base in water or any form of liquid.
8. Unplug the machine when it is not in use and before cleaning.
9. Do not immerse the motor Base in water or rinse it under tap

water.

10. Do not push food with fingers, or other objects (like knives), always use the enclosed pusher for feeding food.
11. Be extremely careful when handling blades, especially while assembling, disassembling and cleaning after use.
12. Do not let the power cord hang over the edge of a table or counter, or touch any hot surface.
13. Do not place the appliance near a gas outlet, electric burner, or heated oven.
14. Please wait until all the components stop running before unplugging the power cord and taking off the processing bowl.
15. Always use a reliable earthed power supply to operate the appliance.
16. The appliances are not intended to be operated by means of an external timer or separate remote-control system.

PACKAGE CONTENTS

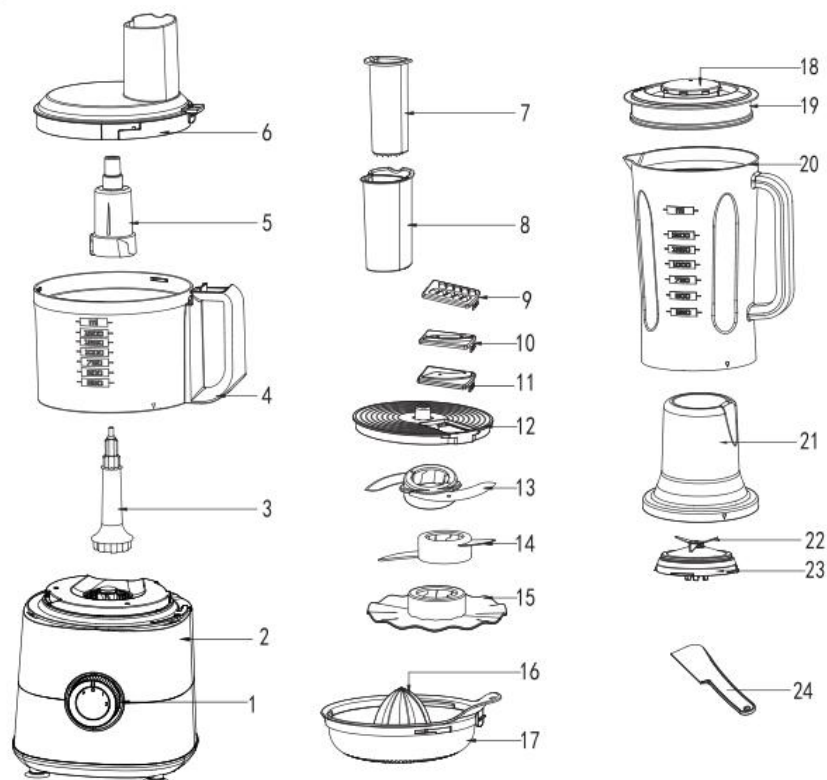

1. Rotary switch	2. Motor base	3. Driving shaft
4. Processing bowl	5. Blade adapter	6. Bowl cover
7. Small pusher	8. Large pusher	9. Coarse shredding blade
10. Coarse slicing blade	11. Fine slicing blade	12. Blade holder
13. Chopping blade	14. Kneading blade	15. Emulsifying Disc
16. Citrus juicer head	17. Citrus juicer plate	18. Small cap
19. Blender jar cover	20. Blender jar	21. Grinder jar
22. Grinder blade	23. Grinder blade base	24. Spatula

BEFORE FIRST USE

After unpacking the package, disassemble the unit before using it for the first time. Refer to "HOW TO DISASSEMBLE" for reference. Wash all of the parts except the motor base in warm, soapy water and dry them before use. All parts except the motor base can be washed in a dishwasher.

DO NOT IMMERSE THE MOTOR BASE INTO WATER

ASSEMBLY


Shredding & Slicing Blade

1. Place the motor base on the flat and dry board.
2. Place the driving shaft on the motor base.
3. Place the processing bowl onto the driving shaft and turn it clockwise to seat it firmly on the motor base. The handle of the bowl should face the right side of the switch knob.
4. Place the desired shredding or slicing blade onto the blade holder.
5. Place the blade holder onto processing bowl.
6. Place the cover on the bowl, and turn the cover clockwise until the cover interlocks on the bowl.
7. The switch should be on the "0" speed; connect the plug into the socket, using pulse function to confirm whether the machine is

assembled well. If there is anything abnormal, unplug the machine and re-assemble it as above. Only one blade can be used each time.

Tips and warning:

- Push the food down softly when feeding food.
- Cutting food into smaller pieces according to the diameter of feeding chute.
- Feed food gradually for better effect. When cutting soft food, choose lower speed to avoid the food turning soupy. If large quantity of food needs to be cut, please cut it for several batches
- The blades are very sharp, please be careful when assembling, disassembling, cleaning and storing.

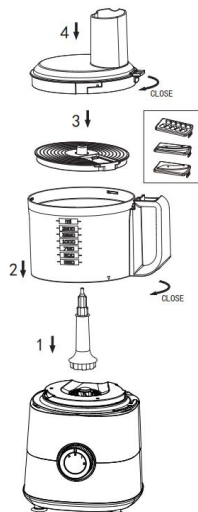


Chopping Blade

1. Place the motor base on the flat and dry surface.
2. Place the driving shaft on the motor base.
3. Place the processor bowl into the driving shaft and turn it clockwise to seat it firmly on the motor base. The handle of the bowl should face to the right side of the switch knob.
4. Place the blade adapter onto the driving shaft.
5. Place the chopping blade onto the blade adapter, and ensure they are attached firmly together.
6. Turn the chopping blade to the right, then put food into the bowl.
7. Place the cover on the bowl, turn it clockwise until the cover interlocks on the bowl.
8. Place a pusher into the feeding chute. For the volume per batch for the chopping blade, please refer to the following table, select the speed according to the hardness of food.

Processed Food	Measurement Per batch	Working time
Chocolate	≤100g	30-60 sec
Cheese	≤200g	30-60 sec
Meat	≤500g	30-60 sec
Tea or Spice	50~100g	30-60 sec
Fruit & Vegetable	100~300g	30-60 sec
Onion	≤500g	30-60 sec

Tips and warning:

- Always keep the chopping blade inside the bowl before feeding food.
- Use the pulse function for several times to avoid cutting too fine. Do not operate it for too long while cutting hard cheese or chocolate, otherwise these materials will overheat and begin to melt.
- The standard chopping period is 30 seconds to 1 minute.

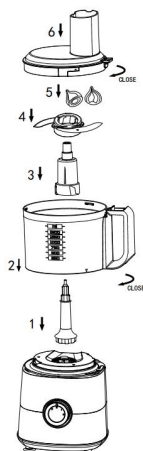

Kneading Blade

1. Place the motor base on a flat dry surface.
2. Place the driving shaft on the motor base.
3. Place the processor bowl into the driving shaft and turn it clockwise to seat it firmly on the motor base. The handle of the bowl should face to the right side of the switch knob.
4. Place the blade adapter onto the driving shaft.

5. Place the kneading blade onto the blade adapter, and make sure they are attached firmly together.
6. Turn the kneading blade to the right position, then put food into the bowl.
7. Place the cover on the bowl, turn it clockwise until the cover interlocks on the bowl.
8. Place a pusher into the feeding chute.

For the volume per batch for the kneading blade, please refer to the following table, recommended kneading at speed 2 and liquid food such as egg stirring and milkshake at speed 1.

Processed Food	Measurement Per batch	Working time
Flour & Soft Cheese	≤300g	10-30 sec
Eggs	≤5pcs	10-30 sec

Tips and warning:

- Always keep the kneading blade inside the bowl before feeding food.
- When kneading dough, the ratio of flour and water is 1:0.6, that is, 100g flour and 60g water.
- The standard time of dough kneading is about 10 to 30 seconds.



Emulsifying Disc

1. Place the driving shaft on the motor base.
2. Place the processing bowl into the driving shaft and turn clockwise to make it fixed firmly onto the motor base.
3. Place the emulsifying disc onto the top of the driving shaft inside the bowl.
4. Turn the emulsifying disc to the right position.
5. Put the foods into the processing bowl, then lock the bowl cover.

Processed Food	Measurement Per batch	Working time
Egg	3~6pcs	30~120sec
Cream	100~250ml	20sec

Tips and warning:

- High speed is recommended.
- Do not use it to knead dough or process other foods that are very viscous.




Citrus Juicer

1. Place the motor base on the flat and dry surface.
2. Place the driving shaft on the motor base.
3. Place the processor bowl into the driving shaft and turn it clockwise to seat it firmly on the motor base. The handle of the bowl should face to the right side of the switch knob.
4. Place the citrus juicer onto the processor bowl and turn 30 degrees clockwise.

Citrus juicer can be used to squeeze orange juice. Cut the orange in half, press it on the juicer head and hold by your hand, the orange juice head rotates for juicing.

Tips and warning:

- Assemble the citrus juicer according to the figure above, and press the orange juice at a speed 1.

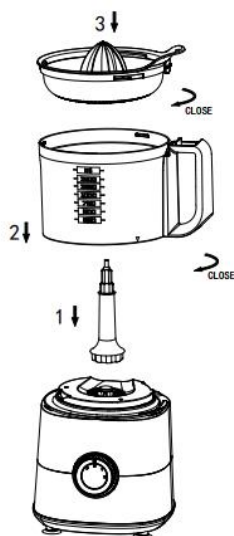


Blender Jar

1. Prepare the ingredients and put them in the blender jar, mount the blender cover well.
2. Position the blender jar on motor base; turn clockwise to make it fixed firmly to activate the safety switch, otherwise the machine will not start.
3. Be aware that the switch should be in the "0" speed. Then plug it in and use pulse 2-3 times as to premix the ingredients. If there is anything abnormal, unplug the machine and re-assemble it as above.
4. Then choose speed "1" or "2" for processing according to the amount and feature of the ingredients.

Tips and Warning:

 - A maximum of 1500ML is for one batch.
- Make sure that the base is installed properly before the operation.
- Measuring cap can be used to add ingredients during the operation.
- Please do not operate the blender function for more than 1 minute. After operating it for 1 minute, please cool it for 3 minutes before the next operation.



Grinder Jar


1. Place the motor base on a dry surface.
2. Turn clockwise and separate the grinder base and jar. (as below P1)
3. Invert the grinder jar to make the edge is facing upwards, put the ingredients into the jar, then turn anticlockwise the grinder base to make it is fixed firmly.

Attention: Do not put too much ingredients that it exceeds half of the jar, and make sure the grinder is fixed firmly, otherwise the ingredient may spillover during blending.

4. Place the grinder assembly onto motor base, turn clockwise to make the safety lock fixed well.
5. Be aware that the switch should be in the "0" speed position, plug it in and use pulse "P" 1-2 times to premix the ingredients. Then choose "1" or "2" speed for grinding. If there is anything abnormal, unplug the machine and re-assemble it as above.

Tips and Warning:

- Do not work continuously for more than 30s, then stop 1 min to let the motor cool down. You can choose the cycle times according to your favor.
- Turn off the appliance and turn anticlockwise to separate the grinder assembly, then invert the grinder to make grinder base upward, turn clockwise to separate the base and jar, and pull out the powder into container.

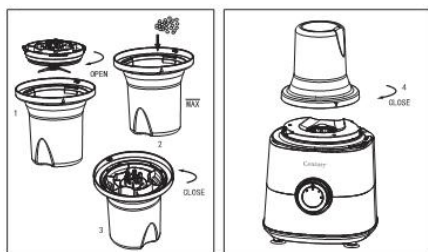

MAINTENANCE

1. Please unplug the power cord to protect from electric shock while cleaning the machine, do not immerse the motor base and power cord into water.
2. All the removable accessories can be cleaned in water except the motor base and dry the wet parts after cleaning. The detachable accessories can be washed in a dishwasher.
3. For easy cleaning, you can put some warm water and detergent in the blender jar and leave it there for a while when cleaning the blender jar.
4. Always place the machine in a dry place with air circulation.
5. Do not use abrasive detergent to avoid any scratch on the product.
6. Do not operate the appliance for more than 1 minute at once.

TROUBLESHOOTING

Problem	Solution
Machine does not work.	● Make sure the assembly is correct. ● Double safety locks are on the lid and base. Make sure the safety locks are activated. ● NEVER try to install the bowl (blender) with the handle on the left. It cannot be installed. Install the bowl with the handle on the right. ● The bowl and cover should be firmly locked to activate the safety locks. For a new appliance, it may be a little difficult to lock the bowl to the end. You may need to use some strength. Make sure that the handle is facing to the right side and is at a 90-degree angle to the front. ● Make sure the power plug is plugged in properly. Check whether the power supply is tripped or cut off.
Machine stops running suddenly.	● The processor bowl may loosen during processing. Please re-install the bowl and cover. ● There is an over-heating system of machine.

	● Long-time operation will reduce the lifespan of the food processor and trigger the overheat protection to shut down the machine. The recommended time for using the appliance with food processor bowl should be within 3 minutes per time. (Using blender should be within 1 minute per time) ● If the overheat protection has already been triggered, please cool the appliance for 30-60 minutes, and plug it again to use it.
The machine shakes violently.	● Please put lesser food, or the machine may lose balance. ● Please chop food into smaller pieces and put it in the bowl evenly. ● Please install the blades as the instruction. The blades must be firmly installed. ● Please put the appliance on a flat place. The suction feet can help to keep the balance of the appliance.
Machine can not blend perfectly.	● Do not add ice sizing bigger than 2cm, and do not add more than 5 pieces of ice. ● Always add water into the blender.
Machine can not chop perfectly.	● Please cut food into smaller pieces if the food is large in size. ● Please install the chopping blade and blade

	adapter firmly before putting food into the bowl.
The motor is running, while other components do not run.	● Make sure the driving shaft is installed correctly.