

Russell Taylors

E-WARRANTY



SCAN HERE

www.russelltaylors.co.uk

HAND BLENDER

USER MANUAL

HB1



IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Read all the instructions.
2. Before using, check that the voltage of your wall outlet corresponds to the one shown on the rating plate.
3. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner.
4. If the supply cord is damaged it must be replaced by the Russell Taylors service team. Please email us at support@russelltaylors.com
5. To protect against risk of electrical shock, do not put in water or other liquid.
6. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning
7. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
8. Do not let cord hang over edge of table or hot surface.
9. Do not blend hot liquids.
10. Do not immerse upper part of blender into water as this would give rise to electric shock.
11. Close supervision is necessary when your appliance is being used

near children or infirm persons.

12. Avoid contacting moving parts.

13. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.

14. The appliance cannot be used for blending hard and dry substance, otherwise the blade could be blunted.

15. To reduce the risk of injury, never place cutting blade on base without first putting bowl properly in place.

16. Be sure chopper lid is securely locked in place before operating appliance.

17. The use of accessory not recommended by the manufacturer may cause injuries to persons.

18. Do not operate the appliance for other than its intended use.

19. Appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

20. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

21. Do not allow children to use the blender without supervision

22. Be sure to switch off the appliance after each use of your blender. Make sure the motor stops completely before disassembling.

23. The metal blade is extremely sharp, Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.

24. Be care of potential injury from misuse.
25. Do not use outdoors.
26. Save these instructions.

USING YOUR BLENDER

Before the first use, clean the blender according to the section of “quick cleaning” on the last page.

The running time of the unit without load can't exceed 15s.

Important: Blades are very sharp, handle with care. Ensure that the hand-held blender is unplugged from the power outlet before assembling or removing attachments.

INSTRUCTIONS FOR BLENDER

1. Max operation duration per time cannot exceed 1 minute, and 3-minute rest time must be maintained at two consecutive cycles.
2. To assemble the detachable shaft with the motor unit, turn the shaft anti-clockwise until tightened. To disassemble, just turn in the opposite direction.
3. Simply plug the hand-held blender to power outlet.
4. Lower the hand-held blender into food. Then press and hold the low-speed button to start operating. At the same time, you can select desired speed setting by turning the speed control dial, the speed will increase gradually when you turn the speed control dial from right to left.
5. You also can start operating by pressing and hold the high-speed button (turbo button), the appliance will operate at the highest speed all the time. The speed will not change even if you turn the speed

control dial.

6. To stop the hand-held blender, release the low speed button or high speed button.

INSTRUCTIONS FOR WHISK

Max operation duration per time cannot exceed 2 minute, and 10 minute rest time must be maintained at two consecutive cycles.

1. To assemble the egg white beater with the motor unit, turn the whisk anti-clockwise direction until tightened. To disassemble, just turn in the opposite direction.

2. Simply plug the hand-held blender to power outlet.

3. Place egg white into the cup, generally, two eggs white is enough.

4. Lower the hand-held blender into food. Then press and hold the low-speed button to start operating. At the same time, you can select desired speed setting by turning the speed control dial, the speed will be higher gradually when you turn the speed control dial from left to right.

5. You also can start operating by pressing and hold the high-speed button (turbo button), the appliance will operate at the highest speed all the time. The speed will not change even if you turn the speed control dial.

6. To stop the hand-held blender by releasing the low-speed button or high-speed button of the motor unit.

CLEANING AND MAINTENANCE

1. Unplug the appliance and remove the detachable blending rod.

NOTE: Do not immerse the detachable blending rod of the blender in water because overtime the lubrication on the bearings may be washed away.

2. Small jar and bowl which cannot be used to store food for a long time.

3. Wash the detachable blending rod under running water, without the use of abrasive cleaner or detergents. After finishing cleaning, the detachable blending rod, place it upright so that any water which may have got in, can drain out.

4. Wipe the motor unit with a damp cloth. Never immerse it in water for cleaning as an electric shock may occur.


5. Dry thoroughly.

CAUTION: Blades are very sharp, handle with care.

QUICK CLEANING

Between processing tasks, hold the hand blender in a cup half filled with water and turn on the appliance to make it run for a few seconds.

ENVIRONMENT FRIENDLY DISPOSAL

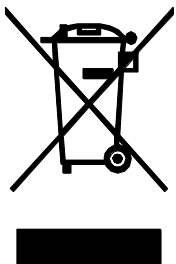

You can help protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipment's to an appropriate waste disposal centre.

WARRANTY CLAIMS

This product is backed by a 2-year warranty against manufacturing defects. For warranty claims, please send an email to support@russelltaylors.com and provide your order number or invoice from purchase.

Russell Taylors

www.russelltaylors.co.uk

