

Russell Taylors

E-WARRANTY



SCAN HERE

www.russelltaylors.co.uk

HAIR DRYER

USER MANUAL



HDI

RT

SAFETY PRECAUTIONS

1. Never use your hairdryer in the bath, under a shower, or over a washbasin full of water.
2. If the appliance should fall into water, pull the power plug out of the power socket immediately. Have your appliance checked by the Russell Taylors service team before using it again.
3. Do not spray aerosols or water into your appliance. Ensure that your appliance does not get wet and do not use it with wet hands. If you put your appliance down whilst drying your hair, always switch it off as a precaution,
4. The air outlet grill will become hot during use.
5. Children do not realize the dangers arising from improper use of electrical appliances. Children should not be allowed to use a hairdryer without supervision.
6. Please read these operating instructions carefully and explain all necessary precautions to your children.
7. The air inlet and outlet openings should never be obstructed.
8. If however, the airflow is obstructed during use, the built-in thermal safety will automatically switch off the appliance. The hairdryer will switch on again automatically after cooling down for a few minutes.

9. Always unplug your appliance after use and before cleaning it.
10. The safety grill fitted in the air inlet opening prevents hair from being drawn in.
11. If the grill becomes clogged, it should be cleaned (e.g. with vacuum cleaner or brush) otherwise the airflow will be obstructed to an extent that the thermal cut-off will be activated.
12. Keep your hair away from the immediate vicinity of the air inlet opening.
13. The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
15. Children should be supervised to ensure that they do not play with the appliance.

INSTRUCTIONS FOR USE

- Your washed hair should be normally dried i.e., by a normal hairdryer, but the hair should remain damp and moisturized.
- When the hair is dry; slightly dampen it with water.
- Before styling, brush or comb your hair to ensure that it is not tangled.
- Prevent your hair from becoming too dry as this may result in frizzy hair which is hard to style.
- Depending on your own ideas, you can curl your hair by turning the brush in the desired direction.

CLEANING & MAINTENANCE

1. After use, pull the power cord out from the main plug and allow the device to cool well.
2. Use a slightly damp cloth to clean the device. Dry all parts of the hair dryer.
3. Clean it regularly of hair and dust.
4. Please keep the hair dryer in a dry place.
5. Keep accessories separately, when not needed.

Russell Taylors