

Russell Taylors

HAIR DRYER

www.russelltaylors.co.uk

E-WARRANTY



SCAN HERE

USER MANUAL



HD2

CAUTION:

1. Never use your hairdryer in the bath, under a shower, or over a washbasin full of water.
2. If, however, the appliance should fall into water, pull the power plug out of the power socket immediately. In that case, never place your hand in the water. Have your appliance checked by a qualified electrician before using it again.
3. Do not spray aerosols or water into your appliance.
4. Ensure that your appliance does not get wet (water splashing, etc.) and do not use it with wet hands. If you put your appliance down whilst drying your hair, always switch it off as a precaution.
5. The air outlet grill will become hot during use.
6. Do not allow the flex to come into contact with the air outlet during use.
7. Children do not realize the dangers arising from improper use of electrical appliances. Children should therefore not be allowed to use a hairdryer without supervision.
8. Please read these operating instructions carefully and explain all necessary precautions to your children.
9. The air inlet and outlet openings should never be obstructed.
10. If, however, the airflow is obstructed during use, the built-in thermal safety cut-off will automatically switch off the appliance. The hairdryer will switch on again automatically after cooling down for a few minutes.

11. Always unplug your appliance after use and before cleaning it.
12. The safety grill fitted in the air inlet opening prevents hair from being drawn in.
13. If the grill becomes clogged, it should be cleaned (e.g., with vacuum cleaner or brush), otherwise the airflow will be obstructed to such an extent that the thermal cut-off will be activated.
14. Keep your hair away from the immediate vicinity of the air inlet opening.
15. Repairs to electrical appliance should only be performed by a qualified electrician.
16. Improper repairs may place the user at serious risk.

INSTRUCTIONS FOR USE

1. Make sure the hair dryer is in the "OFF" position.
2. Insert the power plug into the power outlet.
3. Set the desired heating level and blowing strength:

CLEANING AND STORAGE:

1. Regular cleaning is required to ensure the performance of the hair dryer.
2. Allow the unit to cool before cleaning.
3. Unplug the appliance from the main power outlet.
4. Gently wipe the whole hair dryer with a clean, damp cloth and allow it to dry.

5. Do not use abrasive or chemical based cleaning agents.

6. When not in use, always unplug the hair dryer from the power outlet. Allow the hair dryer to cool and store out of the reach of children in a safe dry place.

7. Never wrap the power cord around the hair dryer since this will cause the cord to wear prematurely and break.

Russell Taylors