

# Russell Taylors

E-WARRANTY



[www.russelltaylors.co.uk](http://www.russelltaylors.co.uk)

HAIR STRAIGHTENER

USER MANUAL



HS1



## **IMPORTANT SAFETY PRECAUTIONS**

- This appliance should never be used in the bath, shower or over a washbasin filled with water, nor should it be operated with wet hands.
- The appliance should never be immersed in water and should not touch water during cleaning.
- The appliance should not be placed on soft cushions or blankets during operation.
- Avoid direct contact between the individual attachments and your scalp.
- If you need to take a break during styling, switch OFF THE APPLIANCE.
- Pull out the main plug after use. Do not pull out the plug by pulling on the cable.
- Do not wind the cable around the appliance when storing.
- The appliance may not be operated if the main cable is damaged or the appliance itself is visibly damaged.
- Children are not aware of the dangers that may arise from using electrical appliances, therefore never allow children to operate electrical equipment unless properly supervised.
- The fault current protective device is another safety feature of the dryer. This has a nominal trigger current of no more than 30 mA in the house wiring. Please contact an electrician if you have any

questions. The device may constitute a danger even when switched off. Always pull out the main plug after use.

- If the appliance's connecting cable becomes damaged, it must be replaced by the manufacturer, an approved customer service center or by a qualified electrician to avoid the hazards that may arise otherwise.

## **OPERATING INSTRUCTIONS**

1. Gently dry your hair with a towel after washing.
2. Comb your hair. Do not use hair spray, hair gel or other flammable substances before using the hair straightener.
3. Put a towel around your neck and shoulders to prevent possible burns.
4. Unfold the power cord completely. Connect the appliance plug to the power socket.
5. Use the lock/unlock button to unlock the straightener.
6. Slide the switch from 0 to 1.
7. Use the temperature dial for setting the temperature. When the indicator flashes - the appliance is heating up.
8. The operating temperature is reached after a few seconds.

## **CLEANING AND MAINTENANCE**

### **WARNING!**

- Before each cleaning of the appliance, unplug the power cord from the electrical outlet!
- Make sure the appliance has cooled before handling it!
- To clean the surface of the appliance, use only a damp cloth, no detergents, or hard objects, as they can damage the surface of the appliance!
- Never clean the appliance under running water, do not rinse it or immerse it in water!

# **Russell Taylors**