

# Russell Taylors

E-WARRANTY



SCAN HERE

[www.russelltaylors.co.uk](http://www.russelltaylors.co.uk)

## USER MANUAL MICROWAVE



**M1**

## **IMPORTANT SAFEGUARDS**

The following basic precautions should always be followed when using electrical appliance:

1. Read the user manual before using the microwave.
2. Make sure the voltage in your living area is corresponding to the one shown on the rating label of the appliance, and the wall socket is properly grounded.
3. To reduce the risk of fire in the oven cavity:
  - a) Do not overcook the food.
  - b) Remove wire twist ties from paper or plastic bags before placing bags in the microwave.
  - c) Do not heat oil or fat for deep drying as the temperature of oil cannot be controlled and it may be a fire hazard.
4. After using the microwave, wipe the wave-guide cover with a damp cloth, followed by a dry cloth to remove any food splashes and grease. Built-up grease in the microwave may overheat and begin to cause smoke or catch fire.
5. If materials inside the oven should smoke or ignite, keep microwave door closed, turn the microwave off and disconnect the power supply.
6. When heating food in plastic or paper containers,

keep an eye on the oven due to the possibility of igniting a fire.

7. To reduce the risk of explosion and sudden boiling:
  - a) **WARNING:** Liquids and other foods must not be heated in sealed container since they are liable to explode. Baby bottles fitted with a screw cap or teat are considered to be sealed containers.
  - b) Use a wide -mouthed container to heat liquid, and the hot liquid should not be removed out immediately. You should wait for a minute before removing to avoid the risk of burns.
8. Potatoes, sausage and chestnut should be peeled or pierced before cooking. Whole hard-boiled eggs should not be heated in a microwave since they may explode, even after microwave heating has ended.
9. The contents of feeding bottles and baby food jars are to be stirred or shaken and the temperature is to be checked before consumption, in order to avoid burns.
10. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a qualified technician in order to avoid a shock hazard.
11. After heating, the food container will be hot. Using gloves to take out the food and avoid steam burns by directing steam away from the face and hands.

12. Slowly lift the furthest edge of the dish cover and microwave plastic wrap and carefully open away from the face.
13. To prevent the turntable from breaking:
  - a) Let the turntable cool down before cleaning.
  - b) Do not place hot foods or utensils on the cold turntable.
  - c) Do not place frozen foods or utensils on the hot turntable.
14. Make sure the utensils do not touch the interior walls during cooking.
15. Only use utensils that are suitable for use in microwave ovens.
16. Do not store food or any other things inside the oven.
17. Do not operate the microwave without any liquid or food inside the oven. This will do damage the microwave.
18. When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.
19. Any accessories not provided by the manufacturer may cause injuries to the user.
20. Do not use outdoors.

21. Save these instructions for future use and reference.
22. **WARNING:** If the door or door seals are damaged or the microwave has malfunctioned, the microwave must not be operated until it has been repaired by a trained person;
23. **WARNING:** It is hazardous for anyone other than a trained person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy;
24. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to eliminate any flames.
25. Microwave heating of beverages can result in delayed eruptive boiling; therefore care must be taken when handling the container;
26. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
27. The appliance is not intended to be operated by means of an external timer or separate remote control system.
28. This appliance is intended to be used in households only and is not to be used for commercial purposes.

29. The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
30. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.
31. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
32. Children should be supervised to ensure that they do not play with the appliance.
33. A steam cleaner is not to be used on the microwave.

34. The door or the outer surface may get hot when the appliance is operating.
35. **WARNING:** Accessible parts may become hot during use. Young children should be kept away from the microwave.
36. During use the appliance becomes hot. Care should be taken to avoid touching the heating elements inside the oven.
37. The surfaces are liable to get hot during use.



: CAUTION: HOT SURFACE

## INSTALATION

1. Remove all of the packaging and plastics. If there is a safety film over the oven, tear it off before use. Check carefully for any damages that may have accrued during delivery. If any, immediately notify the dealer or send to the manufacturer's service center.
2. Microwave ovens must be placed in a dry and non-corrosive environments and kept away from heat and humidity, such as a gas burner or a water tank.
3. To ensure sufficient ventilation, the distance of the back of microwave to the wall should be at least 10

cm, the side to the wall should be at least 5 cm, the free distance above the top surface at least 20 cm. the distance of the microwave to the ground should be at least 85 cm.

4. The position of the oven shall be such that it is far from the TV, Radio or antenna. The distance should be more than 5m.
5. The appliance must be positioned so that the plug is accessible.
6. The microwave oven must be operated with the door closed. It will not run while the door is open.
7. The microwave oven must not be placed in a cabinet. The microwave oven is intended to be used in the open.
8. As there is manufacturing residue or oil remained on the oven cavity or heat element, it will have an odor, or even a bit of smoke. It is a normal case and would not occur after several times use. Keep the door or window open to ensure good ventilation. It is strongly recommended to place a cup of water in the turntable, setting at high power and operate for several times for the first use.



## **CLEANING**

### **MICROWAVE OVEN CARE**

#### **CAUTION**

The oven should be cleaned regularly and any food deposits removed.

#### **WARNING**

1. Remove the power cord from the wall outlet before cleaning. Don't immerse the appliance in water or other fluids when cleaning.
2. Failure to keep the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
3. Never use hard detergent, gasoline, abrasive powder or metal brush to clean any part of the appliance
4. Do not remove the wave-guide cover. Any damage caused to the microwave due to the removal of the wave-guide cover will not be covered under the products warranty.
5. When the microwave oven has been used for a long time, there may be some odors in the microwaove. The following method can get rid of them:
6. Place several lemon slices in a cup, then heat up on high power for 2-3 mins.

7. **WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

## **TIPS FOR CLEANING**

Details for cleaning door seals, cavity and adjacent parts:

### **Exterior:**

Wipe the enclosure with a dampened soft cloth.

### **Door:**

Using a dampened soft cloth, wipe clean the door and window.

Wipe the door seals and adjacent parts to remove any spill or spatter.

Wipe the control panel with a slightly dampened soft cloth.

### **Interior walls:**

Wipe clean the cavity with a damp soft cloth.


Wipe clean the wave-guide cover to remove any food splashed.

### **Turntable/ Rotation ring/ Rotation axis:**

Wash with mild soap water.

Rinse with clean water and allow drying thoroughly

## PRODUCT INSTRUCTION

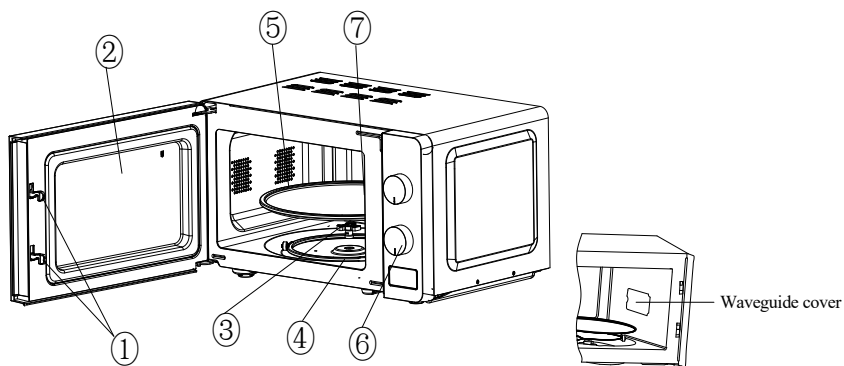

### 1) **Door lock**

Microwave oven door must be properly closed in order for it to operate.

### 2) **Viewing window**

Allow user to see the cooking status.

### 3) **Rotating axis**

The glass turntable sits on the axis; the motor underneath it drives the turntable to rotate.

### 4) **Rotating ring**

The glass turntable sits on its wheels; it supports the turntable and helps it to balance when rotating.

### 5) **Turntable**

The food sits on the turntable, its rotation during operation helps to cook food evenly.

## **CAUTION**

- Place the rotating ring first.
- Fit the turntable onto the rotating axis and make sure that it is geared in properly.

### 6) **Control panel**

See on the next page for details (the control panel is subject to change without prior notice)


### 7) **Waveguide cover**

It is inside the microwave oven, next to the wall of control panel.

## **WARNING**

Never remove the wave-guide cover. Damage due to removal of the wave-guided cover will not be covered under the product warranty.

## CONTROL PANEL

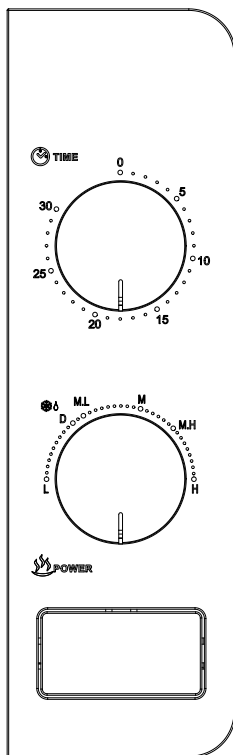

### 1) **Timer**

- The max cooking time that can be set is 30 minutes.
- Each dot symbolizes 1 minute.
- A bell ring will be heard when the timer times out and returns to the zero position.

## 2) **Function/Power knob**

There are 6 power levels:

HIGH	100% power output	(Quick cooking)
M.High	85% power output	(Normal cooking)
Med	66% power output	(Slow cooking)
M.Low	40% power output	(Drinks or soup)
Defrost	37% power output	(Defrost)
LOW	17% power output	(Keep warm)

The following table provides a reference for defrost time for various foods:

	WEIGHT RANGE	DEFROST LENGTH
Meat	0.1~1.0kg	1:30~26:00
Poultry	0.2~1.0kg	2:30~22:00
Seafood	0.1~0.9kg	1:30~14:00

## OPERATION

- 1) Connect the cord
  - Before connecting the cord, make sure the timer is set to the "0" position
  - Do not block the ventilation
- 2) Place the food on the glass turntable and close the door. Food must be contained in a container.
- 3) Select the desired power level
- 4) Set the timer. If desired time is less than 10 minutes, turn the timer knob to over 10 minutes position and then turn back to the desired time setting.
- 5) Once the desired time is set, the microwave will begin to operate. If pausing in between is needed, just open the door at any time, and close it to resume operation.
- 6) When the timer is complete and cooking ends, the microwave oven produces a bell ring and the inside lamp will also be automatically turned off. If food is removed before the timer is done, make sure to set back the timer to the "0" position, this stops the microwave oven from operating with an empty load.

## UTENSILS GUIDELINE

It is highly recommended to use the containers which are suitable and safe for microwave cooking for your own well-being. Generally speaking, the containers which are made of heat-resistant ceramic, glass or plastic are suitable for microwave cooking. Never use the metal containers in a microwave as sparks are likely to occur. You can take the reference of below table.

Material of container	Microwave	Notes
Heat-resistant ceramic	Yes	Never use the ceramics which are decorated with metal rim or glazed
Heat-resistant plastic	Yes	Can not be used for long time microwave cooking
Heat-resistant glass	Yes	
Plastic film	Yes	It should not be used when cooking meat or chops as the high temperature may do damage to the film
Grill rack	No	
Metal container	No	It should not be used in microwave oven. Microwave can not penetrate through metal.



Lacquer	No	Poor heat-resistant. Can not be used for High-temperature cooking
Bamboo wood and paper	No	Poor heat-resistant. Can not be used for High-temperature cooking

## COOKING TIPS

The following factors may affect the cooking result:

### **Food arrangement**

Place thicker food towards the outside of the dish. The thinner part should be placed towards the centre and spread evenly. Do not overlap if possible.

### **Cooking time length**

Start cooking with a short time setting, evaluate it after the timer is over and extend it accordingly if required. Over cooking may result in smoke and burns.

### **Allow standing time**

After the microwave is done heating your food, leave the food in the oven for an adequate length of time, this allows it to complete its cooking cycle and cool down in a gradual manner.

### **Whether the food is done**

Color and hardness of the food help to determine if it is done, these include:

- Steam coming out from all parts of food, not just the edge.

- Joints of poultry can be moved easily.
- Pork or poultry shows no signs of blood.
- Fish is opaque and can be sliced easily with a fork.

### **Browning dish**

When using a browning dish or self-heating container, always place a heat-resistant insulator such as a porcelain plate under it to prevent damage to the turntable and rotating ring.

### **Microwave safe plastic wrap**

When cooking food with high fat content, do not allow the plastic wrap to come into contact with food as it may melt.

### **Microwave safe plastic cookware**

Some microwave safe plastic cookware might not be suitable for cooking foods with high fat and sugar content. Also, the preheating time specified in the dish instruction manual must not be exceeded.

## Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.