

Russell Taylors

E-WARRANTY



SCAN HERE

**USER MANUAL
FOOD STEAMER**

www.russelltaylors.co.uk



MC30

SAFETY INSTRUCTIONS

1. Please keep the plug clean to avoid fires or sparks.
2. Do not damage, forcefully pull or twist the power cord, use it to carry heavy loads, let cord hang over edge of table of the table counter, or touch hot surfaces to avoid electric shock, fire, and other accidents. Damaged power cord must be replaced by the Russell Taylors Service Team.
3. Please do not plug and unplug the appliance with wet hands, otherwise it may cause an electric shock.
4. Plug securely while using, otherwise, it may cause electric shock, short circuit, smoke, sparks and other dangers.
5. Do not immerse the appliance, body, cord or plug in water or other liquid, to protect against electrical shock and affecting its function.
6. Do not place the appliance in the presence of explosives and /or flammable fumes.
7. Do not place the appliance on or near the flammable material, such as tablecloths, curtains, and others, to avoid a fire hazard.
8. Be sure to use on a heat resistant and even surface. Keep the appliance at least 30cm away from the wall, furniture, or other flammable materials.
9. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
10. Do not use the appliance for other than its intended use.
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
12. Keep the appliance away from children to avoid scalding, electric shock and/or other injuries. Close supervision is necessary when the appliance is used by or near children.
13. This appliance is intended for Household Use Only.

OPERATING INSTRUCTIONS

1. Add a proper amount of water. Do not exceed the marked full water level. Insert the power cable into the socket and the food steamer will turn on.
2. To start the food steamer, press the "Start/Cancel" button on the touch panel. By default, the food steamer will run for 20 minutes and has a maximum timer of 1 hour and 30 minutes. When the display is "---" the steaming is completed.
3. Press the "+" or "-" key to adjust the time between 20 minutes and 1 hour and 30 minutes.
4. To cancel the steaming, press the "Start/Cancel" button again to return the steamer back to its standby state.
5. To use the delay timer, press the "Keep Warm/Delay Timer" button to set a delay start to the food steamer. The default delay timer is 30 minutes, which means the steamer will turn on after 30 minutes has passed. Press the "+" or "-" key to adjust the delay timer. After this is done, the screen will flash for 5 seconds and start the timer. The timer can be set between 30 minutes or 24 hours.
6. To use the keep warm function, press the "Keep Warm/Delay Timer" button and the screen will display "b0:00". The maximum time the keep warm function will work for is 2 hours.

CLEANING & MAINTENANCE

1. After each use, remove the power plug from the power socket.
2. Each component used can be cleaned with a detergent and sponge. However, do not use any abrasive material to clean.
3. To remove scale from the surface of the heating plate, pour 20ml of white vinegar on the heating plate and let it soak for 20 minutes and then rinse it off with water