

Russell Taylors

E-WARRANTY



SCAN HERE

www.russelltaylors.co.uk

USER MANUAL

RETRO KETTLE RK3



Safety Instructions

- Please read these instructions carefully and retain them for future reference.
- Use this appliance only in accordance with these instructions.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Any repairs should only be carried out by a qualified technician. Never attempt to repair the appliance yourself.
- Before use, ensure that the mains voltage matches the voltage indicated on the appliance rating plate.
- Always use an earthed wall socket when connecting the appliance.
- Always remove the plug from the wall socket before moving the appliance and when it is not in use.
- Remove the plug from the wall socket by pulling the plug, not the power cord.
- Regularly check the power cord to ensure it is not damaged. Do not use the appliance if the power cord is damaged. Have it replaced by a qualified repair service.
- Certain parts of the appliance may become hot. Do not touch these parts to avoid burns.

- The appliance requires sufficient space around it for heat to escape and to reduce the risk of fire. Keep the appliance away from flammable materials and never cover it.
- Keep the appliance, power cord, and plug away from hot surfaces, such as stovetops, and naked flames.
- Keep the appliance, power cord, and plug away from water and other liquids.
- Never use the appliance outdoors.
- Place the appliance on a flat and stable surface.
- Always remove the plug from the wall socket after use and before cleaning the appliance.
- Never allow the power cord to hang over the edge of a countertop or table.
- Ensure your hands are dry before touching the appliance, power cord, or plug.
- Never use the appliance in a humid environment.
- Never immerse the appliance, plug, or power cord in water or any other liquid.
- Do not touch the appliance if it falls into water. Remove the plug from the wall socket immediately and discontinue use.
- Use only the base supplied with the kettle. Never use the base for any other purpose.
- Remove the kettle from the base before filling it with water. Never fill the kettle above the "MAX" level.
- Do not switch on the appliance before filling it with water. Fill only with cold water.
- The kettle lid must remain securely closed while the appliance is in use.

- Never open the lid while the water is boiling.
- Use the appliance only for boiling or heating water. Never use it for other liquids.
- Fill the kettle with at least 0.75 liters of water.
- Allow the appliance to cool to room temperature before storing it.
- This appliance must not be operated using an external timer or remote control system.

PRODUCT DESCRIPTION

This appliance is intended for household use only. It is not designed for commercial use.

Features

1. Spout
2. Lid Release Button
3. Top Lid
4. Handle
5. Water-Level Indicator
6. On/Off Switch with Pilot Light
7. Base
8. Body



Before First Use

Clean the kettle by filling it with water and bringing it to a boil. Repeat this process three times, discarding the water after each use.

Tip: For the first boil, you may use vinegar or a special descaling agent.

How to Use

1. Ensure the spout is facing away from you.
2. Press the lid release button (2) to open the lid (3).
3. Fill the kettle with the desired amount of water (minimum 0.75 liters and maximum 1.7 liters). Never fill above the "MAX" level, as hot water may spill out.

ATTENTION

Do not spill water onto the base.

4. Close the lid securely.
5. Place the kettle onto the base and insert the plug into the wall socket. Push down the On/Off switch. The pilot light will illuminate.
6. The kettle is now switched on, and the water will begin heating. Once the water reaches boiling point, the kettle will switch off automatically after a few seconds. The pilot light will turn off.
7. Remove the kettle from the base using the handle and carefully pour out the water.

ATTENTION

To prevent scalding, avoid contact with hot water.

8. If you wish to heat water without boiling it, you may switch the kettle off at any time.

9. Remove the plug from the wall socket after use.

Overheating Safeguard

The kettle is equipped with an overheating safeguard. This feature automatically switches off the kettle if it is operated without sufficient water. Before using the kettle again, allow it to cool for at least 10 minutes.

Cleaning and Maintenance

- Remove the plug from the wall socket and allow the appliance to cool completely.
- Clean the kettle with a damp cloth. Never immerse the appliance in water or place it in a dishwasher. Ensure that the electrical connections remain dry.
- If the interior of the kettle becomes severely discolored, clean it using a damp cloth with a small amount of washing soda. Rinse the kettle thoroughly after cleaning.

ATTENTION

- Never use corrosive or abrasive cleaning agents, or sharp objects such as knives or hard brushes, to clean the appliance.
- Always unplug the appliance and allow it to cool before cleaning.

Descaling

This appliance is fitted with an integral heating element, which minimizes limescale buildup. Under normal conditions, descaling is not required.

If you wish to descale the appliance, follow these steps:

1. Unplug the appliance and allow it to cool completely.

2. Fill the kettle with a vinegar solution up to the “MAX” level and bring it to a boil.
3. Leave the vinegar solution inside the kettle for a few hours.
4. Empty the kettle, refill it with clean water up to the “MAX” level, and bring it to a boil. Empty the kettle and repeat this process twice.

Never use ammonia or other harmful chemicals to descale the appliance, as they may be hazardous to health. Use only a vinegar solution or a suitable descaling agent.

Russell Taylors