

Russell Taylors

E-WARRANTY



SCAN HERE



USER MANUAL

www.russelltaylors.co.uk

SPOT CLEANER SC8




Product Description

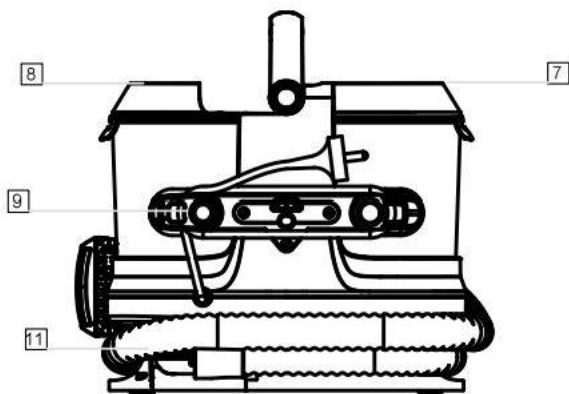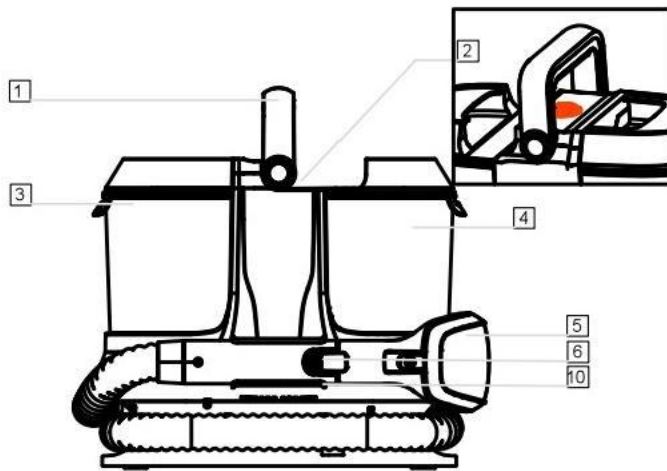

1. Carry handle
2. On/Off button
3. Clean water tank
4. Dirty water tank
5. Wash tool
6. Wash tool release button
7. Clean water tank cover
8. Dirty water tank cover
9. Quick cord release hooks
10. Hose storage clip
11. Hose
12. Extra wide 2-in-1 tool
13. Crevice tool

Quick Start


1. Slide the wash tool onto the hose end until it clicks into place.

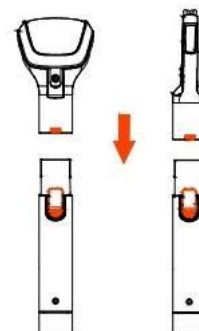

2. Fill the clean water tank with water (max temperature of the water is 40°C)



3. Press the On/Off button to switch the machine on.

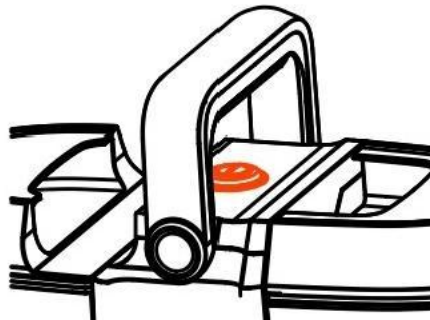


Safety Warning & Precautions

To reduce the risk of fire, electric shock, or injury, follow the instructions below:

- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of this appliance by a person responsible to their safety.
- Do not burn the device.
- Do not immerse the device in water or liquid.
- Keep the machine out of reach of children.
- Ensure that children are kept away from the unit while it is powered on.
- Do not expose the device to flame or excessively high temperature, and ensure that the cable is far away from any hot surface to

- avoid deformation and damage.
- Connect to a properly grounded power outlet.
- Do not leave the device unattended while the power is turned on.
- Do not modify plugs or use damaged power cables or plugs. If the power cord is damaged, it must be replaced by professional maintenance personnel.
- Unplug the electrical outlet when not in use and before cleaning, maintaining or servicing the device.
- Hold the plug of the power cord and pull it out, not the power cord itself.
- Do not hold the plug of the power cable with wet hands.
- Do not pull or lift the device using the cable.
- Do not use damaged or modified devices.
- Do not clean sharp large debris (glass), hazardous products (solvents, detergents), aggressive products (acids, detergents), combustibles and explosives (gasoline or alcohol), burning or smoking objects (cigarettes, matches, or hot ash) using this device.
- Be sure to use the parts provided by the manufacturer.
- Do not let the steam spray directly on people and animals.
- Do not use this device on leather, waxed furniture or flooring, synthetic fibers, velvet or other perishable and other steam sensitive materials.
- Liquid or steam should not be directed towards a device containing electrical components, such as the inside of an oven.
- Turn off all controllers before unplugging.
- Plastic film can be dangerous, it should be kept away from children to avoid choking.
- If the device has been dropped on the ground, damaged, placed outdoors, or dropped in water and does not work properly, do not attempt to operate it, but take it to an authorized service center for repair.
- Please be sure to use the device in accordance with the instructions in this user manual

Assembly

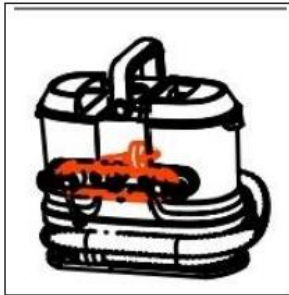

Wrap the cord around the quick cord release hooks.




The handle can be rotated, used on the top and stored on the bottom




Lift the clean water tank handle and pull to remove the tank.



Open the clamshell on the top of the tank. Slide the buttons out first, and then remove the lid

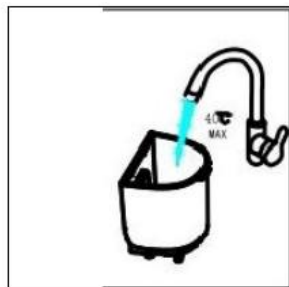

Fill the tank with water to the desired clean level, indicated by the lines on the tank.

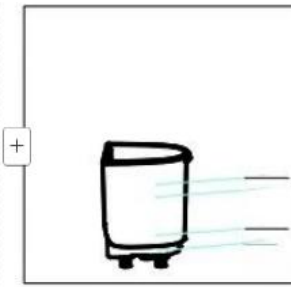


Place back the clamshell to the top of the clean water tank.




Put the clean water tank back into the spot cleaner, ensuring it clicks into place.

Using The Tools

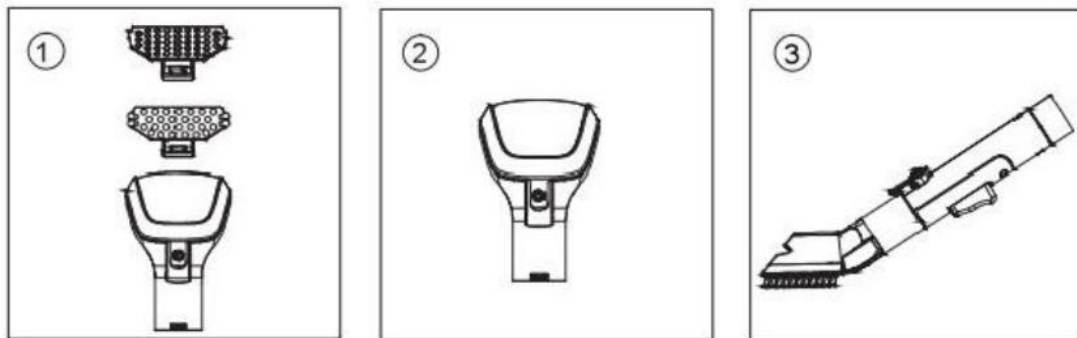


Select a tool :


1. Extra wide 2in1 wash tool for cleaning carpets, rugs, sofa and upholstery.
2. Mess clean up tool.
3. Crevice tool for edges and tight spot cleaning.

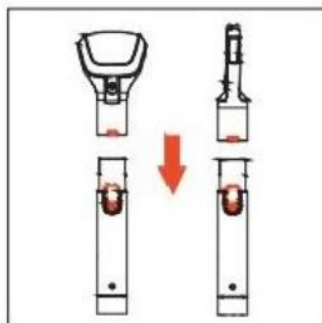

Press the tool lock button and slide the tool onto the end of the hose, over the nib. Release the button when in place.

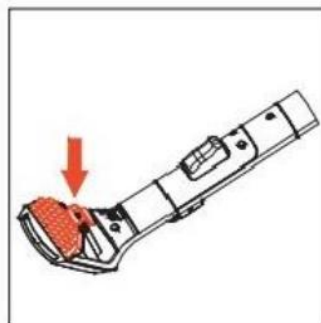


To fit an attachment to the wash tool, fit the front of the selected attachment into the front of the wash tool and push the clip down to lock into place.

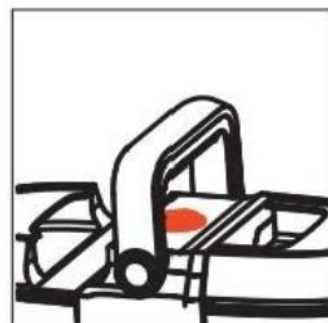


Press the on/off button to switch the machine on.


Using the Extra wide 2-in-1 wash tool /Mess clean up tool

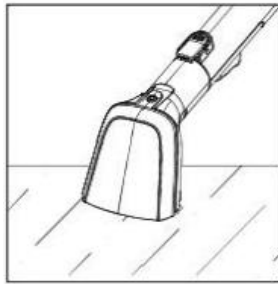


For spills, always pick up the excess liquid before using water solution. Tilt the tool forward onto the spill and pull back.

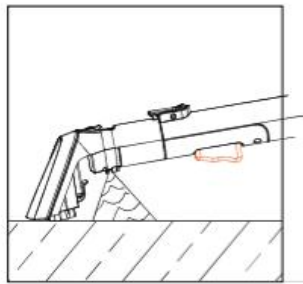


Press the trigger on the wash tool to release water.

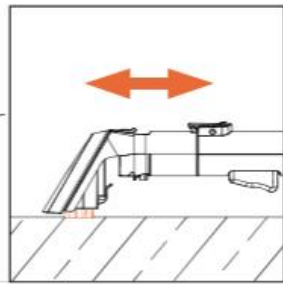


Use the brush to agitate any stubborn stains, scrubbing back and forth.

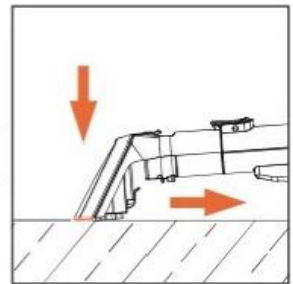


Tilt the nozzle forward so the nozzle is in contact with the surface. Pull back to recover the water.

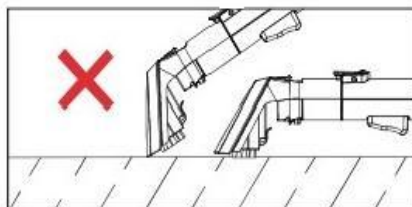


Using the Crevice Tool

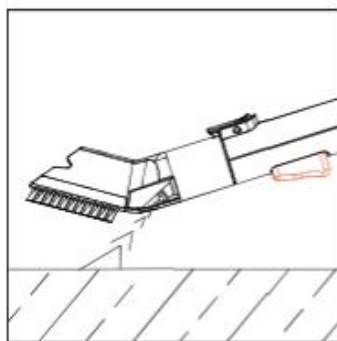

Press the trigger on the crevice tool to release water.

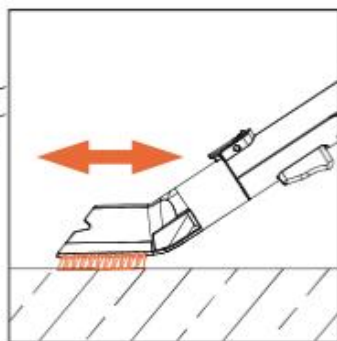

Use the brush to agitate any stubborn stains, scrubbing back and forth

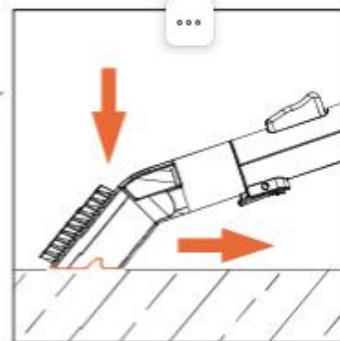

Turn the tool over and tilt the nozzle forwards so the nozzle is in contact with the surface. Pull back to recover the water.


Cleaning & Maintenance

The dirty water tank is fitted with a float. When the dirty water tank is full, the float will shut off the suction on the machine. You will be able to hear if this has happened as the motor noise on the machine will increase. Once the float is activated, empty the dirty water tank if full.

How To Empty The Dirty Water Tank



How To Clean The Filter Grill

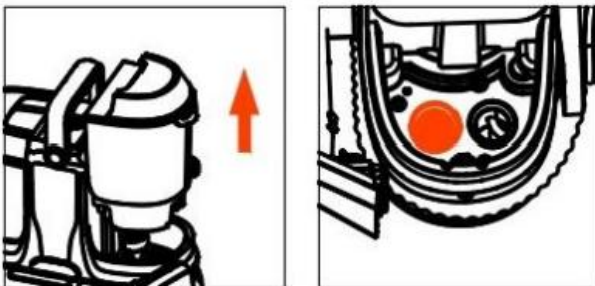

Press the dirty water tank release button, then pull and lift up to remove the tank.

Remove any dirt and debris from the filter grill under the dirty water tank.