

Russell Taylors

E-WARRANTY



SCAN HERE

USER MANUAL

www.russelltaylors.co.uk


STEAM IRON


SI2 Pro



Please read the instructions carefully and keep them before use

1. This product is only for indoor use and commercial use is prohibited.
2. When the product is connected to the power supply, please make sure the circuit voltage is consistent with the rated voltage of the product and confirm that the circuit is well grounded
3. Electric irons must use filtered water.
4. When adding water to the electric iron water tank, the water level shall not exceed the maximum water level.
5. When water is added to an electric iron, the cord plug must be removed from the socket.
6. The product must be used and placed on a stable surface.
7. Electric irons with damaged power cords shall not be used, and electric irons with leakage in water tanks shall not be used again.
8. The electric iron must be taken care of during the operation and the user must not leave it unattended midway.
9. Persons or children with disabilities must be under the guardianship of their guardians. Children are classified as aged 8 years and older and under 14 years of age.
10. Do not let the power cord touch the hot surface of the electric iron, wait for the electric iron to cool completely before collecting the electric iron. When keeping the electric iron, gently coil the power cord on the iron.
11. The iron should not be placed in reach of children and children should not be allowed to play it as toys.

12. Do not repair or replace the power cord by yourself. If the power cord is damaged, it shall be sent to the dealer's post-sale service center or a person with professional qualification for repair or replacement.
13. The first use will have a small amount of smoke, which is a normal phenomenon and will not occur again.
14. After removing the packaging, make sure that the appliance is not damaged. If in doubt, do not use the appliance and consult an expert.
15. When the iron releases steam, do not aim the steam at people or animals to avoid burns.
16. When using electric irons, you should not touch the hot surface with your hand. The hot surface includes the soleplate and the "" surface
17. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of this appliance by a person responsible to their safety.

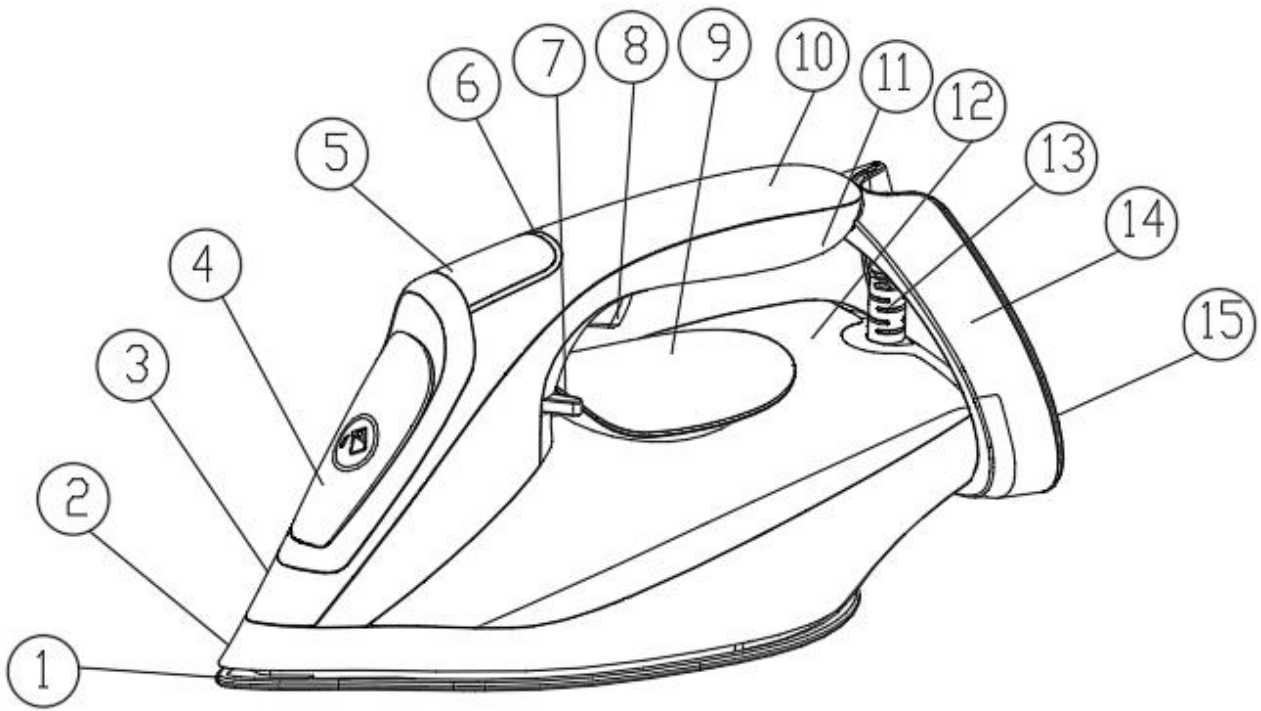

1	Soleplate	9	Water Tank Cover
2	Skirt	10	Top Cover
3	Front Cover	11	Handle
4	Water Inlet Cover	12	Water Tank
5	Top Cover Plate	13	Cord Brushing
6	Lamp Cover	14	Rear Cover Plate
7	Steam Lever	15	Rear Cover
8	Burst Button		

Temperature Setting

This iron does not have an adjustable temperature. The temperature is set automatically based on the material being ironed.

Filling up Water

The iron must be switched off when filling the tank with water. The iron should use pure water, do not put tap water or other liquids into the electric iron. The water in the electric iron water tank shall not exceed the maximum water level.

Dry Iron

Connect the appliance to a plug point and the iron begins to heat up. The lamp light will turn blue indicating that the iron is heating up. When the light turns red , it means that the iron has finished heating and is ready to iron. Do not turn on the steam knob during dry ironing

Steam Ironing

Fill the tank of the iron with water. After the heating is completed, open the steam knob, and steam will be released from the bottom hole later. Turn the steam knob to the closed position to stop releasing steam.

Low temperature protection

In order to prevent consumers from releasing steam at a lower temperature and causing water flow to flow out directly from the holes in the bottom plate, the product is designed with a low temperature protection function. Therefore, steam will not be released until the ideal temperature has been reached.

Automatic power off

When the iron is powered on and the iron is placed flat or left or right on the table. The product will be powered off 30 seconds later. When the iron is powered on, the product

is placed vertically on the table with its tail, and the power will be cut off after 8 minutes±30 seconds

Cleaning and collection

Do not start cleaning the iron until it has cooled completely. Clean the bottom and surface of the electric iron with a wet cotton cloth. Do not use a rough sponge or abrasive material to clean the electric iron to avoid scratching the soleplate. When electric iron is being stored away, you must wait for the bottom plate to cool completely before proceeding.