

# Russell Taylors

[www.russelltaylors.co.uk](http://www.russelltaylors.co.uk)

E-WARRANTY



SCAN HERE

## Slow Juicer

### USER MANUAL



**SJ-6**

This product is covered by a 1-year warranty against manufacturing defects. For all warranty claims, please email [support@russelltaylors.com](mailto:support@russelltaylors.com) and include a copy of your invoice or order ID number as proof of purchase. You are entitled to one (1) warranty claim during the warranty period.

## IMPORTANT SAFEGUARDS

### FOR HOUSEHOLD USE ONLY

When use electrical appliances, basic safety precaution should always be followed including below:

1. read all instruction carefully before using
2. to protect against risk of electrical shock, do not put main body(motor) in water or any liquid
3. children should be supervised to ensure they do not play with the appliance
4. do not operate any appliance with damaged cord or plug or after the appliance malfunctions, or it is dropped or damaged in any manner. return the appliance to nearest authorized service agent for examination, repair or electrical or mechanical adjustment.
5. if the supply cord is damaged, it must be replaced by manufacturer or its service agent or similar qualified person to avoid hazard
6. always unplug when it is not in use or before assembling or taking off parts or cleaning.
7. forbid to touch moving parts
8. do not use any attachments which is not supplied by manufacturer, otherwise it may lead to fire, electrical shock or other injury
9. always ensure to switch off appliance and motor has been stopped completely before disassembling
10. do not put your fingers or any foreign into the juicer when it is working. If food is stuck in the inlet ,use pusher to push it down or use reverse switch to unstick .if this manner can not solve the problem, then to stop juicer immediately and after ensure the motor is stopped completely to disassemble appliance to move food.

11. do not use appliance outdoor
12. do not use appliance for other intended purpose
13. do not put any parts into dishwasher for cleaning
14. do not use the appliance more than 10min constantly to avoid motor is damaged. Use it again until appliance is cool (around 20min)
15. do not use appliance to extract hard material, like large seeds, ice, frozen fruit and so on.
16. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
17. Switch off the appliance and unplug from socket before changing accessories or approaching parts that move in using.

# INSTALLATION AND OPERATION

1-hopper

2-auger head

3-Filler

4-bowl

 
5-pusher

6-clean brush

7-pulp cup

8-juice cup


9-base

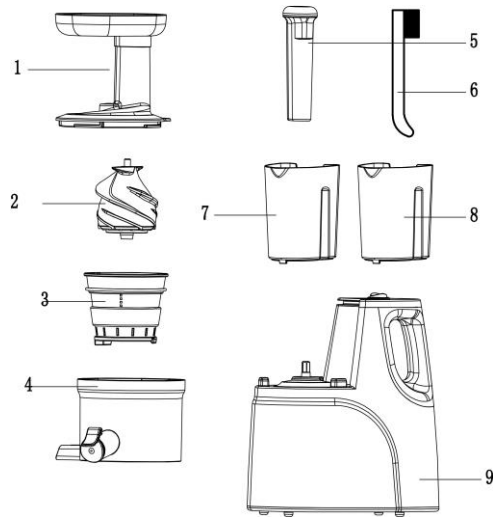

**Friendly hint: do not operate appliance with empty bowl, otherwise it will speed up abrasion of parts**


## HOW TO ASSEMBLE

 **Importance: prior to assemble the juicer, please check this point: at the base of bowl, there is a rubber stopper, correctly fix the stopper to ensure all of the juice only exits via the juicer outlet, before extracting always ensure the rubber stopper is firmly in place. See below fig.**

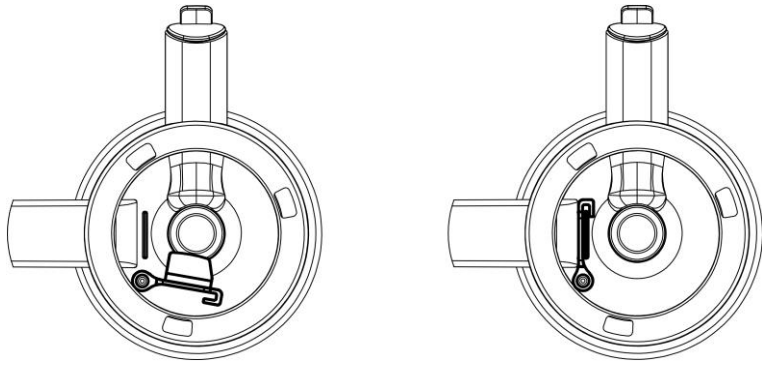


1. assemble bowl onto the base. Put bowl on the base and clockwise rotate to lock the bowl.

 
Make sure the bowl is always locked on the base tightly. See below fig.

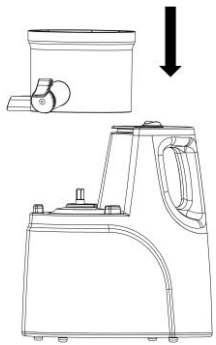

 2. insert the auger head and Filler into the bowl, make sure the auger head's axes must be tightly fixed on the base's axes. See below fig.

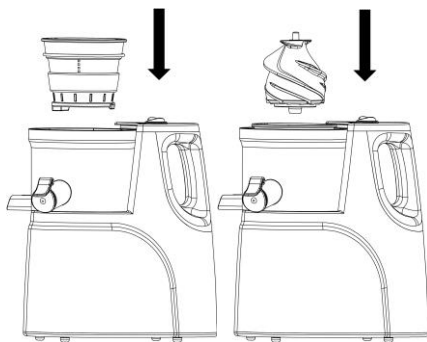

 3. assemble hopper onto the bowl: Align the bowl and hopper, cover the hopper, and then rotate the hopper clockwise. see below fig.

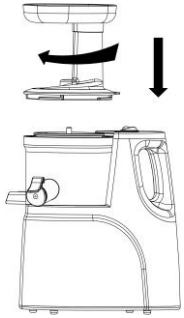

## OPERATION INSTRUCTIONS

### Important:

—do not switch on appliance prior to inputting materials

—do not operate appliance more than 10min at one times

1. plug in appliance

2. place cups under outlet of juice and outlet of pulp

3. know of switch: ON/ OFF /REV ---see switch button on product

ON-starts the motor and juicing process

OFF-switch off appliance

REV-reverse rotation, only use the function when something is stuck in the bowl and need to be unclogged

4. put materials into the hopper to extract juice

- ensure pieces are not large to enter into hopper
- remove hard seeds or pips or other hard part of material

- do not overstuff the hopper or force material in. put material slowly one by one. the pusher only be used if materials are stuck

5. switch on juicer to extract juice, at the same time put materials into hopper one by one as step4.

6. if materials are stuck or clogged, stop juicer and then shift switch to REV to unclog materials. If such action is not working, stop juicer and disassemble hopper to clean material, then assemble hopper again to go on work.( **very important: before disassemble hopper ,must unplug from power socket**)

7. when finished or leave juicer for a while, switch off the juicer and unplug from power socket.

## CLEANING AND MAINTENANCE

1. Switch off juicer and unplug from power socket before cleaning
2. As per step of assembling to be reverse method to disassemble all parts of juicer one by one
3. Use brush to clean all parts under water tap
4. Use damp cloth to wipe base, make sure do not let any liquid go into the base

## TECHINICAL DATA

Input voltage: AC220-240V

Frequency :50/60Hz

Power:150watts

Speed: DC motor 85RPM

Max operation time: less than 20min

Problem	Possible cause	What to do
No power to work	Juicer is not plugged in correctly	Check the juicer to plug in tightly
	Incorrect to assemble hopper	.re-assemble hopper correctly
Motor is stopped during working	<ul style="list-style-type: none"> <li>• Bowl is overfilling with material</li> <li>• hard material inside or much fiber inside that cause juicer be stuck</li> </ul>	Press reverse button to unclog material. if not working, then disassemble hopper to clean material and then assemble hopper again to try .if juicer still is not working ,stop juicer to call service agent
Leakage from beneath the bowl	Rubber plug on base of bowl is not inserted correctly.	Disassemble all parts to check rubber plug and re-plug in correctly
Stain on the bowl, filter, spinning brush	Natural color from juicing material	This is perfectly normal
Damage filter	Frozen material, seeds, pips, and other hard material in bowl	Ensure you have read the manual carefully and operate correctly



Squeaking noise during working	Juicing noise from squeezing screw	This is perfectly normal. Ensure you did not overstuff material
	Some hard material in the bowl	Stop juicer to disassemble hopper to clean material

## WARRANTY CLAIMS

This product is covered by a 1-year warranty against manufacturing defects. For all warranty claims, please email [support@russelltaylors.com](mailto:support@russelltaylors.com) and include a copy of invoice or order ID number as proof of purchase.

You are entitled to one (1) warranty claim during the warranty period.

[www.russelltaylors.co.uk](http://www.russelltaylors.co.uk)

**Russell  
Taylors**