

# Russell Taylors

[www.russelltaylors.co.uk](http://www.russelltaylors.co.uk)

**STEAM MOP SM1**

**E-WARRANTY**




**SCAN HERE**



## **Safety Instructions**

1. The cotton mop of the steam mop needs to be put on first before use. As the design of the mop head is relatively sharp, once there is no mop protection when mopping the floor, it will cause a series of scratches on the floor to a large extent.
2. Clean water must be used. If ordinary tap water is used, after a long time, the limescale will block the steam holes.
3. After cleaning, leave the appliance for a period of time to let its body cool down completely, then keep it in a cool place. It is strictly forbidden to spray steam on people, pets and plants.
4. The mop should be cleaned in time after every cleaning and use. The mop after mopping the floor contains bacteria, and if it is not cleaned for a long time, the stains will solidify on the mop. When it is used next time, it will be more laborious to clean, and it will also affect its service life.
5. It is forbidden that the equipment is always switched on. When cleaning the equipment, turn off the power immediately after use, unplug the device, and keep it away from children.
6. When the appliance is switched on, do not leave it unsupervised. Do not use this appliance outdoors.
7. Do not aim the steam outlet at people, animals, etc., to avoid accidental burns and injury.
8. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance cleaning and user maintenance shall not be made by children without supervision.
9. The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.


## Equipment Details

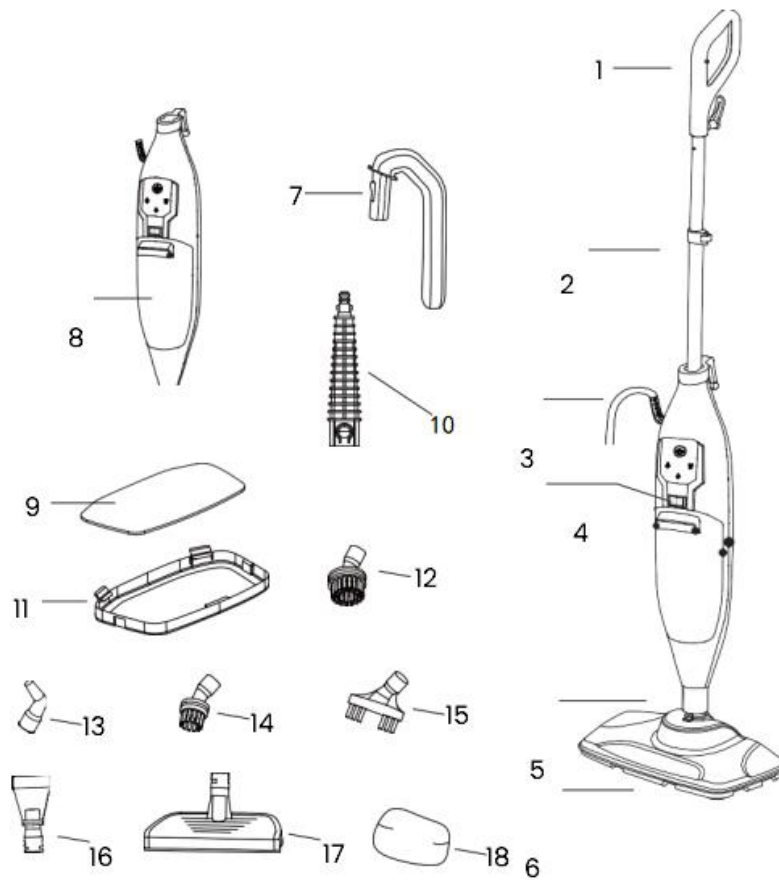


|   |               |    |                   |    |                   |
|---|---------------|----|-------------------|----|-------------------|
| 1 | Handle        | 7  | Handle            | 13 | Bent Nozzle       |
| 2 | Aluminum Tube | 8  | Water Tank        | 14 | Small Round Brush |
| 3 | Power Cord    | 9  | Mop Pad           | 15 | Crevice Brush     |
| 4 | Power Button  | 10 | Straight Nozzle   | 16 | Scraper Head      |
| 5 | Shaft         | 11 | Carpet Frame      | 17 | Glass Brush       |
| 6 | Mop           | 12 | Large Round Brush | 18 | Towerl Set        |

## Instructions For Use

Step 1: Find the host and steam mop head and connect them. Make sure that the lock button on the mop head and the host are fixed in position. When you hear the “click”, and see that the lock button is completely fixed in the host that means they are in position.

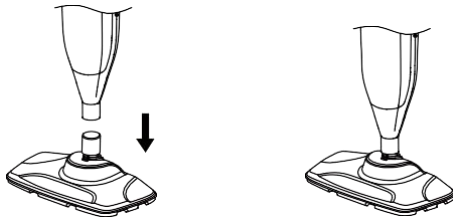


Step 2: Stick the mop pad on the bottom of the steam mop head before mopping the floor. If you want to use it to clean the carpet, you need to install a carpet frame, and you don't need to install a carpet frame when mopping the floor if they are tiled or using hardwood.

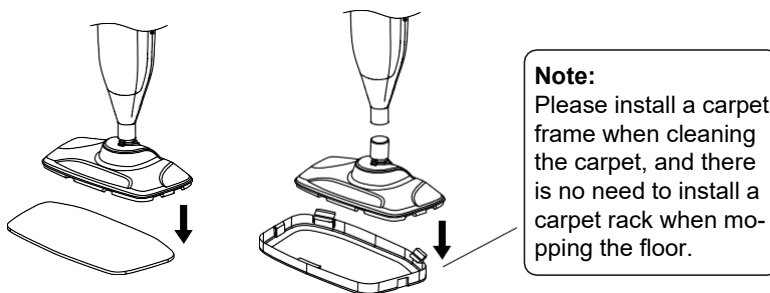


Step 3: Find the handle and the connection rod, connect them. Make sure that the lock button on the handle and the connection rod are in position, as same as step 1. Then insert it to the host. When you hear a “Click” sound that means it is in position.

Disassemble: Press the button under the lanyard hook first, and then pull out the handle.

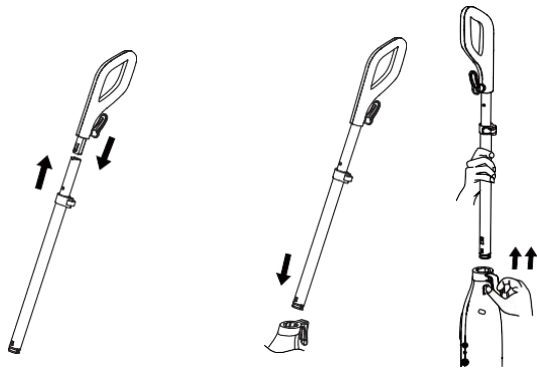

## How To Clean The Mop

1. Pull the handle of the water tank outward and take out the water tank

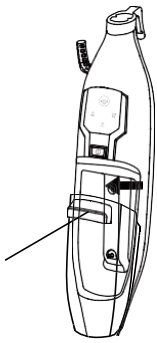


2. Open the water tank cover



3. Take out the water tank, lift the water tank cover, fill it with water, cover the water tank cover and install it on the main machine body.

4. Stick the mop cloth to the mop head
5. Plug in the appliance and turn it on. Press the steam switch button once and a red light will light up. The appliance is now heating up the steam.
6. Press the steam switch button once to select the 1<sup>st</sup> level of steam, pressing the button once more will select the 2<sup>nd</sup> level of steam. Pressing the button the third time will bring the appliance back into standby mode, and the boiler will stop heating.
7. When the appliance is short of water, it will enter "dry mode" and after 30-50 seconds, three indicators will begin to flash in turn.

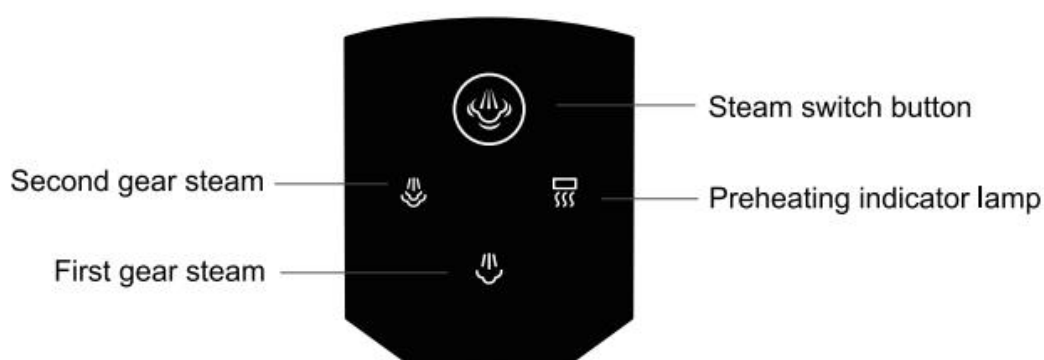

8. To install and use the accessories provided, they must be aligned with the injection pipe clip and the main machine clip hole, inserting it into the main body.

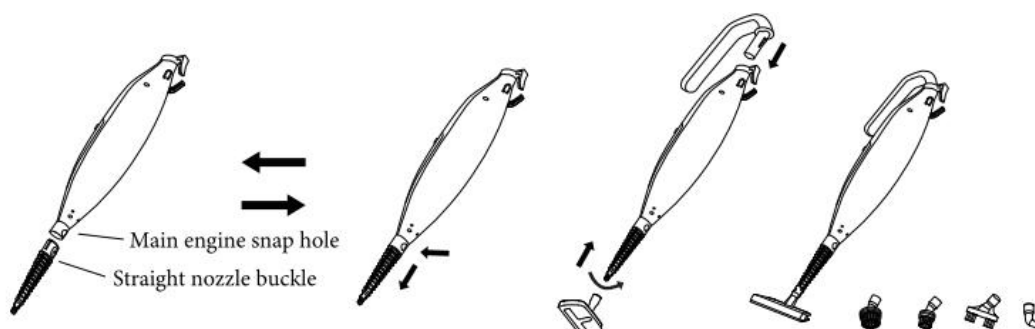


Figure 1

Figure 2