

Russell Taylors

E-WARRANTY



SCAN HERE

USER MANUAL

www.russelltaylors.co.uk

TOASTER

T5



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed. These include the following:

- Do not place any part of this toaster in water or any other liquid.
- To protect against electrical shock do not immerse cord, plugs, or (state specific part or parts in question) in water or other liquid.
- Prior to the first use, the toaster should be used for a few minutes without bread in it. There will be some smoke at first, this is normal.
- Do not touch the hot surface. Use the handles or knobs.
- Unplug from the outlet when it is not in use and before cleaning. Allow it to cool before putting on or taking off any parts.
- If the cord is damaged, it must be replaced by the manufacturer or by an authorized service provider.
- Do not use outdoors.
- Keep the toaster out of reach of children.
- Use only sliced bread.
- Do not insert oversized foods, metal foil packages, or metal utensils into the toaster. This may result in electrical shock.
- Do not use the toaster near curtains, upholstery, or other decorative fabrics, as they can easily catch fire and cause a safety hazard.
- Do not remove food from the toaster while the plunger is down.
- Do not remove the crumb tray while the toaster is plugged in. Disconnect from power supply, wait for it to cool, then remove the crumb tray.
- Bread may burn. Therefore, toasters must not be used near or below curtains and other combustible materials.
- The temperature of accessible surfaces may be high when the appliance is operating.
 - a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
 - b) Longer detachable power-supply cords or extension cords are available and may be used.
 - c) If a longer detachable power-supply cord or extension cord is used:
 - 1) The marked electrical rating of the cord set, or extension cord should be at least as great as the electrical rating of the appliance.
 - 2) The cord should be arranged so that it will not hang over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Do not use the appliance for other than its intended use.
- Avoid contacting moving parts.
- The appliance is forbidden to be operated by a separate timer or a separate remote device.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety, children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Keep the appliance and its cord out of reach children less than 8 years.
- Cleaning and user maintenance shall not be made by children without supervision.

PLEASE KEEP THESE INSTRUCTIONS

Note this appliance is intended for household use only.

SAVE THESE INSTRUCTIONS

MAIN COMPONENTS

- A. Start control
- B. Browning control
- C. Cancel
- D. Crumb tray



OPERATION

- Place your toaster on a flat, dry, stable surface.
- Plug the toaster in, and adjust it to your required toasting time, using the Browning control (B).
- Place bread or other food suitable for toasting into the slot, then press down on the Start control (A).
- It will remain down until the bread is toasted.
- If you wish to stop the toasting process, press the Cancel button (C), this will automatically eject the toast, and cancel the heating elements.
- If the bread sticks in the toaster, unplug it, wait for it to cool, then remove the bread. NEVER USE METAL UTENSILS TO REMOVE THE BREAD.
- After use, slide out the Crumb tray (D), wipe away crumbs using a dry cloth. Insure to insert the crumb tray before using the toaster again.
- Always allow at least 1 minute's cooling time between cycles if toaster is being used more than once at a time.
- If the lead connecting the toaster to the power supply is damaged, it should only be replaced by a qualified service engineer or the toaster manufacturer.
- Always allow at least 1 minute's cooling time between cycles if toaster is being used more than once at a time.
- Must put in the bread when using, the toaster cannot be used without bread.
- This toaster is only for home use.

CLEANING AND CARE INSTRUCTIONS—NOTE THAT THE TOASTER SHOULD BE ALLOWED TO COOL COMPLETELY BEFORE CLEANING.

- Do not immerse in water.
- Unplug from the power outlet (mains).
- DO NOT use coarse or abrasive sponges/cloths or steel wool to clean the toaster.
- Never spray or apply cleaner directly onto or into the toaster – cleaner should be applied to a soft cloth.
- The outside of the toaster should be wiped with a soft, damp cloth, and polished with a soft, dry cloth.
- After cleaning, wait a few minutes for the toaster to dry completely before use.
- An authorized service representative should perform any other servicing.



“THE DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT WASTE PRODUCTS ON THE PART OF FINAL USERS IN THE EUROPEAN UNION”

This symbol on the product or on the container indicates that this product cannot be eliminated with the general waste. The user is responsible for eliminating this kind of waste by throwing them away at a “recycling point” specifically for electrical and electronic waste. Selective collection and electrical equipment recycling contribute to preserve natural resources and warrant waste recycling to protect environment and health. In order to receive further information about electrical and electronic waste collecting and recycling, contact your Local Council, the service of household waste or the establishment where the product was acquired.