

**TOASTER SERIES
INSTRUCTION
MANUAL**

E-WARRANTY




SCAN HERE

Russell Taylors

www.russelltaylors.co.uk



T3

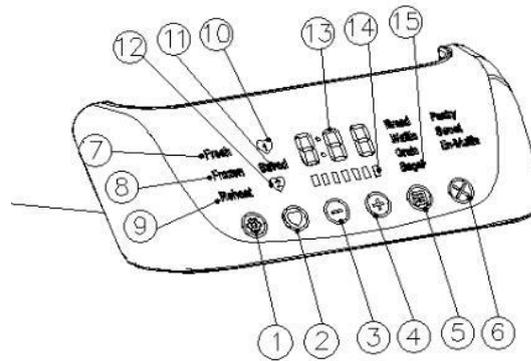

- | | |
|---|-------------------------------------|
| 1. FUNCTION SELECTION BUTTOM | 8. FROZEN FUNCTION |
| 2. MEMORY SETTING AND SELECTION BUTTOM | 9. REHEAT FUNCTION |
| 3. MINUS BROWNING SETTING BUTTOM | 10. MEMORY 1 INDICATE LIGHT |
| 4. INCREASE BROWNING SETTING BUTTOM | 11. SAVED MEMORY INDICATE LIGHT |
| 5. BAKING MODE AND SINGLE BAKING SELECTION BUTTOM | 12. MEMORY 2 INDICATE LIGHT |
| 6. CANDEL | 13. COUNTDOWN TIME |
| 7. FRESH FUNCTION | 14. BROWNING SETTING INDICATE LIGHT |
| | 15. BROWNING STYLE |

Product Warranty

This product is backed by a 2-year warranty against manufacturing defects. To register your warranty, scan the QR code and fill up the details required.

E-WARRANTY



For warranty claims, submit an email to malaysia@russelltaylors.co.uk and include your order number (Online orders) or a copy of your receipt (Offline orders). If you have already registered your warranty online, you will not need to provide a copy of your receipt or order number.

The product is only for household usage. Any evidence of the product being used for commercial purposes will result in a void of warranty.

How To Operate the Toaster

1. Voltage:220-240V 50-60Hz 780-925W
2. Plug in the toaster and switch it on.
3. After being switched on, the toaster will enter display mode. At this time, all the indicator lights will be turned on when you press the lever down. The LED screen will show the setting level for 15 seconds and you can select the function required within 15 seconds. Press the key ① to select the functions ⑦, ⑧ and ⑨ within 15 seconds, or press the memory function. You can also press ⑤ to select the browning style, or press ③ and ④ to set the burning level. The function selection is not after 15 seconds, and the LED screen will display the countdown of the toasting time. The corresponding selected mode indicator light will be on till its finished.

Operation Under Normal Working Condition

1. You can press ③ and ④ to select 1-7 burning level when the lever is down.
2. **Memory function setting:** Short press ② on the memory mode setting under the current working stage to save it. There are two memory modes: Save-1 and Save-2, and the corresponding indicate light will flash. Short press key ② three times to quit the memory mode.
3. If you don't change any setting, the toaster will memorize and work the same function as used last, including the browning level and function mode.

Frozen FUNCTION

Within 15 seconds of pressing the lever down, you can press ① to select the Frozen function and the corresponding indicator light will flash. Once the working time is finished the heating will stop, or press the cancel key to stop heating at any time.

Fresh FUNCTION

Within 15 seconds of pressing the lever down, you can press ① to select Fresh function and the corresponding indicate light will flash. Once the working time is finished the heating will stop, or press the cancel key to stop heating at any time.

Reheat FUNCTION

Within 15 seconds of pressing the lever down, you can press ① to select Reheat function and the corresponding indicate light will flash. Once the working time is finished the heating will stop, or press the cancel key to stop heating at any time.

CANCEL

CANCEL is workable any time.