

Russell Taylors

E-WARRANTY



RETRO TABLE BLENDER

User Manual

TB1



This product is backed by a 1 year warranty against manufacturing defects. For warranty claims, please contact our customer service team at support@russelltaylors.com and provide your order number or invoice.




When using electrical appliance, basic safety precautions should always be used, including the following:

- Caution! To avoid risk of electric shock, never immerse the cord, plug or power base blender in water or other liquids.
- The use of attachments not sold by the manufacture may cause fire, electric shock, or injury.
- Unplug the appliance when it is not use. Make sure the appliance is unplugged before assembling, disassembling, adding additional parts, and cleaning.
- Do not pull, twist, or mistreat the power cord.
- Do not allow cord to hang over the side of the counter or table.
- Do not allow cord to touch hot surfaces.
- Periodically inspect cord and plug for damage. Do not operate any appliance with a damaged cord or plug. If the appliance malfunctions, or is dropped or damaged in any manner, discontinue use. Contact our customer service for assistance in repairs.
- Avoid contact with moving parts.
- Keep hands and utensils away from the cutting blade while chopping or blending food to reduce the risk of severe personal injury or damage to the device.
- Never allow the motor to run for long periods of time, as it can cause permanent damage to the motor and other parts. If the motor stops working, unplug the power base and let it cool for twenty minutes before attempting to use it again. Your appliance has an internal thermal breaker that shuts off the unit when it overheats. The Power Base will reset when the unit is unplugged and the thermal breaker cools down.

- To reduce the risk of injury, make sure the blade is securely screwed onto the container before placing it on to Power Base and operating the appliance.
- Never leave the appliance unattended while it is in use.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use the appliance outdoors if exposed to inclement weather elements such as rain or in wet conditions.
- The appliance is not intended for use in the microwave. Do not place the cup, containers, Power Base or accessories in the microwave as this may result in damage to the appliance.
- To reduce the risk of personal injury or damaged to the device, keep hands and utensils away from the cutting blade.
- Never blend carbonated beverages. Built-cup pressure from released gases can cause container to burst, resulting in possible injury.
- Do not blend hot liquids.
- Do not run the appliance when the containers are empty.

MAIN PARTS


Main engine

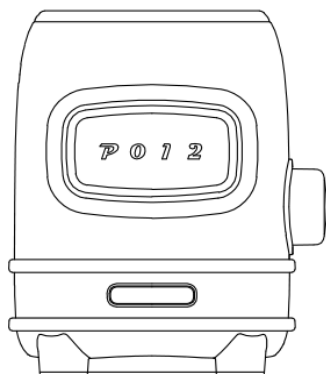


Big cup lid



 
Big cup cover

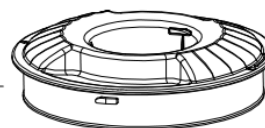

Big cup

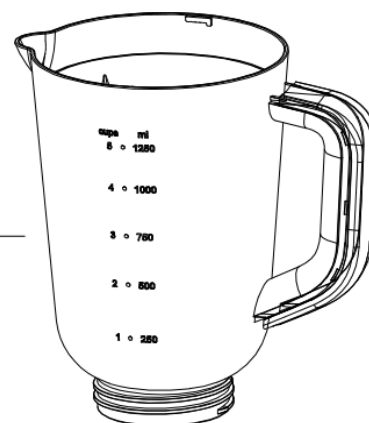 

Blade base

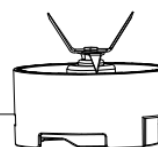 

STEPS TO USE

Blending

1. Put the machine on a stable table.
2. Screw on the cross blade at the bottom of the cup.
3. First add an appropriate amount of water in the blending cup, then add vegetables and fruits which have been cut into small pieces in the blending cup, pay attention that the whole mixed volume cannot exceed 1000ml of the cup.
4. Put the blending cup on the main engine and be sure the upper concave parts fix well to the convex parts on the cup , then tighten it clockwise.
5. Plug in the appliance into 220-240 a voltage.
6. Turn the switch knob and the appliance runs normally.

P--Pulse,

0--OFF;

1, --Low speed

2, -High speed

Note:

★ Do not mix dry ingredients only.

After mixing, please turn off the power switch, then pull the power plug from outlet.

Take off the mixing cup from main body counterclockwise.

Open the blade seat and pour the ingredients out

For repeat operation, please do it according to above steps.

CLEANING & MAINTENANCE

1. You should always take off the plug when not in use.
2. If the machine is not use for long time, please keep the machine in dry and airiness.
3. You can clean the accessories in water except the motor base.
4. Take off the plug before wipe the motor base, always use the dry cloth to clean, never flush or dip in water.

ENVIRONMENT

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact you local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

Russell Taylors