

# Russell Taylors

E-WARRANTY



SCAN HERE

## ELECTRIC MULTI COOKER USER MANUAL


**MC15**



### Special statement

13. All packaging materials, such as plastic bags, polyfoam, tape, etc. should be placed in places where children are not exposed, because improper use of these materials will lead to child suffocation, and even death.
14. Use only the parts provided in the product and in the packaging, otherwise it may pose a hazard to the user and may damage the product.
15. Before using the product, please check the product rating label on the power, voltage is consistent. The rating labels attached to the back of the product. If you have any questions, please contact our customer service department for assistance.
16. Do not allow the power cord to touch a sharp edge or hot surface during operation.
17. This product is not a toy, cannot be used directly into the people and animals.
18. This product cannot be used in unstable locations or burning objects, otherwise it is likely to cause a fire or burn.
19. Parts are not included in the warranty, if you need to be replaced, must be purchased with my company. Parts are not necessarily available; it may take some time to replace.
20. This product is for home use only, not for any commercial purposes.
21. If the product needs to be repaired, client must clean the product and kill all the insects before sent to our repair centre, otherwise our company will charge extra cost for cleaning and pest control.
22. You may notice an odour & gas using the appliance for the first time, due to the insulation material. This is harmless and will subside quickly.
23. If abnormal noise, smell, smoke occur during use, the power supply should be off immediately. If you have any questions, please ask our customer service department for assistance.
24. If the supply cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
25. Before using the pot body, the water stains on the bottom of the pot must be wiped dry.
26. When using the product should be placed on a flat surface table, not close to other heat sources, nor placed on other electrical appliances.
27. When the product is under operation, do not touch the steam sprayed from the glass cover to prevent burns.
28. When boiling water, you must cover the glass cover and add water not to exceed the maximum water level, in order to avoid hot water splashing out and causing burns. In addition, do not add water lower than the minimum level line, in order to avoid dry burning and damage to the product.
29. It is forbidden to wash the pot by leaking it into water or other liquids, in order to avoid short circuit and damage to the product.
30. Do not turn on the power when there is no water in the pot, add water, clean or move the product.

### Parts

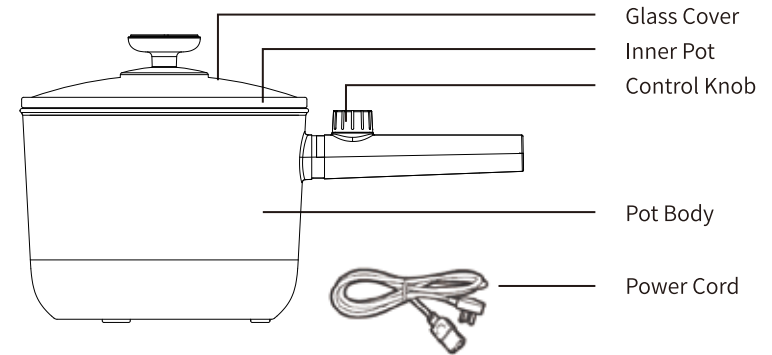

### How to use

1. Insert the plug into power socket.
2. Turn the control knob to the "0" position, which turn off the cooking pot, the indicator light does not light up, and it will not heat up.
3. Turn the control knob to the "I" position, which the cooker is turned on, the indicator light is turned on and heating "I" refer to the level 1 heating level which is heating at the middle temperature.
4. Turn the control knob to the "II" position, which the cooker is turned on, the indicator light is turned on and heating "II" refer to level 2 heating level which is heating at the high temperature.
5. If you stop using the cooker, please turn the control knob to the "0" position for turn off the appliance.

### How to use

- Control Knob



### Clean & Maintenance

- Before cleaning and maintenance, make sure the product has unplugged and the product has been completely cooled.
- Please use a clean, water-absorbent soft cloth to wipe the lid, mainbody...etc (Note: Please do not wipe the operation panel, plug and power cord with a soft, soft cloth.)
- Cannot use banana water, gasoline, decontamination powder, hard brush, etc. to clean all parts of rice cooker
- Do not enter the water inside the appliance. Cannot fill in the electric parts (except inner pot) of rice cooker inside the water

### Technical Specification

Model	Voltage	Power	Frequency	Capacity
MC15	220-240V~	600W	50/60Hz	1.2L