

Russell Taylors

E-WARRANTY



SCAN HERE

WET & DRY VACUUM CLEANER USER MANUAL

V10i



Contents

1.Safety Instructions	1
1.1 Warning	1
1.2 Safety Instruction	2
2.Product Introduction	3
2.1 Product Component	3
2.2 Charging Base	4
2.3 Accessories	4
2.4 Status Display	5
2.5 Display Light Details	5
2.6 Voice Indicator	6
3.Product Assembly	7
3.1 Install the handle	7
3.2 Remove the handle	7
4.Product Operation	8
4.1 Fill Water to Clean Water Tank	8
4.2 Wash the floor	9
4.3 Charging	10
5.Product Routine Cleaning	11
5.1 Dirty Water Tank Cleaning	11
5.2 Cotton filter of dirty water tank clean	12
5.3 Roller Brush Clean	13
6.Product Specification	14
7.Common Fault	15

1.Safety Instructions


Warning

- This handheld floor washer is a household product. Not recommend to be used in industrial and commercial or other heavy dirty conditions.
- Please do not use machine to clean sharp objects to prevent roller brush damage.
- Please do not use the device to clean cement, gypsum powder, wall powder and other small particles that are easy to freezing, or large objects such as toy paper balls, otherwise the floor washer will be blocked and the motor will be burned.
- Please do not use the machine to clean inflammable and explosive objects, and do not to put such liquid into water tank.
- During the cleaning process, if the roller brush is twisted with wire objects, please shut down the machine immediately to clean up the wires to avoid damage to the machine.
- Please do not put the machine sideways or upside down. Please clean the dirty water tank in time after using.
- When using the machine for the first time or after long-term storage, please fully charge the machine first.
- If the machine is not used for a long time, please ensure that it is charged at least every three months.
- Wipe with a dry cloth when cleaning the machine. Do not use gasoline or corrosive cleaners that are easy to crack and discolor the shell.
- Do not let children play with the machine as a toy.
- When the device is fully charged and cannot work, it must be inspected and repaired at the designated maintenance point. Do not disassemble by yourself.
- If the power cord is damaged, to avoid the danger, it must be replaced by the manufacturer's local maintenance department or similar department for professional replacement.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The appliance is only to be used with the power supply unit provided with the appliance.
- The adapter must be removed from the socket-outlet before cleaning or maintaining the appliance.
- This appliance contains batteries that are only replaceable by skilled persons.
- **WARNING:** For the purposes of recharging the battery, only use the detachable supply unit (model: xxx) provided with this appliance.
- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the appliance and safely disposed.
- If the appliance is to be stored unused for a long period, the batteries are removed.
- The supply terminals are not to be short-circuited.





1.Safety Instructions

1.2 Use Restrictions

This product is only suitable to waterproof hard floor (such as ceramics,marble, wood,etc.),do not use this device to clean carpet or other non waterproof ground.
Note:This device is not suitable for carpet cleaning.

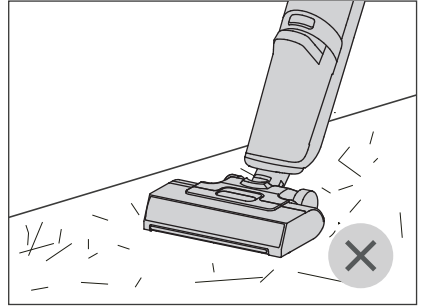


Be careful not to press on the power cord when using the device to prevent electric shock.Ensure that any part of the human body or large objects such as clothes are away from the roller brush.

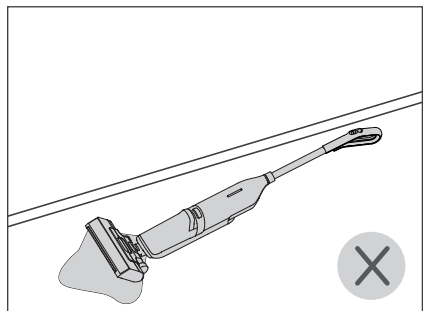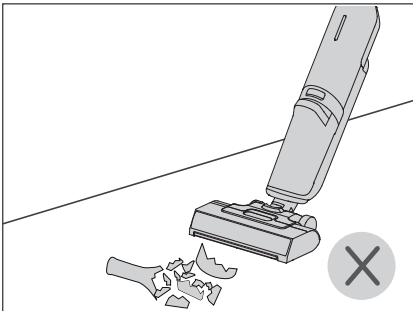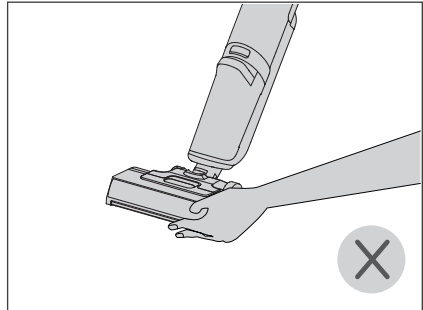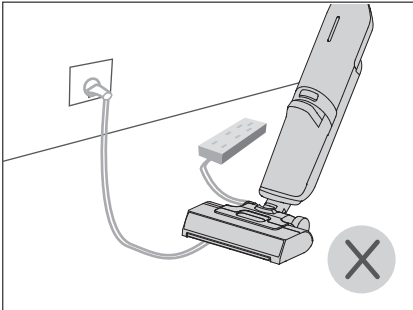


2. Product Introduction

2.1 Product Components

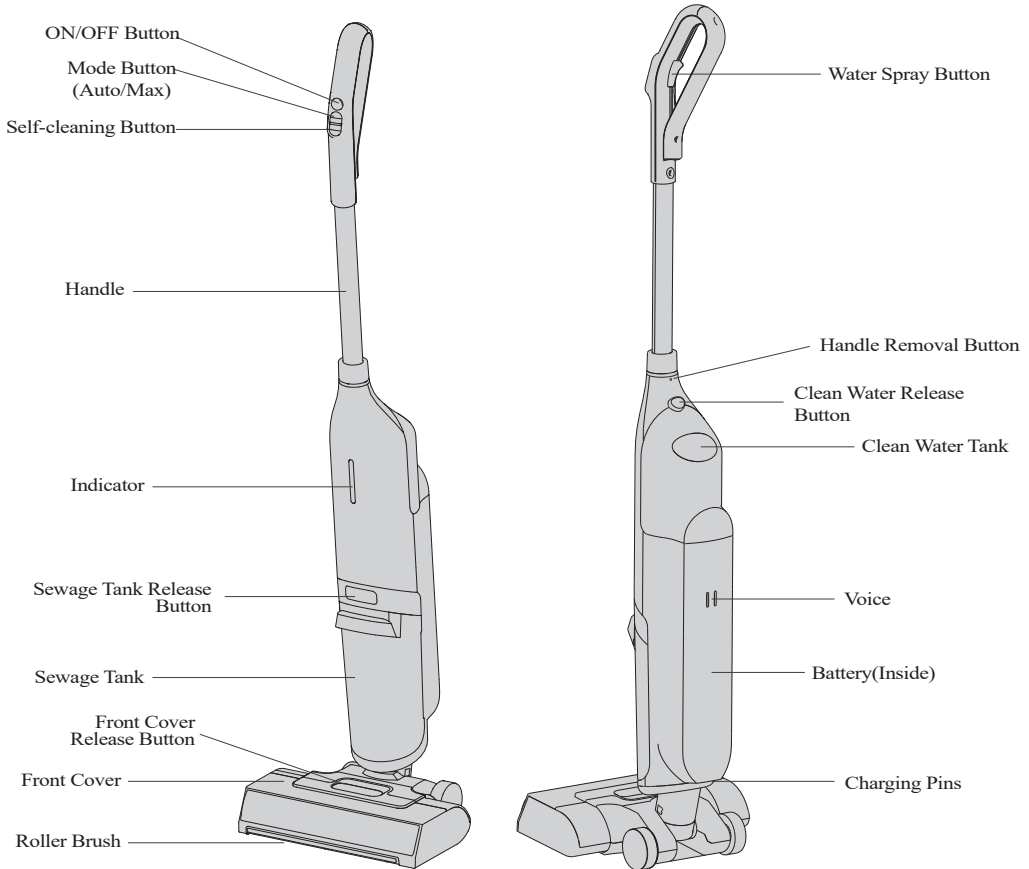


2. Product Introduction


2.1 Charging Base

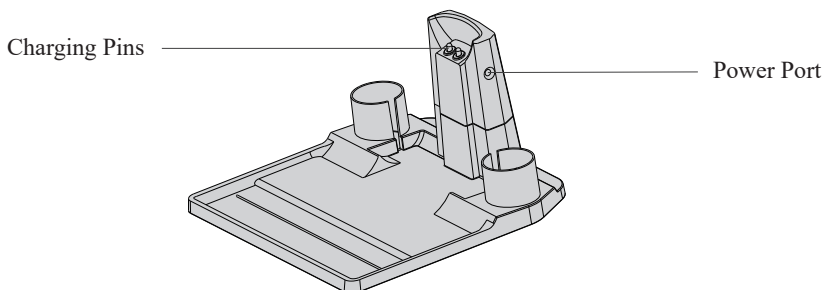


2.2 Accessories

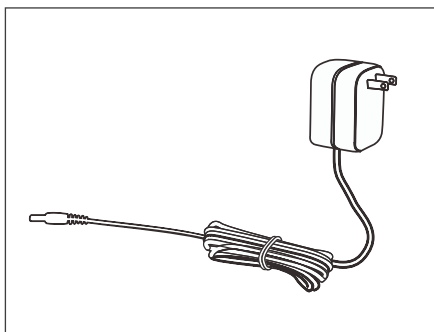

Adapter

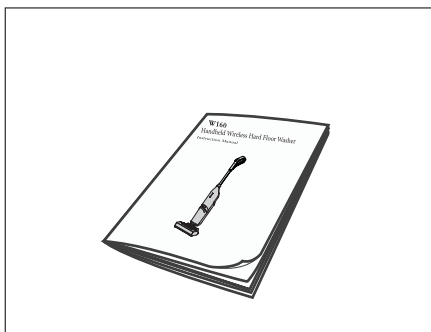


Instruction Manual

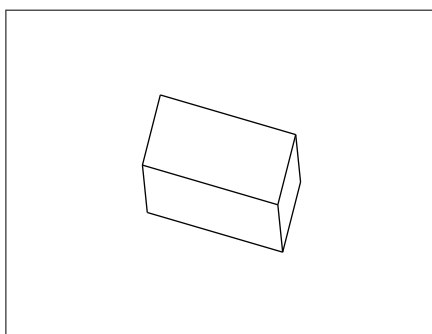


Sponge Filter


2.Product Introduction

2.4 Status Display

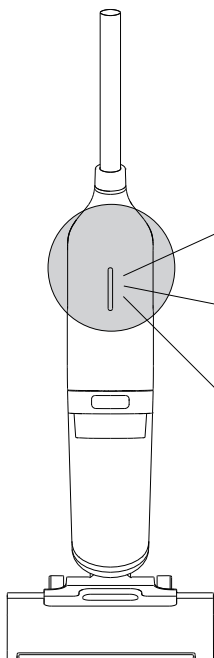


- 

Green
Steady on-battery is fully charged
Battery>40%

- 

Orange
Stay on-10%<Battery<40%
Flashes-in Charging

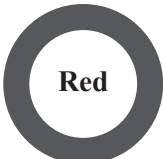- 

Red
Stay on-low battery
Flashes-Abnormal alarm

2.5 Display Light Details

Machine Status	Display light status
Low battery	Red light
Battery fully charged	Green light is on for 5 minutes and then turns off.
Battery over temperature	Sound 'Di,Di Di',The red light stays on for 5 seconds and then turns off.
Short circuit protection	Sound 'Di,Di Di',The red light flashes for 5 seconds and then turns off.
In charging	Orange light flashes slowly (breathing light effect)
Dirty tank full	Sound 'Pls empty the dirty water tank'. The red light flashes for 5 seconds and then turns off.
Abnormal water pump	Sound 'Di,Di Di'.The red light flashes for 15 seconds and then turns off.

Machine Status	Display light status
Fan abnormal	Sound 'Di,Di Di',The red light flashes for 10 seconds and then turns off.
Abnormal roller brush	Sound 'Pls check the main brush.The red light flashes for 5 seconds and then turns off.
Abnormal charging	Sound 'Di,Di Di',The red light stays on for 10 seconds and then turns off.
Battery>40%	Green light
10%<Battery<40%	Orange light
Battery<10%	Red light, meanwhile,sound alert'Low battery!'

2.Product Introduction

2.6 Voice Indicator

Voice activation condition	Voice Content (English)
Press the Start switch	Start cleaning
	Power off,please put back the machine to the charging base.
Press the mode button	Powerful mode
	Auto mode
Dirty tank full	Please empty the dirty water tank.
Clean water tank is Empty.	Clean water shortage
Put it on the charging stand.	Start charging
Press the self-cleaning button	Start self-cleaning.
Self-cleaning is finished.	Self-cleaning finished
Low battery	Low battery, please charge
Abnormal roller brush	Please check the main brush

3.Product Assembly

3.1 Installing the handle

Insert the handle into the corresponding top position of the fuselage in the direction shown in Figure 3-1. There are buckles for positioning. After inserting, if you hear the sound of 'Ka', the installation is complete as showed on Figure 3-2.

3.2 Removing the handle

Use a non-sharp auxiliary tool (such as a bamboo stick) to poke into the small hole shown in the figure to hold the handle removal key, and at the same time pull out the handle vertically upward.


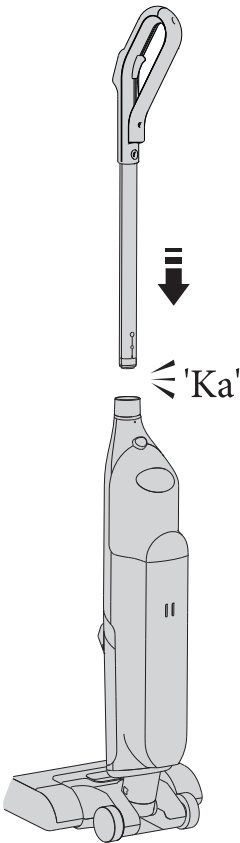


Figure 3-1

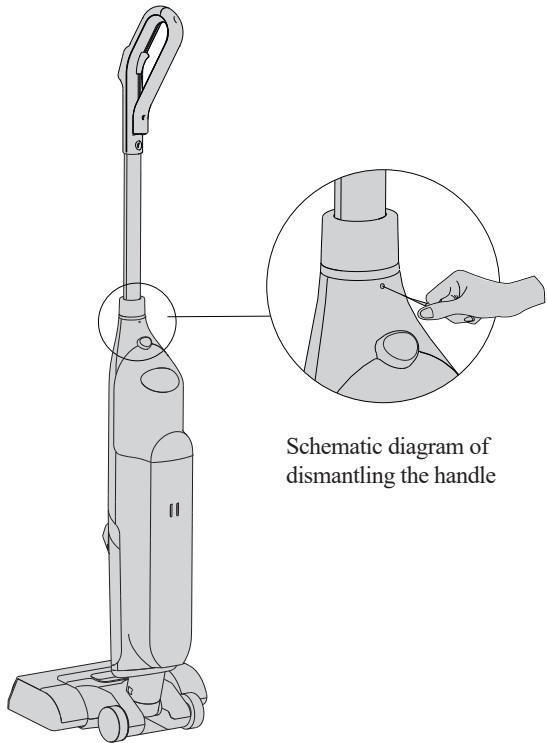


Schematic diagram of dismantling the handle

Figure 3-2

4. Product Operation


4.1 Fill water to clean water tank

1

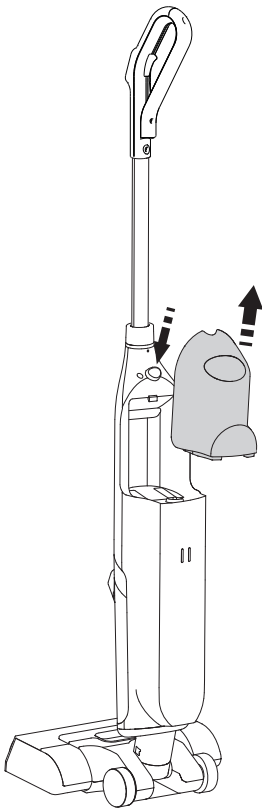


Press the tank button to remove the solution tank.

2

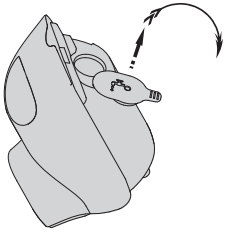

Open the soft cover:
Lift up and turn clockwise.

3

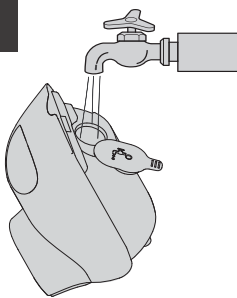


Inject clean water, not exceeding the MAX line.

4



Install the soft cover:
Turn counterclockwise first,
then press down

5

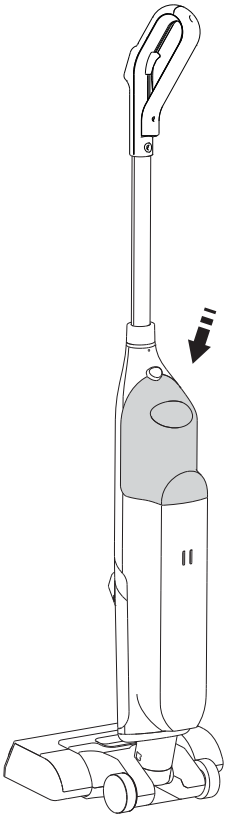


Put the clean water tank back into the fuselage, and the installation is successful when you hear a sound of 'ka'.

4.Product Operation


4.2 Wash the floor

1

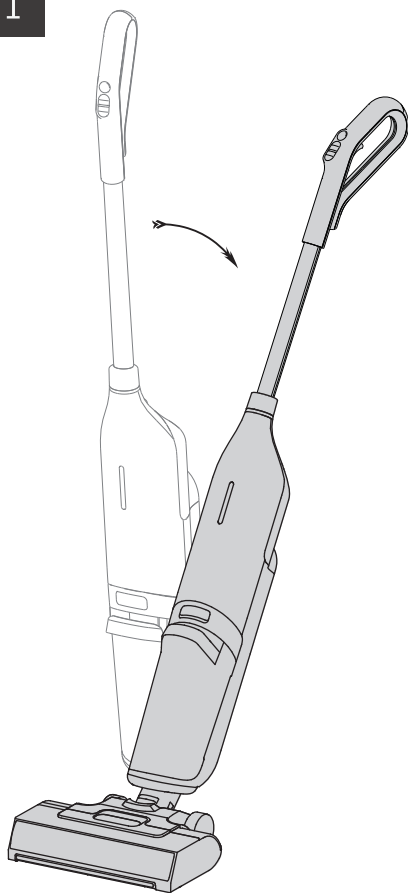


Please tilt the machine first before turning it on.

2

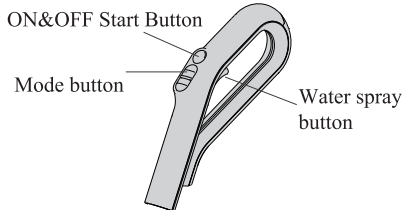

- Press start switch, turn on the washer , start AUTO mode.
- Press the on&off button again, it stops working.
- When the machine is running, press the Mode button to switch between the Auto/Strong mode.
- Press and hold the water spray button, start water spraying; Release the button, stop spraying.



3

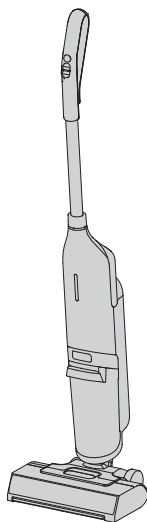

After using the machine, it can be placed upright Or put it back in the charging base.

4. Product Operation

4.3 Charging

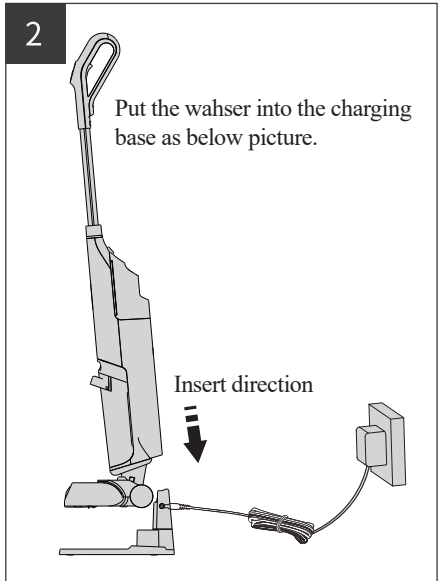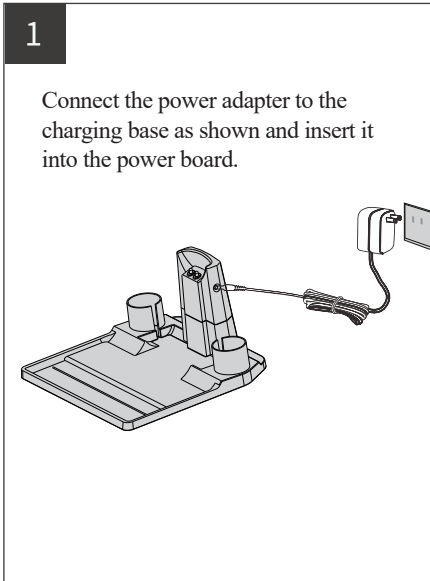


When the indicator blinks orange color, the washer is in charging; full charged, the indicator becomes constant green(indicator off after 5 minutes and washer enters sleep).

4.4 Self-cleaning

After the machine is cleaned, put it back on the charging base, please empty the sewage tank first, and make sure that the clean water tank has enough water, press the self-cleaning button, the machine will enter the self-cleaning mode, and it will finish cleaning and drying in 1 minute, and then stop automatically.


Gentle reminder :

Self-clean can only be selected when the battery is charged and the battery power is greater than 10%.

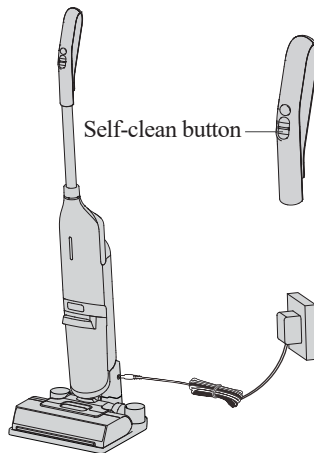


5. Product Routine Cleaning


5.1 Dirty Water Tank Clean

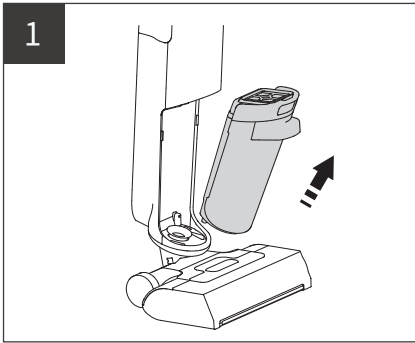


Press the water tank button to remove the water tank.

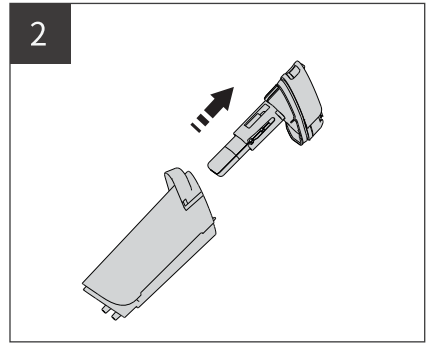


Remove the tank cover.

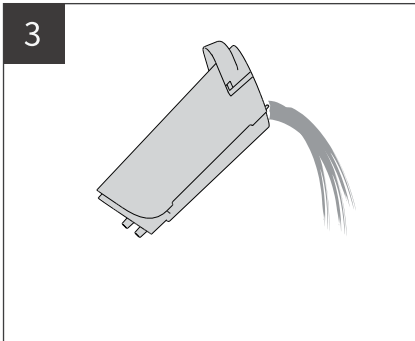


Pour out sewage.

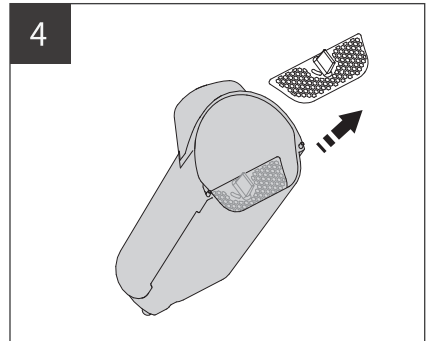

Take out the filter holder.

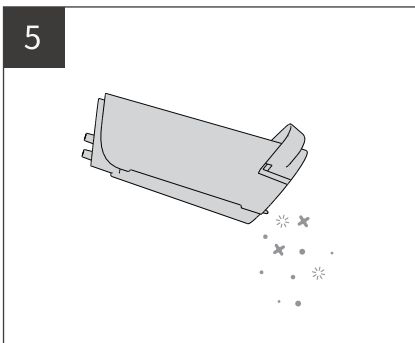


Pour out solid waste.

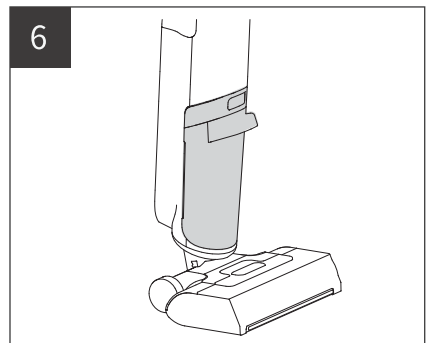


Install the water tank cover, put the sewage tank back into the fuselage, and the installation is successful when you hear a sound of 'ka'.

5. Product Routine Cleaning


5.2 Cotton filter of dirty water tank clean

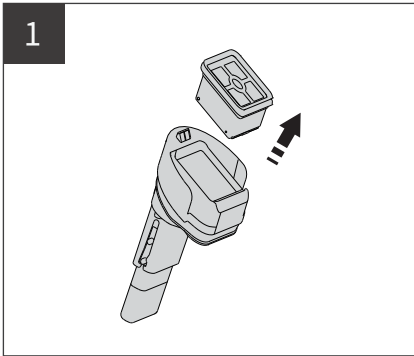


Take out cotton filter support from water tank cover.

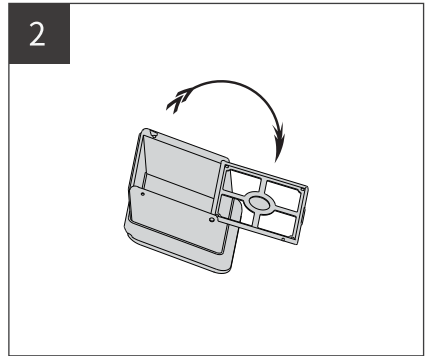

Open the stand cover.

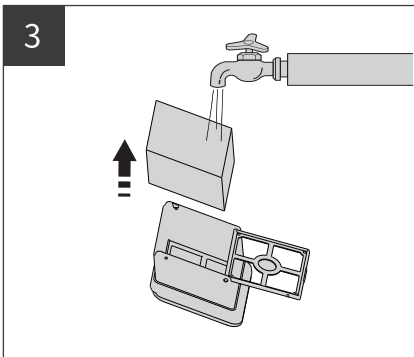


Take out the filter sponge, the filter sponge and the holder can be washed together with water.

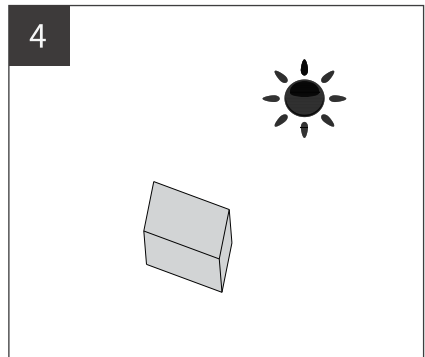


After washing the filter sponge, you can dry it and put it back into the bracket assembly, close the bracket.

5. Product Routine Cleaning


5.3 Roller brush clean

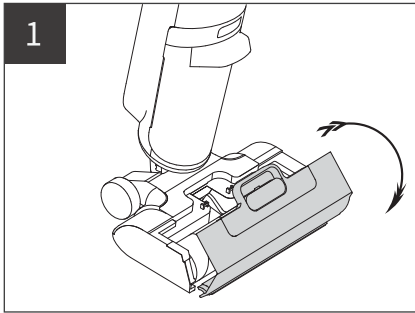


1 Pull the front cover button and remove the front cover.

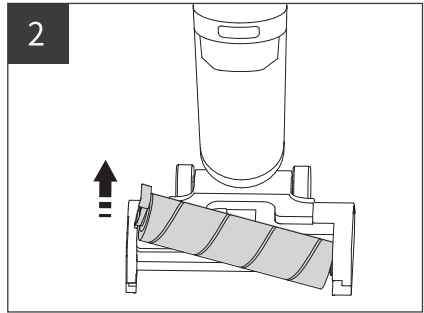


2 Pull up on the roller brush handle to remove the roller brush.

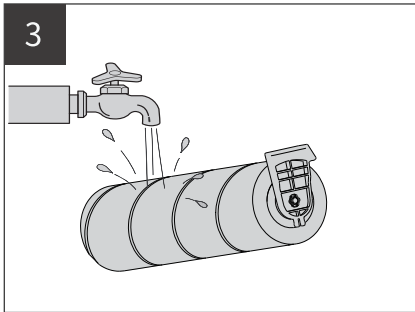


3 Washing the rollers manually.

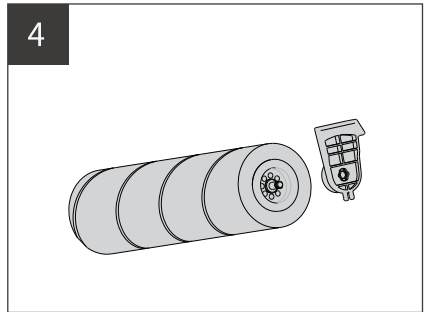

4 Roller side cover can be pulled out manually to remove tangled hair.

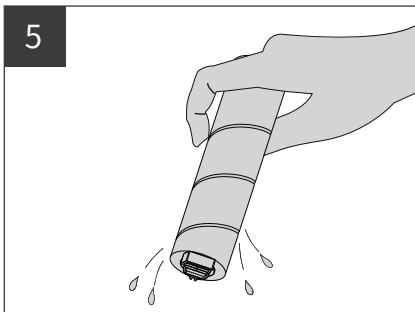

5 Shake off surface moisture.

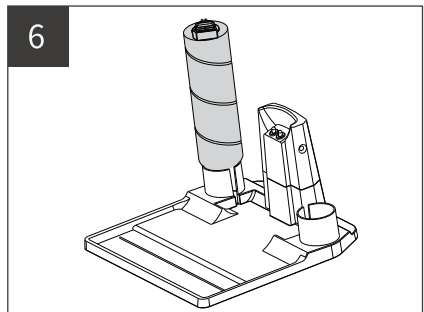

6 The cleaned rollers can be placed on the roller brackets on both sides of the charging stand for drying.

6.Common Fault

When the machine does not work properly, please refer to the following to handle the abnormal situation.

Main Failure	Failure cause and solutions
The machine doesn't work.	<ol style="list-style-type: none">1. The battery power is insufficient, please use it after charging.2. The air duct is blocked and the roller brush is blocked. Please clean up the foreign objects in time. Reboot to use.3. The sewage tank is full, please clean the sewage tank.
Suction drop	<ol style="list-style-type: none">1. The air duct is blocked by foreign objects, and the roller brush is interfered by foreign objects. Please restart the machine after cleaning the foreign objects from time to time.2. The sewage tank assembly is not installed properly, please check the sewage tank assembly file and reinstall.3. The filter sponge of the sewage tank is dirty, please clean it.4. The battery voltage is too low, charge it in time.
Abnormal noise	<ol style="list-style-type: none">1. The air duct is blocked by foreign objects, and the roller brush is interfered by foreign objects. Please restart the machine after cleaning the foreign objects from time to time.2. The sewage tank assembly is not installed properly, please check the sewage tank assembly file and reinstall.
The light does not light up when charging.	<ol style="list-style-type: none">1. Check whether the power adapter is plugged in properly.2. The battery is fully charged, and the battery enters the sleep state.