 


# Russell Taylors

V9

## Instruction Manual

Cordless Vacuum Cleaner  
with Mop Function

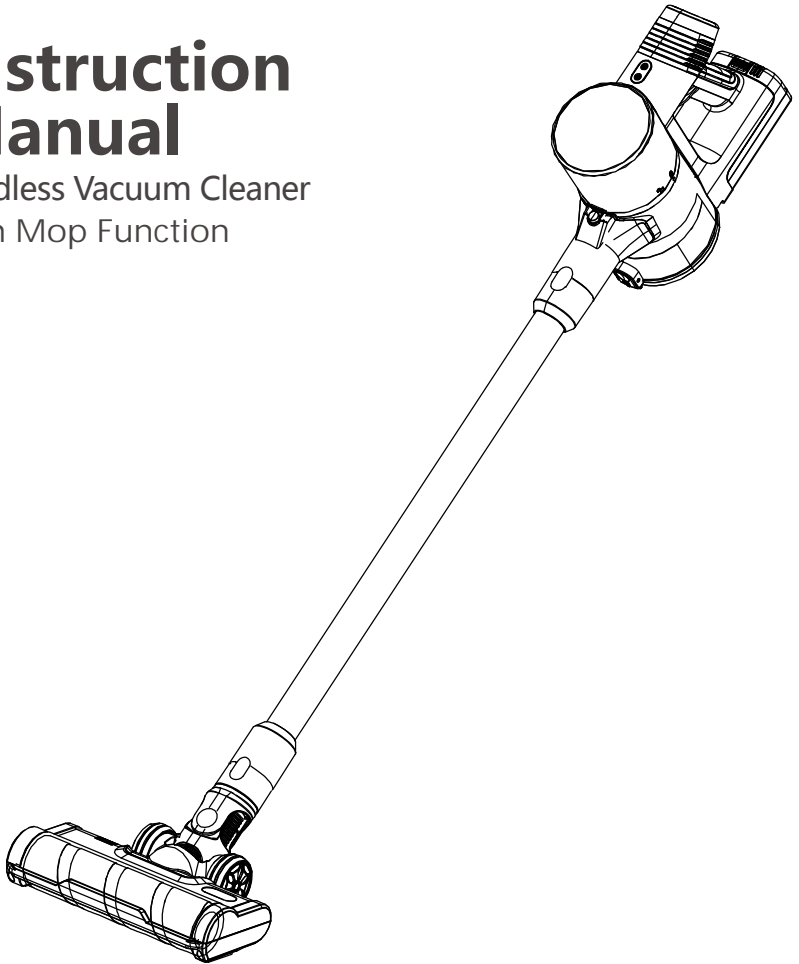

# Contents

---

<b>Special declaration</b> .....	1
<b>Guidelines on safe use</b> .....	2
<b>Introduction to product components</b> .....	3
Host and accessories .....	3
<b>Product installation and disassembly</b> .....	4
Installation of electric brush/mop kit.....	4
Installation of extension aluminum tube .....	4
Installation of crevice nozzle/bristle brush.....	4
<b>Installation, disassembly of product</b> .....	5
Removal and installation of dust cup .....	5
<b>Use of product</b> .....	6
Start of cleaner .....	6
Adjustment of suction power .....	6
Condition of charging and indicator light .....	6
<b>Use of accessories</b> .....	7
Introduction and use method of accessories .....	7
<b>Precautions and product maintenance</b> .....	8
Daily storage.....	8
Machine cleaning .....	8
<b>Precautions and product maintenance</b> .....	9
Replace or clean the power brush and mattress brush.....	9
<b>Common faults and product parameters</b> .....	10

# Special declaration

---

The Instruction Manual and Warranty Card clarify the agreement between the company and the users on the incurring and termination of quality assurance liabilities and the rights and obligations during the after-sales services. Please read the Instruction Manual carefully before using the product. If the vacuum cleaner is damaged due to abuse, negligence, improper use or absence of factory accessories, the user will be deprived of the right to receive any after-sales service, and all warranty application will be declined by Russell Taylors Service Center. In addition, this publication shall not be reproduced, stored in any retrieval system or disseminated in any form without the permission and authorization of the Company.



**Notice: The vacuum cleaner herein is for domestic usage and shall not be used in any factory or other business places.**

# Guidelines on safe use

**Please observe the basic safety prevention measures during using, including but not limited to the followings (Please read all the following safety tips carefully before using):**

## **Power supply**

This product is powered by a 25.9V DC lithium battery, and all other battery models shall be avoided.

In case of any abnormality in the battery, please don't start the product and contact our After-Sales Department for timely replacement.

When plugging in/out the power line, please hold the power plug of charging seat to avoid a forceful pull or twist.

## **During use**

 
- 1、 Please do not use this machine outdoors or in humid places, or grasp it with wet hands.
- 2、 If the machine is damaged due to collision or falling, placed outdoors or fallen into water, please stop using and send it to the service center authorized by Russell Taylors for inspection.
- 3、 To avoid blocking, please don't put large objects into the suction nozzle of vacuum cleaner. Keep the suction nozzle away from lint, hair and other objects that may cause a blockage.
- 4、 To avoid injury during using, keep your hair, clothes, fingers and other body parts away from the suction nozzle and movable parts.
- 5、 Avoid sucking in any burning or smoking garbage, such as cigarette ends, matches, soot and other objects.
- 6、 Do not use the vacuum cleaner to clean flammable substances or liquids, such as gasoline or the places where there may be gasoline, kerosene, paint, alcohol, detergent, etc.
- 7、 Do not use the vacuum cleaner before installing the filter.
- 8、 Please turn off the machine before connecting or replacing any accessories.
- 9、 Keep the vacuum cleaner indoors and use it in dry rooms only.
- 10、 Using of unknown batteries may result in damage of motor or injury of user, so please use the recommended batteries.
- 11、 Do not use it for other purposes unless otherwise specified in the manual.
- 12、 Do not use the vacuum cleaner as a toy. If there are children in the using environment, please pay special attention to the using safety.
- 13、 Be careful when cleaning stairs.
- 14、 To prevent injury and accident, please contact with the After-Sales Service Center of Russell Taylors for repair if the vacuum cleaner is damaged.
- 15、 Please use the machine correctly according to the manual. Only the accessories recommended by the manufacturer can be used for this product.



**Warning:**  
**To reduce potential fire risks, electric shock or injury, please observe the above rules**




# Introduction to product components

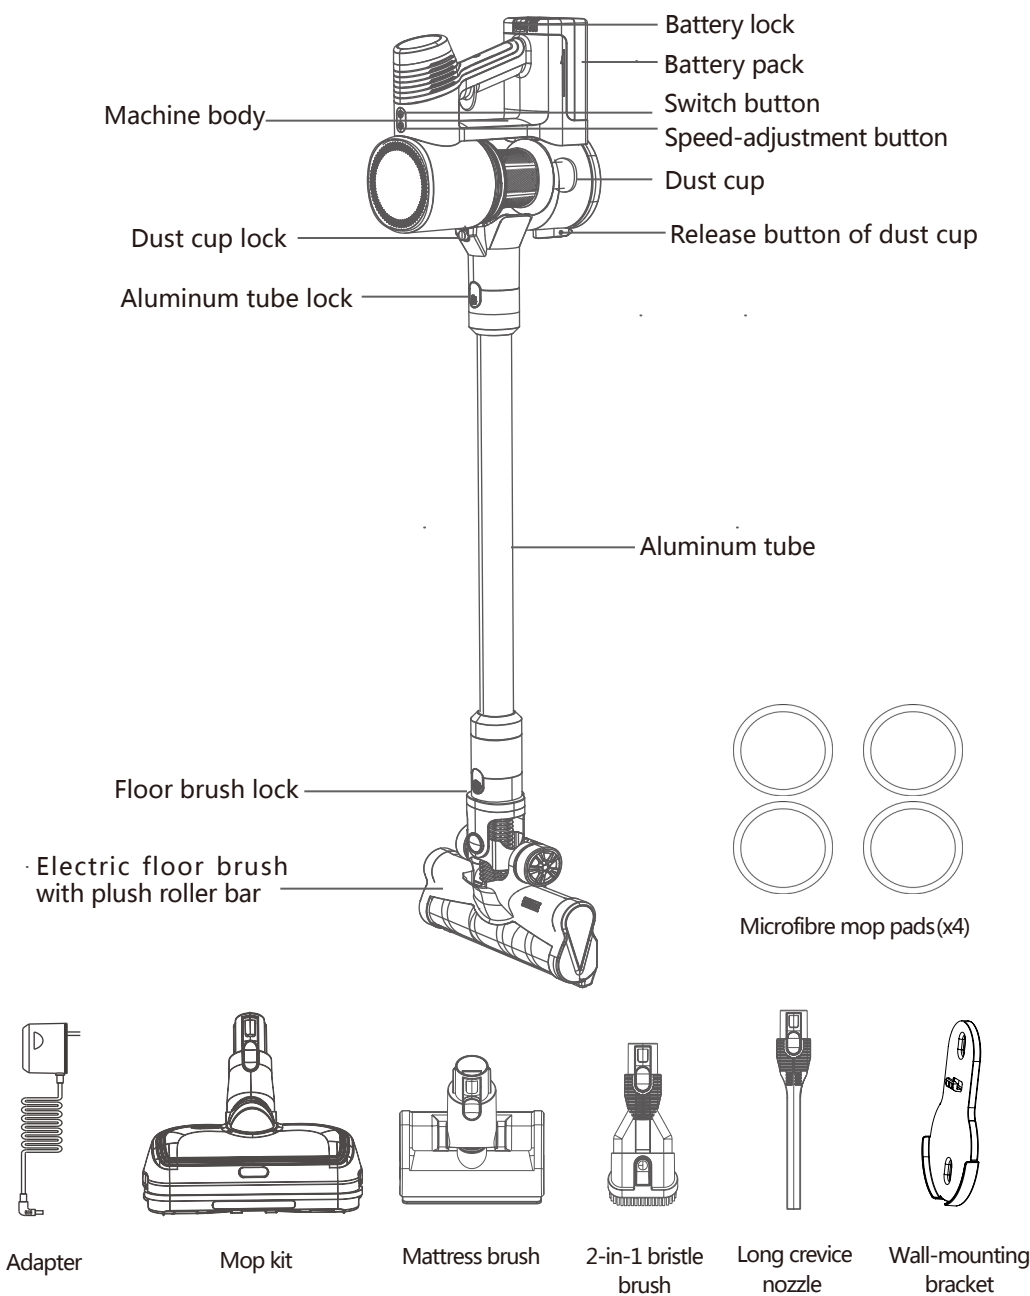

# Product installation and disassembly

## Installation of electric floor brush/mop kit

 
As shown in the figure, align the electric floor brush or mop kit to the extension tube connector, push it gently. The installation is finished when a "click" is heard (for disassembly, just press the lock button as shown in the figure, and pull it downward).

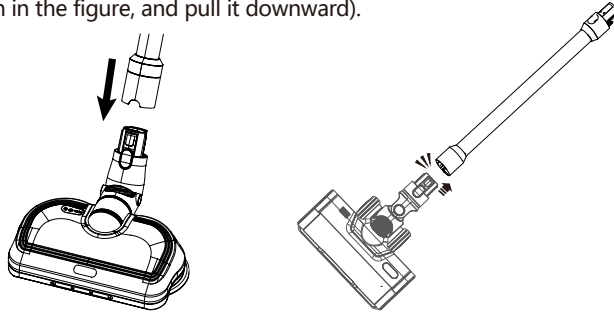

## Installation of extension aluminum tube

The machine can be used as a vertical cleaner when you connect it with one end of the extension aluminum tube (The machine is installed successfully if a "click" is heard) and the floor brush or other accessories with the other end (as shown in the figure):

 - ※ Or connect the machine with a floor brush to clean the hard ground such as floor and ceramic tiles or undercoat carpet.
- ※ Or connect the machine with a mop kit to clean the hard ground such as floor and ceramic tiles
- ※ Or connect the crevice nozzle or bristle brush to clean the area (such as ceiling, curtain and air conditioning inlet) that is hard to clean. (During disassembly, just press the lock button in the figure to pull it away)

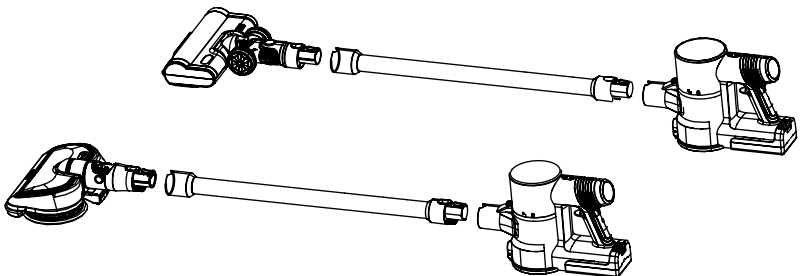

## Installation of crevice nozzle/bristle brush

 
As shown in the figure, align the crevice nozzle to the machine body connector, and push it gently. The installation is finished when a "click" is heard (for disassembly, just press the lock button showed in the figure and pull it downward).



# Installation, disassembly of product


## Removal of dust cup

- Press the lock button of the dust cup, rotate the dust cup in the direction as shown in the figure, and pull down the dust cup. Remove the inner parts one by one

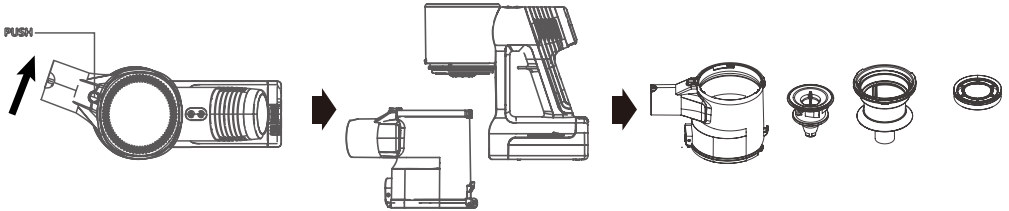


## Installation of dust cup

 - Align the stainless filter case with the gap of dust cup and put it in.
- Make sure the bottom of the stainless filter is located right in the middle of dust cup cover.

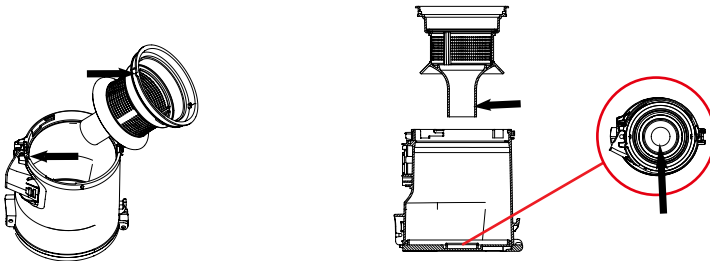

 - Put all filter elements back into the stainless filter case, and assemble the dust cup to the machine body.

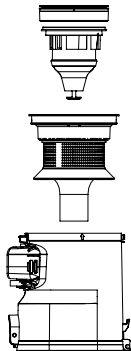


# Use of the product

## Use of the product

①

### Start of cleaner

 
After installing all the parts, press the switch button to start the cleaner.  
(button in the figure)

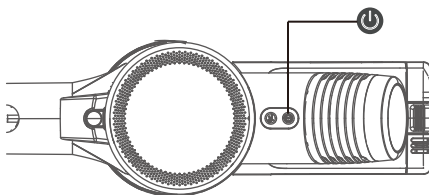

②

### Adjustment of suction power

 The three gears of suction power can be selected in turn as needed by pressing the speed adjustment button.  
(button in the figure)

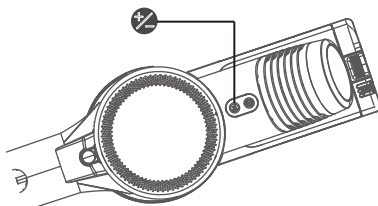


③

### Condition of charging and indicator light

 Connect the power adapter with the charging interface in battery pack, and connect the power supply to start charging. (as shown in the figure)


The indicator lights will flash when the machine is charging, and the power of machine is full when the indicator lights are always on.

⚠ Notice: Please use original 30V  $\approx$  0.5A charger !

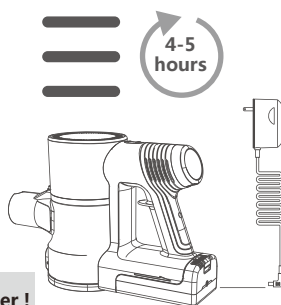

# Use of accessories
 
## Introduction and use method of accessories

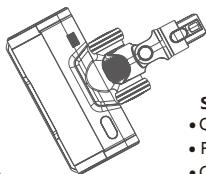


### ※Examples of using scenarios※




**Suitable for cleaning the hard surface such as floor and ceramic tiles and the undercoat carpet**

 - Quick cleaning due to built-in independent motor and large fluffy roller brush.
- Flexible cleaning due to horizontal rotation (270°) and vertical rotation (90°)
- Cleaning of dark and dead angles due to the front LED light.

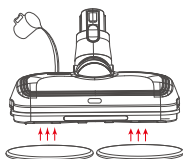


### ※Examples of using scenarios※

 


**Suitable for cleaning the hard surface such as floor and ceramic tiles**

 - Quick dust removal due to independent dual motors and two high-power rotating mops, vacuuming and mopping simultaneously.
- Flexible cleaning due to horizontal rotation (270°) and vertical rotation (90°).
- Cleaning of dark and dead angles due to the front LED light.

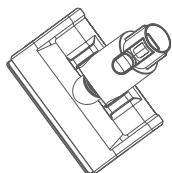


### ※Examples of use scenarios ※

 


**Suitable for cleaning fabric such as Mattress and sofa**

 - Driven by built-in independent motor, the roller can pat and rotate at a high speed, clean particles such as pollen, acarid and hair on the deep layer of bedding and is good for the sleeping health of the whole family.

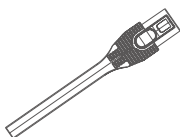


### ※Examples of use scenarios ※

 


**Suitable for cleaning various household seams and narrow positions in the car**

 - Deeply clean the household dead angles such as sofa seam, supporter, window corner, car interior and other inaccessible seams.

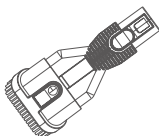


### ※Examples of use scenarios ※

 

**Suitable for cleaning the positions that need hair brush such as curtain car interior and air conditioner**

 - One-key extensible brush can suck and clean simultaneously and remove dust efficiently.
- Slim and soft hair brush can clean the fiber and other household soft decorations.
- The fine hair brush can clean small seams and meet the refined cleaning requirement.

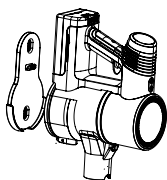

- The wall-mounting bracket is for hanging the vacuum when not in use.
- Assembly requires a hole of 8mm diameter and roughly 30mm depth, then insert the expansion pipe into the hole. Once everything is in place, fix the bracket on the wall with screws. Ensure the location is safe to drill before drilling any holes.

# Precautions and product maintenance

## ※ During using

Please do not approach to the heater such as radiator and butt

## ※ Before using

To prevent damage caused by collision, please remove large and sharp objects. Don't use it for any inflammable objects or liquids, such as gasoline, cigarette or alcohol

 
## Daily storage

For long-time storage, please place the machine in cool and dry place, and avoid direct sunlight or humidity

## Machine cleaning


### How to dump dust and clean the dust cup

As shown in the figure, press the release button of dust cup to open the cup cover and dump the dust.

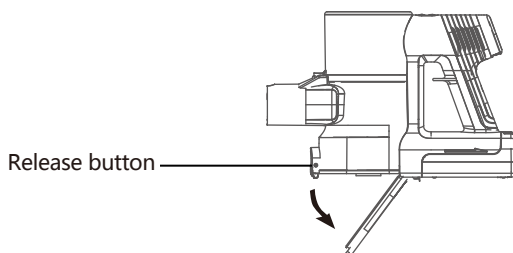

### Replace or clean the filter


 
- Push the lock button of outlet HEPA filter and remove it. Clean the HEPA filter with soft hair brush.

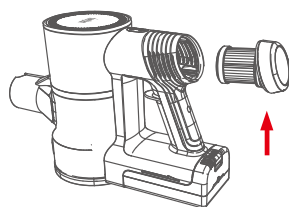


Outlet HEPA

# Precautions and product maintenance

  - Remove the dust cup from the machine body (refer to the previous removal instruction)

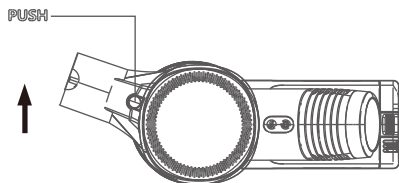

 - Clean the filter case and the filter with soft hair brush or put them in water for washing

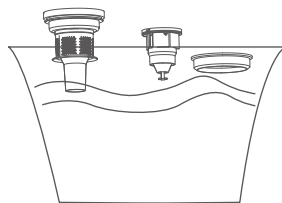

- Reinstall the filter after it is dry. We suggest washing it when the suction gets weak.




**Notice: Before using, please ensure all filters are installed in correct position**

 
## Replace or clean the power brush and mattress brush

- The cleaning head needs to be cleaned after using for a long time.
- Spin the button to unlock, take out the roller brush to clean and exchange!

**Power brush**

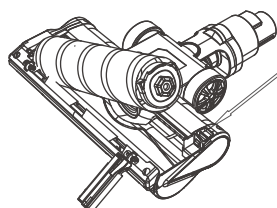

**Mattress brush**

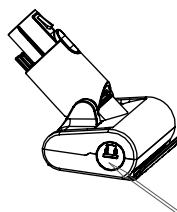 

# Common faults and product parameters

## ※Common faults and solutions

S/N	Problem	Possible cause	Solution
1	Fail to work	The battery is out of power	Check whether the battery has power or needs replacement
2	Fail to suck dust or weak suction power	1、The inlet Hepa is filled with dust 2、The battery power is low	Clean the inlet Hepa or replace Connect the power adapter for charging
3	Dust leakage	1、 The dust cup is filled with dust 2、 The battery power is low	1、 Clean the dust cup and install it correctly 2、 Connect the power adapter for charging
4	Fail to suck and suddenly off	The inlet Hepa is filled with dust	Clean the inlet Hepa or replace it

### If the three LED-lights on the battery pack turn red and flash, it may have the following faults

- ※ If the internal temperature of machine is too high, the machine will start the overheat protection function and be shut down automatically and the three LED-lights turn red and flash. Restart the machine after its body is cool and it will recover to normal.
- ※ The machine will be short-circuited and shut down automatically after sucking liquid, and the three LED-lights will turn red and flash quickly. Please don't start/shut down the machine repeatedly. Remove the battery for recharging and restart the machine after troubleshooting.
- ※ When the host motor is blocked by foreign matters, the machine will be shut down automatically. Please restart after removing the foreign matters.
- ※ If the floor brush is blocked by foreign matters, the machine will not be shut down automatically, but the three LED-lights will turn red and flash; shut down the machine, remove the foreign matters in the floor brush, and press the switch button again to start the machine.
- ※ When the battery power is low or out of power, the three LED-lights will turn red and flash, please charge immediately.

## ※Product parameters

Rated power	350W
Battery configuration	Li-ion 2200mAh 25.2V
Charging time	4~5H
Noise level	78dB
Outline dimension	1150×260×210mm
Weight (net/gross weight)	4.2kg/6.1kg
Capacity of dust cup	500ml
Suction	Maximum Suction Power 30,000PA
Using time	60mins--Eco,25-28mins--Mid,13-15mins--High