

**VACUUM
SERIES
INSTRUCTION
MANUAL**

E-WARRANTY



SCAN HERE

**Russell
Taylors**



X1

Safety Instructions

Warning: Basic safety precautions should always be observed when using an electrical appliance, including the following to reduce the risk of fire, electrical shock or injury.

- Store the vacuum in a dry place out of reach of children.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of this appliance by a person responsible to their safety.
- Children must be supervised to ensure that they do not play with the appliance.
- Use only the attachments provided in the packaging. Any misuse or use of any accessory or attachment that was not provided by Russell Taylors may present a risk of personal injury.
- Keep the appliance and accessories away from hot surfaces.
- Do not block the appliance openings or hinder air flow. Keep the openings free of any objects including dust, lint, clothing and fingers.

Electrical Safety

- Only use the battery and charger supplied in the original packaging, The appliance is only to be used with the power supply unit provided in the packaging.
- Do not modify the charger.
- The charger has been designed for a specific voltage. Always check the voltage is same as what is stated on the rating plate.
- Before using, check if the charger cord has any signs of damage.
- Do not abuse the charger cord.
- Do not wrap the cord around the charger when storing.
- Keep the charger cord away from hot surfaces and sharp edges.


Battery Safety

- This appliance includes Li-ion batteries. Do not expose it to high temperature or it may explode.
- Lithium-ion batteries perform best when they are kept at a moderate state of charge and are not allowed to discharge (Battery level reaches 0%). To increase the lifespan of the battery pack, do not allow the battery to reach 0% and recharge the battery regularly.
- The batteries are not replaceable. If you have a defective battery pack, please contact the Russell Taylors service team at support@russelltaylors.com.

Product Warranty

- This appliance has been designed for domestic dry vacuum cleaning only. Any evidence of commercial use will result in void of warranty.
 - The vacuum cleaner is backed by a 2-year manufacturing warranty (The battery pack is covered by a 6-month warranty).
 - For warranty claims, submit an email to malaysia@russelltaylors.co.uk. If you have not registered your E-Warranty, you will need to include your order number or receipt for verification purposes.
-
- **WARNING:** For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.

DESCRIPTION OF THE DEVICE

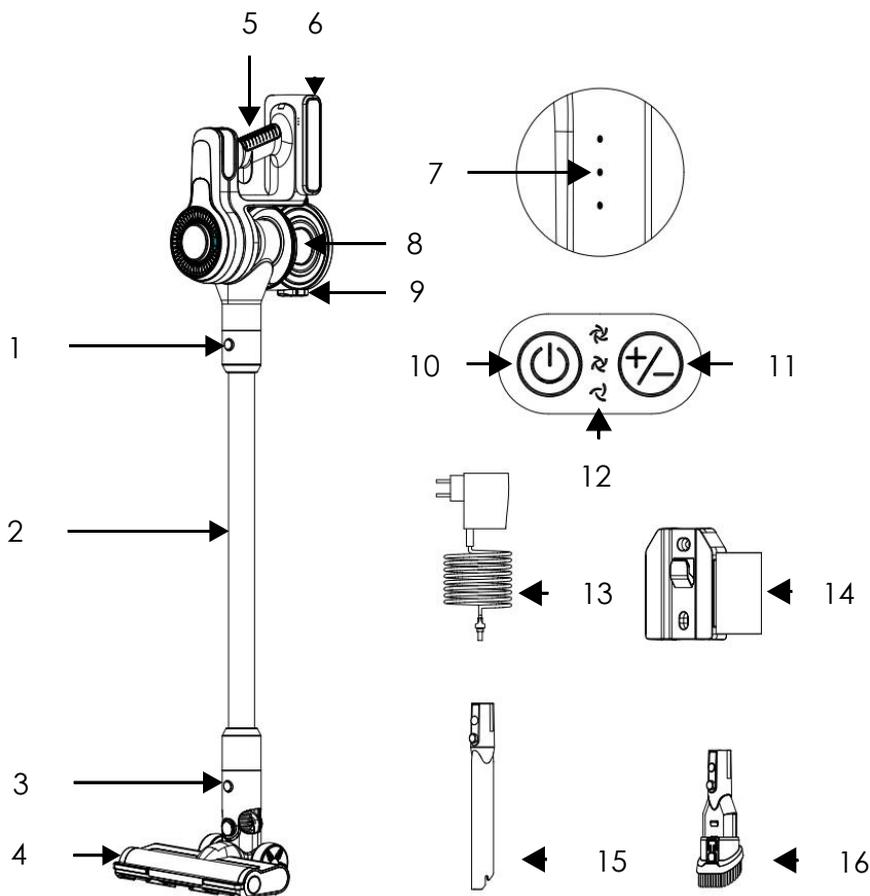


1. Metal tube release button
2. Metal tube.
3. Floor brush release button
4. Motorized floor brush
5. Ergonomic handle
6. Detachable battery pack
7. Power Indicator lights
8. Dust tank
9. Dust tank release

10. On/Off Switch
11. Speed control button
12. Speed Indicator lights (3 levels)
13. Adapter
14. Wall mount
15. Crevice tool
16. 2 in 1 brush tool


INSTRUCTIONS TO INSTALLATION

➤ Metal Tube

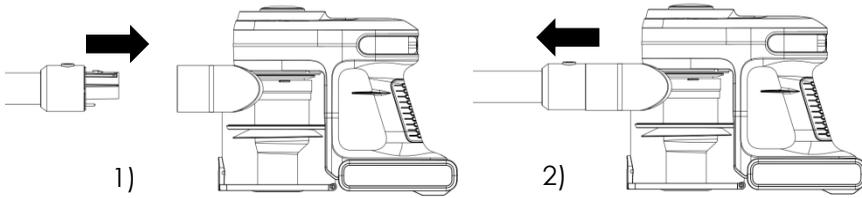

-
- 1) Insert the metal tube in to the main body until a click sound is heard.
 - 2) Press the metal tube release button and remove the tube.


➤ Floor Brush Installation

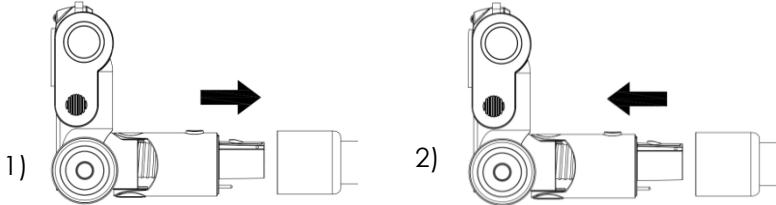

- 1) Insert the motorized brush into the end of the tube until a click is heard.
- 2) Press the motorized floor brush release button to remove the motorized floor brush.

BEFORE FIRST USE

Charging

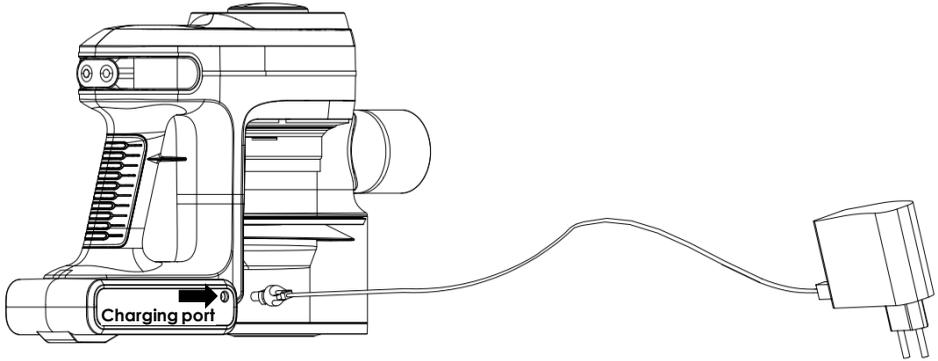


Plug the adapter into the charging port and then plug the other side of the adapter into the power outlet.

Note:

- ☒ Charge the battery before the first use.
- ☒ It is recommended to charge the battery full before the first use.
- ☒ Do not charge the battery for extended periods, as this may damage the battery.

Indicator Lights (All green color)

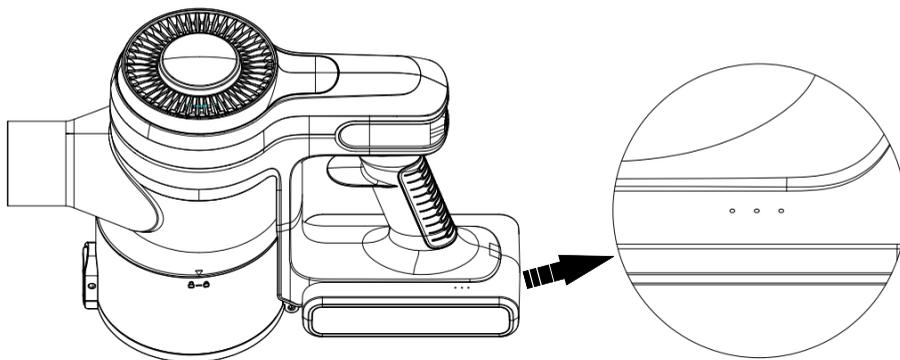

(A) While charging

Charging from low to high: lights flashing in turn until all three lights on.



Fault: All three lights flashing at the same time, please check if the brush roller is stuck or you can contact the customer service center.



(B) During discharging or running.

Discharging from high to low, lights off in turn until last light flashing.




Out of power, last light flashing until power off, please charge:



INSTRUCTIONS TO USE

Cleaning Accessories

- Motorized floor brush: Suitable for rugs and hard floors.
- Long crevice tool: Suitable for cleaning the trash in the corners, gaps, baseboard edges, and other hard-to-reach places.
- 2 in 1 brush tool: Use the brush to clean upholstered surfaces, keyboards, lamps, curtain, blinds, vents, etc. Perfect for cleaning hair and dust inserted on the fabric. Use the crevice portion to do the ordinary cleaning task. To switch between brush and crevice portion, press the button on the accessory and slide brush up or down.

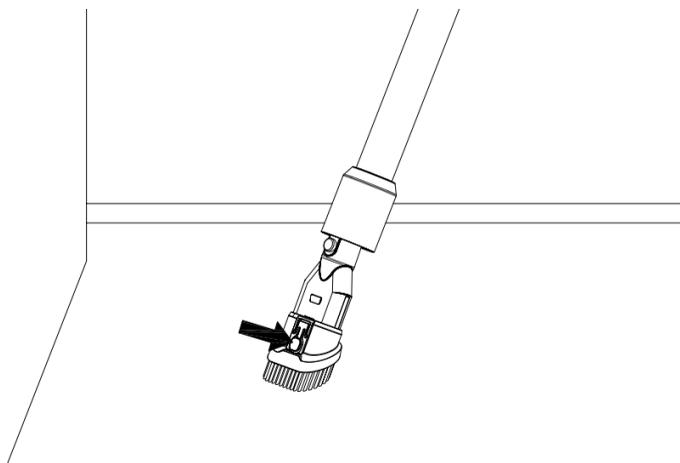



Beginning to clean

1. Select the appropriate accessory to use according to different cleaning task.
2. Press the ON/OFF switch, the machine will start to work. Press it again to stop.

3. Press the speed control button to adjust the suction power levels.

Wall mount installation:

- 1) Keep the bottom line of wall mount at least 120cm to the floor.
- 2) Screw the holder into the wall then hang the unit in the wall mount holder.

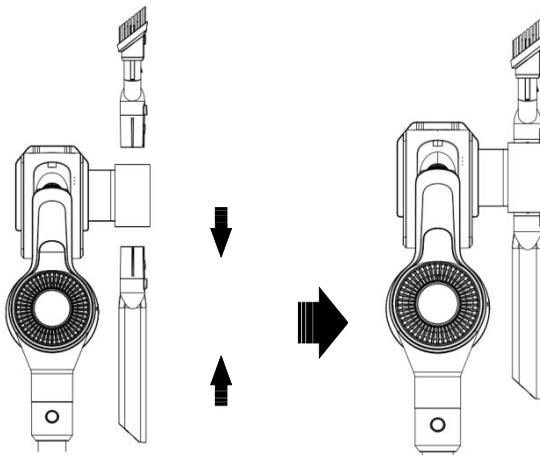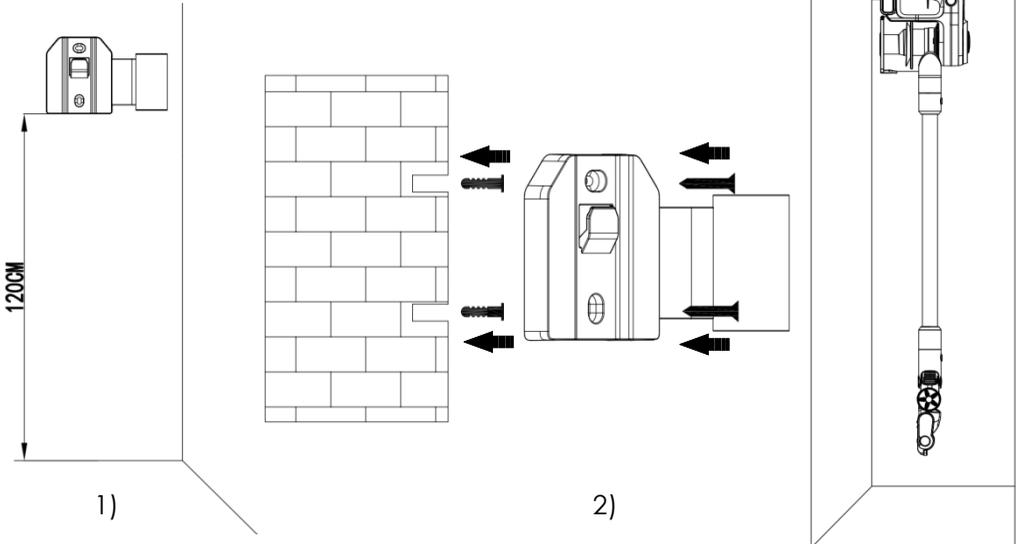


CLEANING AND MAINTENANCE


Dust Container and Filters Cleaning

Note: Clean the dust container and filters monthly to maintain the performance of the vacuum cleaner.


1. Press the button to open the dust tank cover;
Or twist to and pour out the garbage from dust tank.

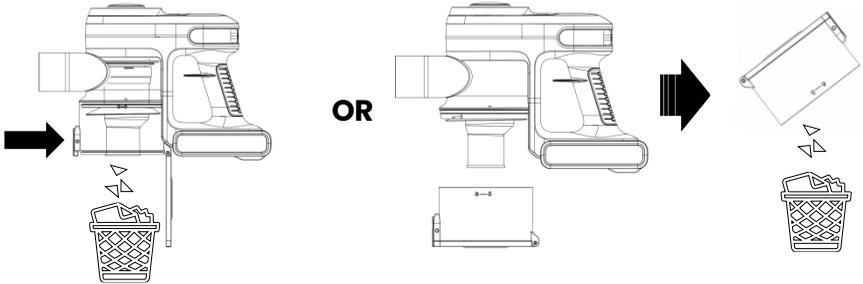

2. Lift out the filter mask by twisting count clockwise and pulling it out.
3. Then separate the HEPA filter from the filter mask by twisting counter clockwise and pulling out.

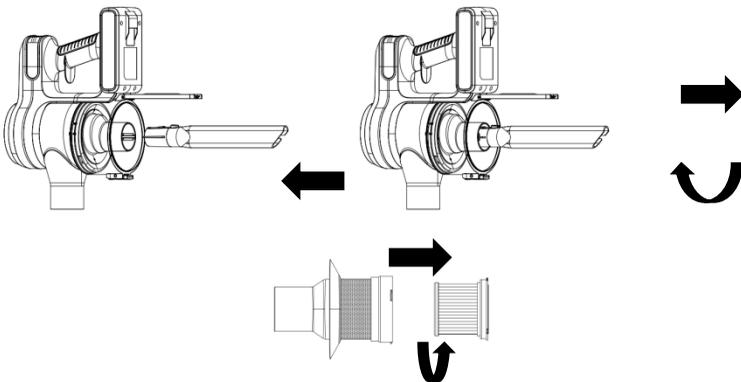

Note:

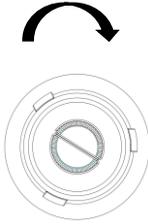


Clockwise to unlock



Counter-clockwise to lock

Post-Motor Filter & Filter Mask Cleaning


Note: Clean the post-motor filter every month.

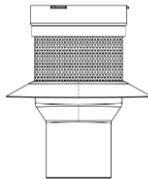

1. Turn the filter cover counter to remove it.
2. Lift out post-motor HEPA filter.
3. Shake to remove dust. Wash the HEPA under cold water.
4. Completely dry the filter before reassembling.

Floor Brush Cleaning

1. Remove the clip, Take out the roller brush。

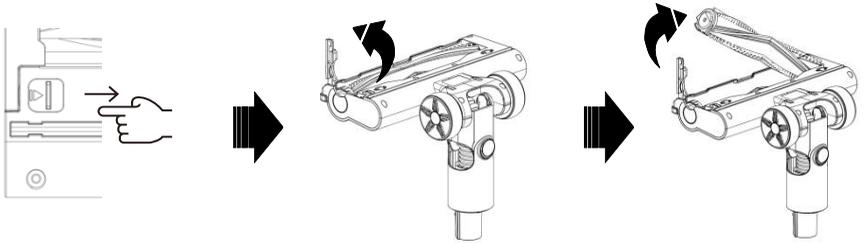

2. Remove the hair and debris around the brush roller by fingers or knife.


3. Wash the brush roller under running water.



4. Completely dry the brush roller before assembling.



5. Put the roller brush back, Install the clip back

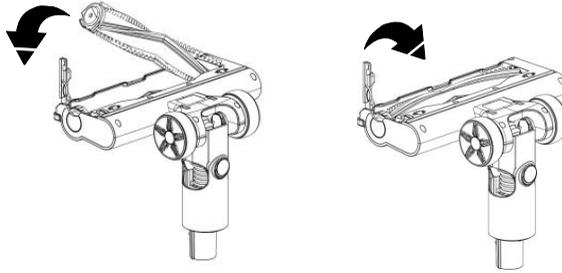

TROUBLESHOOTING

If you encounter a problem with your device or if you suspect the device is not working properly, you can make a few simple checks before calling a technician.

Problem	Solution
No power	Before using the appliance, check that it is fully charged, empty the dust container and clean the filter.
Loss of suction power	Check to see if the openings are clogged. Unplug and clean if necessary. Make sure the filter is correctly installed. Empty the dust container and clean the filter.

<p>The motorized brush is not turning.</p>	<p>Unplug the unit, check for clogged hair or dirt. If necessary, remove the rotating shaft from the power brush by unlocking the latch, clean and reposition the shaft by performing the reverse procedure.</p> <p>Make sure that the axle has been properly inserted into the power brush and the latch is in the locked position.</p> <p>The device may need to be recharged. Connect the device to the charger. The battery indicator will turn GREEN when charging is complete.</p>
<p>The battery indicator lights flicker while in use</p>	<p>The motorized brush is blocked. Turn off the vacuum and remove any object blocking the brush.</p>

Battery charging signal:

1. It may take you longer time for charging under the following circumstances:
 - a. Room temperature is higher than 30°C;
 - b. Recharge immediately after the vacuum cleaner has stopped operating.
2. Always recharge the vacuum cleaner after each usage no matter how long it has been used.
3. Unplug when not charging.
4. When not in use for more than two months the vacuum cleaner should be disconnected from the power supply. To ensure a longer service life, the vacuum cleaner must be charged once every two months.
5. The vacuum cleaner or adapter may become hot during charging so take the necessary precautions to avoid contact

