

**VACUUM
SERIES
INSTRUCTION
MANUAL**

E-WARRANTY



SCAN HERE

Russell Taylors

www.russelltaylors.co.uk



X2

Safety Instructions

Warning: Basic safety precautions should always be observed when using an electrical appliance, including the following to reduce the risk of fire, electrical shock or injury.

- Store the vacuum in a dry place out of reach of children.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of this appliance by a person responsible to their safety.
- Children must be supervised to ensure that they do not play with the appliance.
- Use only the attachments provided in the packaging. Any misuse or use of any accessory or attachment that was not provided by Russell Taylors may present a risk of personal injury.
- Keep the appliance and accessories away from hot surfaces.
- Do not block the appliance openings or hinder air flow. Keep the openings free of any objects including dust, lint, clothing and fingers.

Electrical Safety

- Only use the battery and charger supplied in the original packaging, The appliance is only to be used with the power supply unit provided in the packaging.
- Do not modify the charger.
- The charger has been designed for a specific voltage. Always check the voltage is same as what is stated on the rating plate.
- Before using, check if the charger cord has any signs of damage.
- Do not abuse the charger cord.
- Do not wrap the cord around the charger when storing.
- Keep the charger cord away from hot surfaces and sharp edges.


Battery Safety

- This appliance includes Li-ion batteries. Do not expose it to high temperature or it may explode.
- Lithium-ion batteries perform best when they are kept at a moderate state of charge and are not allowed to discharge (Battery level reaches 0%). To increase the lifespan of the battery pack, do not allow the battery to reach 0% and recharge the battery regularly.
- The batteries are not replaceable. If you have a defective battery pack, please contact the Russell Taylors service team at support@russelltaylors.com.

Product Warranty


- This appliance has been designed for domestic dry vacuum cleaning only. Any evidence of commercial use will result in void of warranty.
- The vacuum cleaner is backed by a 2-year manufacturing warranty (The battery pack is covered by a 6-month warranty).

Product Design

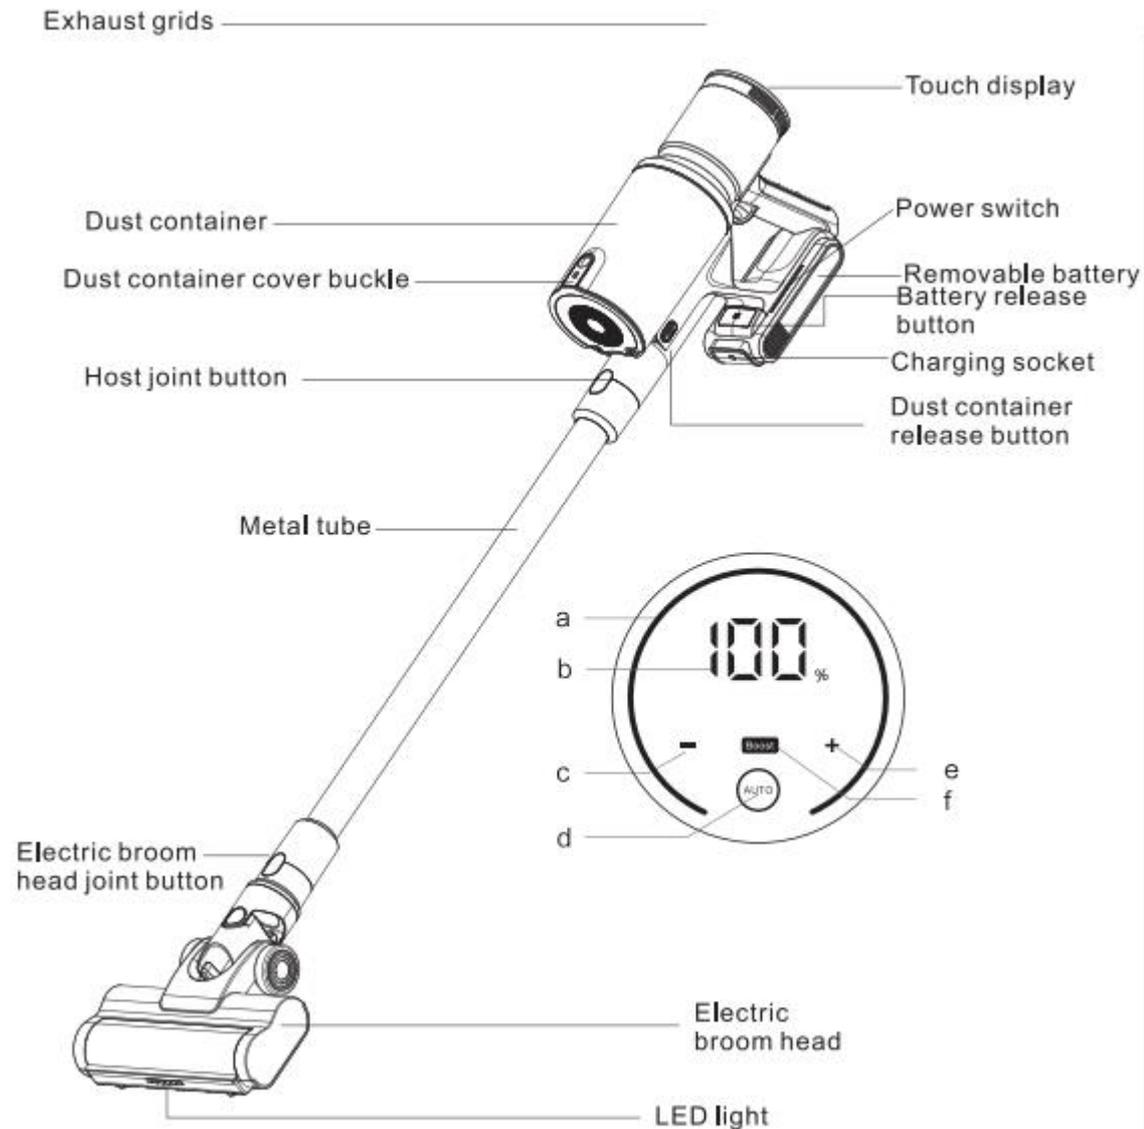


- a) Power Display Bar
- b) Battery Percentage
- c) Reduce Power Button
- d) AUTO Function Button
- e) Increase Power Button
- f) Speed Indicator

Accessory Installation

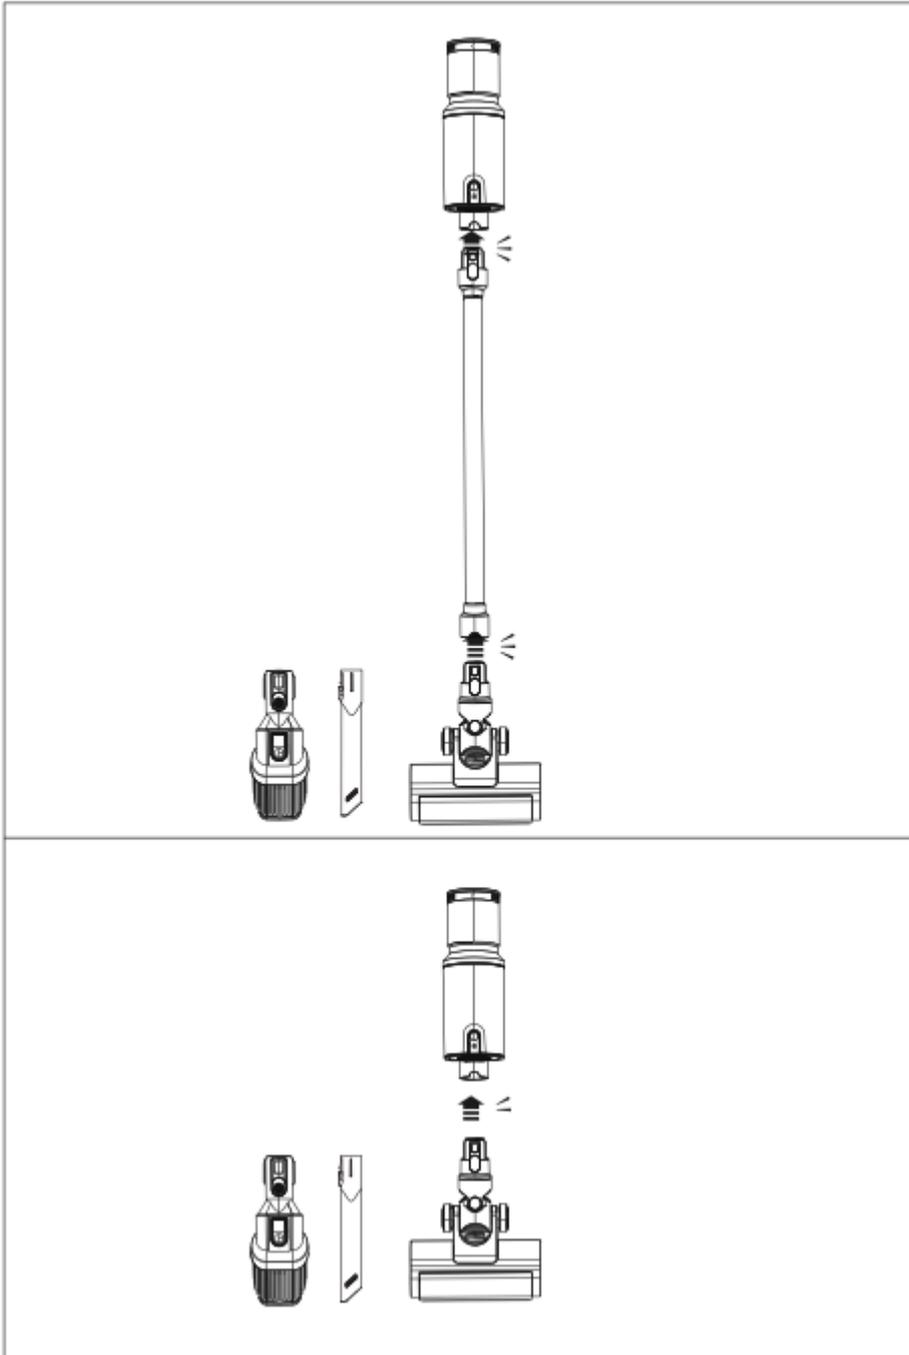

Installing the Wall Mounted Charging Station:

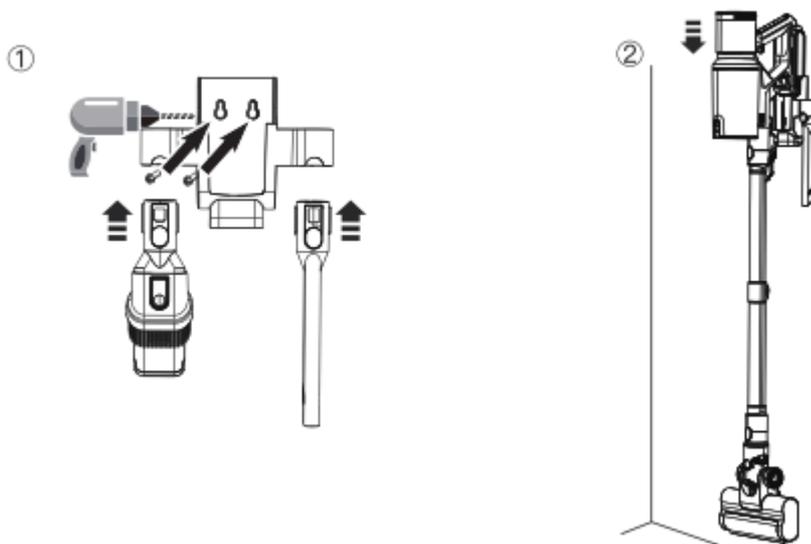


1. Drill 2 screws based on the hole of the hanger.
2. Insert the plastic expansion tube into the screw hole.
3. Align the hanger with the screw holes, assemble and tighten the screws.

Product Usage

While using the vacuum cleaner, when the power of the LED Display shows 00%, this indicates that the battery is low and needs to be charged.

1. Use the built-in charger of the vacuum to charge.
2. Turn off the power of the vacuum cleaner and insert the adapter into the charging port to charge.
3. The LED display will show the real-time power, while the LED light on the battery pack flashes, indicating that charging has begun.
4. When the LED display shows 100%, and the LED light on the battery stops flashing, this indicates that charging is now complete.

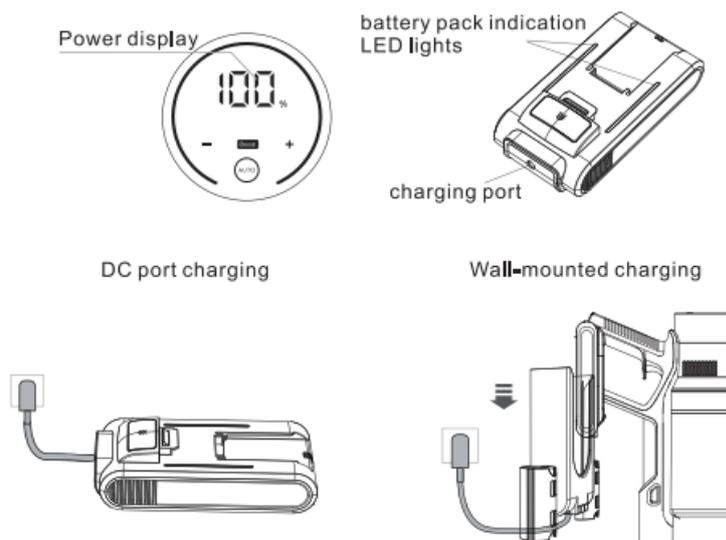

NOTE: To maintain the lifespan of your battery pack, do not run the vacuum cleaner until the battery is at 0%. Lithium-Ion battery packs operate more effectively when charged between 20%-80% of their capacity.

As shown in the figure below, a variety of modes can be used on the vacuum cleaner. After the machine is assembled, press on the power button to start the vacuum cleaner and press it again to shut it down.

When you turn on the vacuum cleaner, it enters the "AUTO" mode by default. Press the "AUTO" icon on the display panel to switch to a manual mode. After doing so, the speed moves to a manual setting and lower speed. Touch the "+" icon on the display panel to increase the suction power or touch the "-" icon on the display panel to lower the suction power. Press the "AUTO" icon again to enter auto mode.

NOTE: Setting a higher suction power will result in a shorter run time.

Use of the Electric Floor Brush


The electric floor brush can be used to clean hard wood, tiles or carpets. It is recommended to use it with the metal extension tube for a better cleaning experience.



(figure 1)


Use of the long flat suction tip

Insert the suction tip into the holder. It can be used to clean ceilings, bookshelves, computer keyboard and narrow gaps that are not easy to clean.

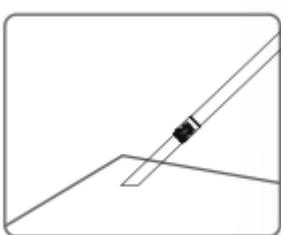


Use of the 2-in-1 brush head

Insert the brush head into the main body of the vacuum. It can be used to clean tables, cabinets, sofas and short haired carpets. Attach the metal extension tube to clean ceilings and curtains.

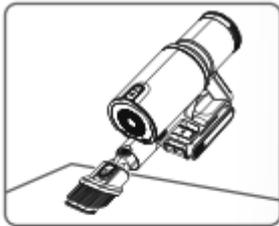


(figure 3)

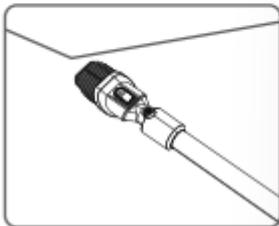


(figure 4)

Cleaning & Maintenance


Empty the dust cup when the dust inside is full. Otherwise, the suction will be weakened.

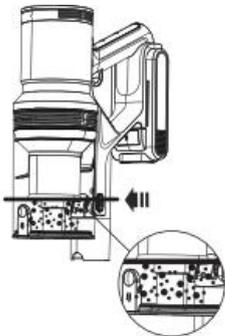


Open the dust cup lid to remove the dust built up in the container.

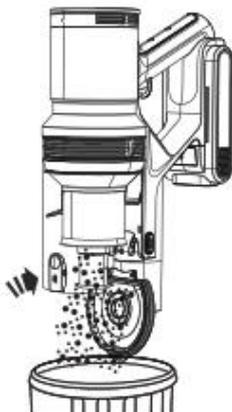

Detach the dust container and filter assembly.

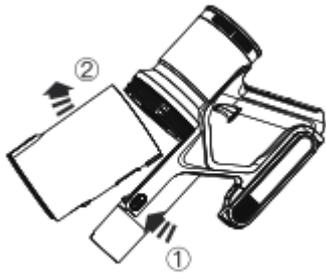


Clean the filter assembly.

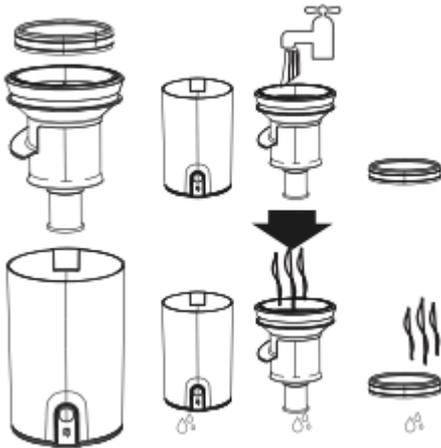

Note: After washing the filter and sponge, dry them before use.

Disassembly and Maintenance

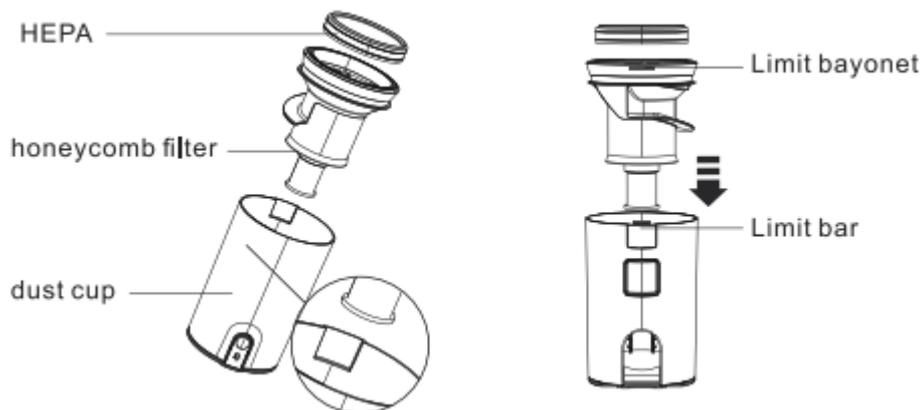


1. The assembly must be dried if it was washed before it can be used again.
2. For optimum cleaning, clear the dust container after each use to maintain the performance of the vacuum cleaner.

Installation of Dust Container


1. Snap the dust container into the main body. Ensure that you hear the “snap” sound when installing.

2. Push the bottom of the dust container in the direction shown below until you hear the click.

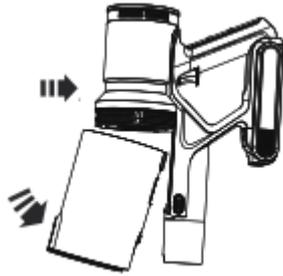

Disassembling the Brush

The floor broom and the roller brush

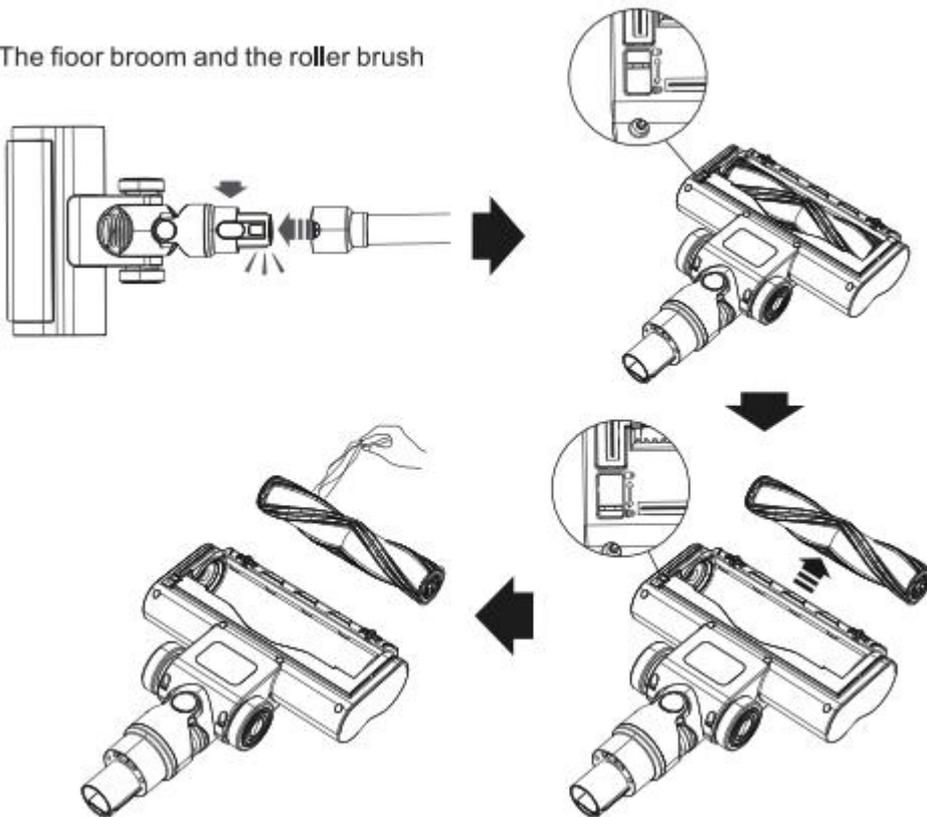

Troubleshooting

Error Code	Code Meaning	Solution
00	Battery Low	Recharge the vacuum cleaner
E2	Floor Brush or Motor Short Circuit	Contact malaysia@russelltaylors.co.uk for product repair.
E3	Electric Floor Brush Blocked	Clean the roller brush
E4	Battery Temperature High	Turn off the vacuum and let it rest for 30 minutes
E6	Over Voltage	Use the original adapter for charging
E7	Dust Cup Full	Clean the dust cup and floor brush

Russell Taylors