

# Russell Taylors

E-WARRANTY



SCAN HERE


[www.russelltaylors.co.uk](http://www.russelltaylors.co.uk)

**Electric Rice Cooker**

**USER MANUAL**



**ERC-18**

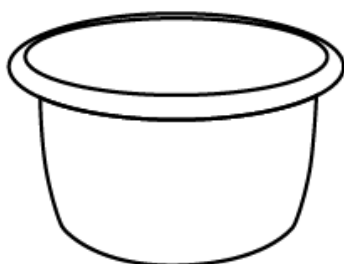**NAME OF PARTS**

Inner pot




Steam Tray



Measure cup



Spatula

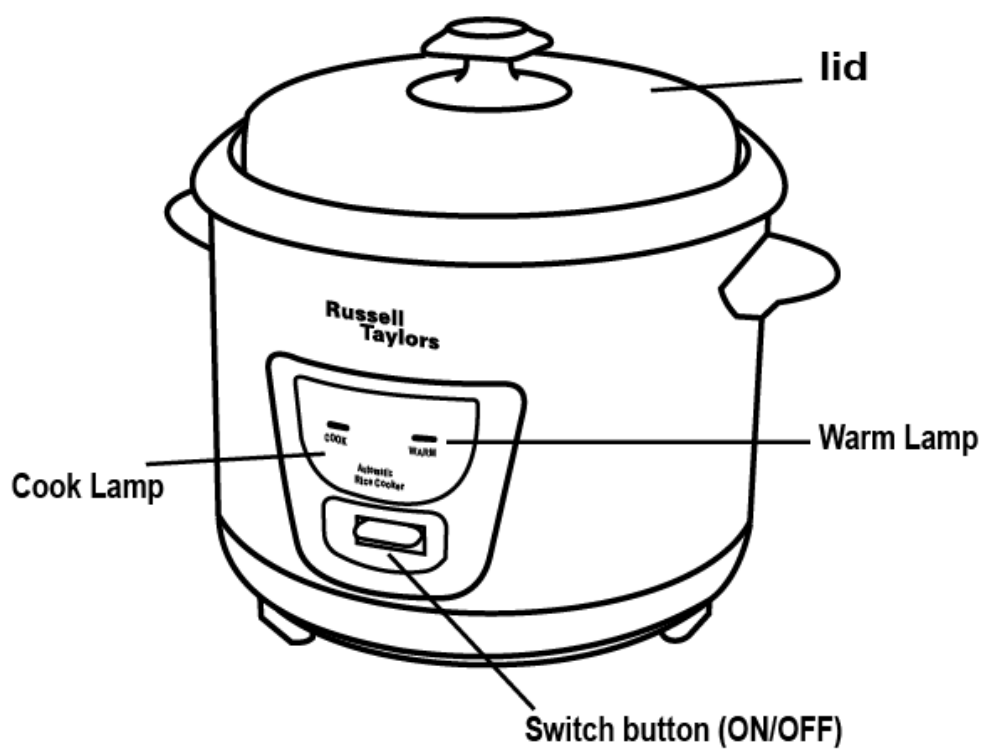

lid

Warm Lamp

Cook Lamp

Switch button (ON/OFF)

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:


1. Read all instructions.
2. To prevent electrical shock, do not immerse cord , plug or base unit in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Do not operate any appliance with a damaged cord or plug , if the appliance malfunctions or has been damaged in any manner. Return appliance to the Service Center for examination, repair, or adjustment.
5. Do not use outdoors.
6. Do not let cord hang over edge of table, counter, or touch hot surfaces.
7. Do not place on or near a hot gas or electric burner, or in a heated oven.
8. Extreme caution must be used when moving an appliance containing hot food, water, or other hot liquids.
9. Do not use appliance for other than intended use.
10. Lift and open cover carefully to avoid scalding. Do not allow water to drip into the rice cooker, or wash the product with water.
11. CAUTION: This appliance generates heat and steam during use . Proper precautions must be taken to prevent the risk of burns, fire or other damage to property.
12. The cord to this appliance should be plugged into a 220-240V~ 50/60Hz, electrical outlet only.
13. When using this appliance, provide adequate space above and on all sides for air circulation.
14. Do not allow this appliance to touch curtains, wall coverings, clothing dish towels or other flammable materials during use.
15. Never use the rice cooker to store leftover cooked rice. Always transfer the leftover rice to a proper storage container and keep it in the refrigerator until ready for use.
16. This appliance is not intended for use by persons (including children) with reduced physical , sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
17. Be sure to keep the unit out of the reach of children, especially when cooking.
18. Children should be supervised to ensure that they do not play with the appliance.
19. Keep the pot and heating plate clean. No rice grain, dust or any other foreign matter should be allowed to remain between the bottom of the Pot and the surface of the heating plate. Otherwise, the rice cooker, or in a serious case, it's parts or elements may burn out.



## COOKING WHITE RICE



Using the provided measuring cup, add rice into the inner pot

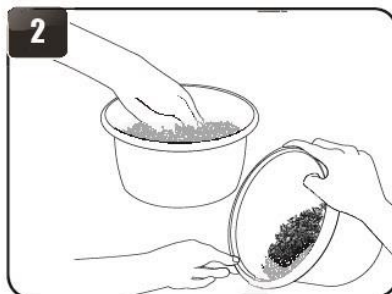

Clean the rice. Soak for a bit if you want softer rice




Fill the inner pot with water. Suggested white rice and water ratio of 1:1.2




Dry the inner base of the pot, then place the pot into the rice cooker




Place the lid, then plug the cord into an available outlet

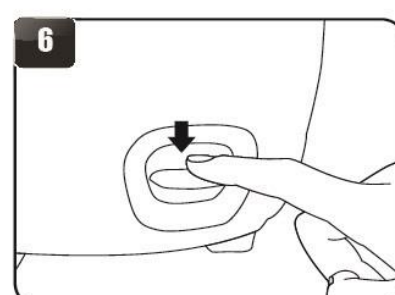

Press the switch button (ON/OFF) to start cooking

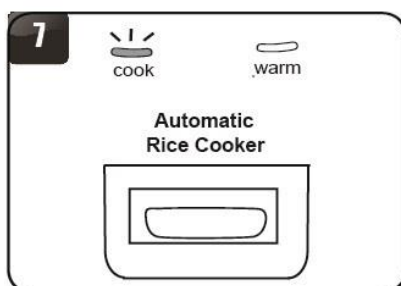

The COOK indicator light will illuminate as the rice cooker begins cooking the rice

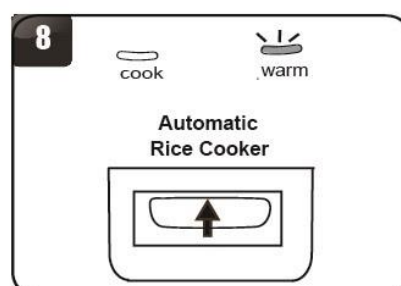

When your rice is ready, the switch button will flip and turn into WARM status




For better results, stir the rice with the spatula to distribute remaining moisture




After you are done serving rice, unplug the power cord to turn the rice cooker off




## STEAMING FOOD

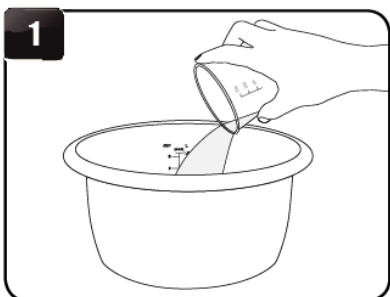

Add water into the inner pot

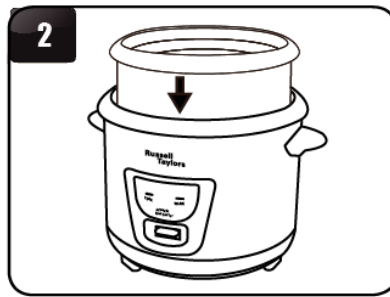


Dry the base of the pot, then place the pot into the rice cooker

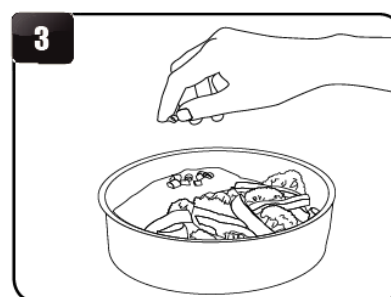


Place food to be steamed on the steam tray




Place the steam tray into the rice cooker

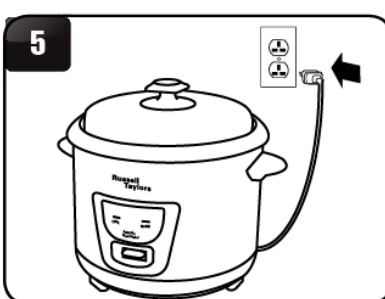

Place the lid, then plug the cord into outlet

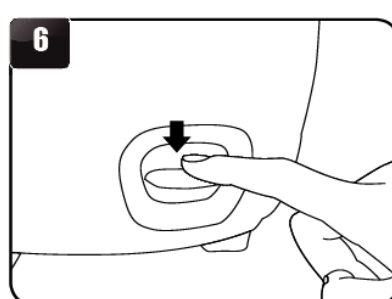


Press the switch button (ON/OFF) to start cooking

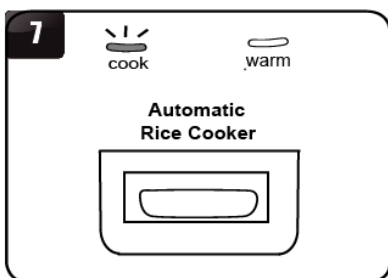


The COOK indicator light will illuminate as the rice cooker begins cooking the rice



You may remove the lid to check on status of the food

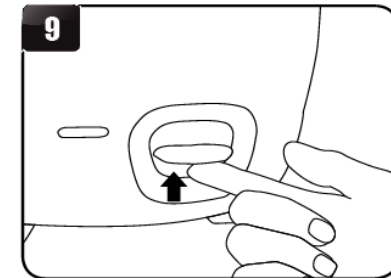

After the food is done cooking, push switch button (ON/OFF) up to activate WARM mode

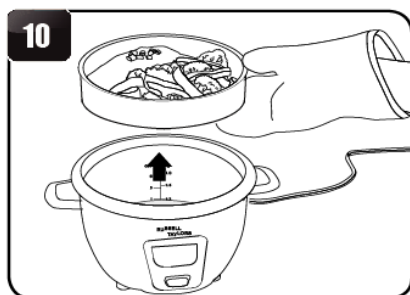

To prevent overcooking, remove steamed food immediately once it is done




After serving, unplug power cord to turn the rice cooker off

**NOTE:**  
Use adequate water to steam food to avoid dry boiling



## COOKING SOUP

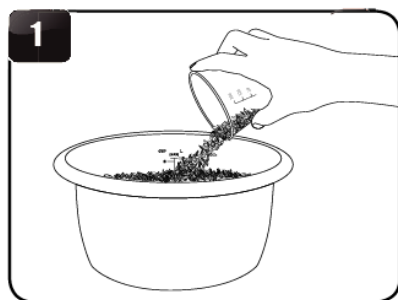


1 Add ingredients and food into inner pot




2 Dry the base of the pot, then place the inner pot into the rice cooker




3 Place the lid, then plug the cord into an available outlet

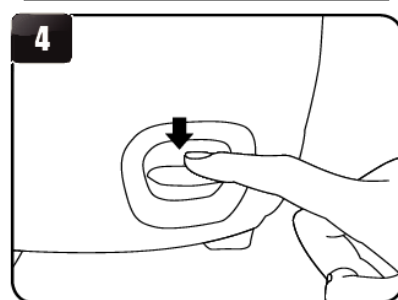


4 Press the switch button (ON/OFF) to start cooking

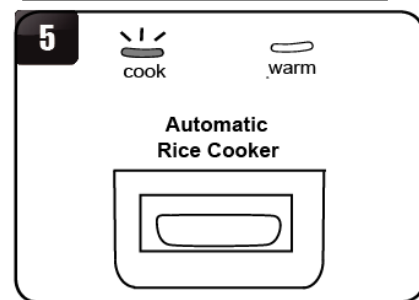

5 The COOK indicator light will illuminate as the rice cooker begins cooking the rice

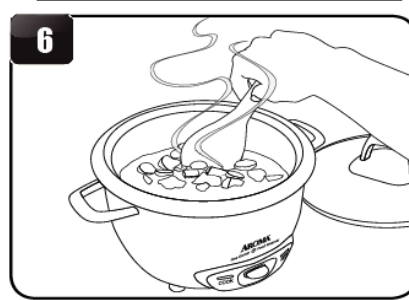

6 Carefully remove the hot lid and stir occasionally with a long-handled spatula

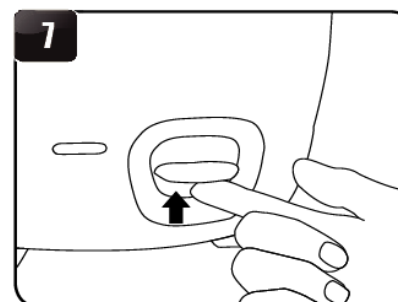

7 After food is done cooking, push switch button (ON/OFF) up to activate WARM mode



8 After serving, unplug power cord to turn the rice cooker off

### NOTE:

Use adequate water to avoid dry boiling

When cooking, stir food occasionally with long-handled spatula to prevent food from sticking to the bottom of pot

## TROUBLESHOOTING

<p><b>Rice is too dry/hard after cooking.</b></p>	<p>If your rice is dry or hard/chewy when the rice cooker switches to “Warm” mode, additional water and cooking time will soften the rice. Depending on how dry your rice is, add ½ to 1 cup of water and stir through.</p> <p>Replace the lid and press the SWITCH button (ON/OFF). When rice cooker switches to “Warm” mode, remove the lid and stir the rice to check the consistency. Repeat as necessary until rice is soft and moist.</p>
<p><b>Rice is too moist/soggy after cooking.</b></p>	<p>If your rice is still too moist or soggy when the rice cooker switches to “Warm” mode, use the serving spatula to stir the rice. This will redistribute the bottom (moistest) part of the rice as well as release excess moisture.</p> <p>Replace the lid and allow to remain on “Warm” mode for 10-30 minutes as needed, removing the lid and stirring periodically to release excess moisture.</p>

## PRODUCT WARRANTY

This product is backed by a 2-year warranty against manufacturing defects. Any warranty claims can be made by emailing us at [malaysia@russelltaylors.co.uk](mailto:malaysia@russelltaylors.co.uk) and include your order number or invoice for warranty verification. This product is only intended for household use and any evidence of commercial use will result in an immediate void of warranty.