E-WARRANTY

SCAN HERE

Russell Taylors


www.russelltaylors.co.uk

USER MANUAL


STEAM SPOT CLEANER SC25 PRO




Product Description

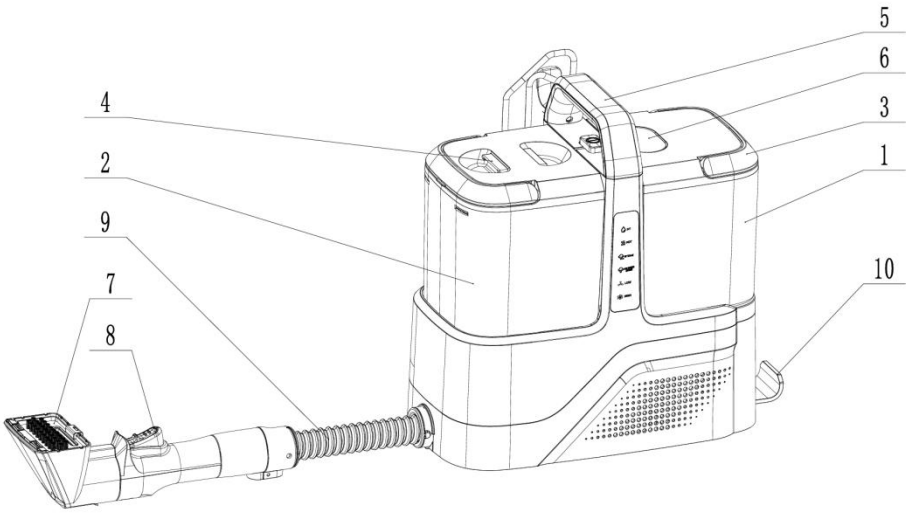

1. Clean Water Tank
2. Dirty tank
3. Water tank handle
4. Dirty tank button
5. Host Hand
6. Water tank filling cover
7. Standard Brush
8. Spray water switch button
9. Hose
10. Hose bracket
11. Hose Handle bracket
12. Main boday
13. Cable
14. Cable hook

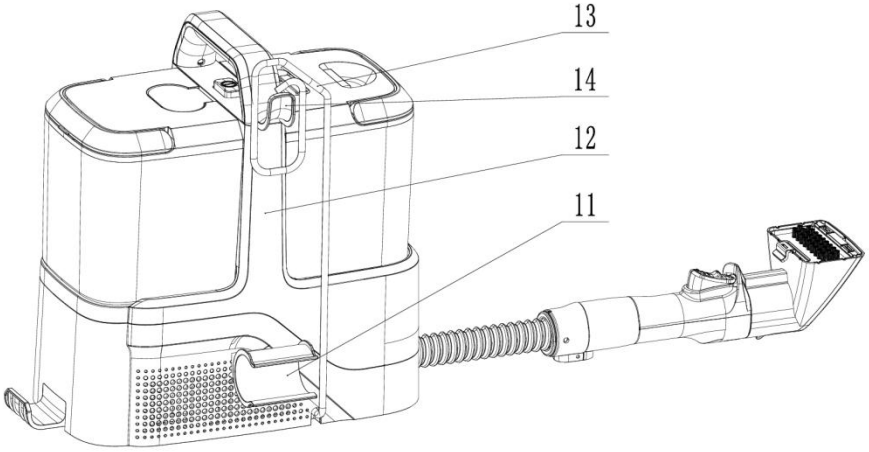

Packaging Details

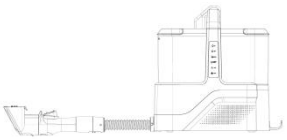

Device




Through-hole needle



Hose handle bracket



Standard Brush

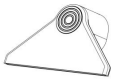

Right Angle Brush




Self-cleaning brush



Hose bracket



Host Hand

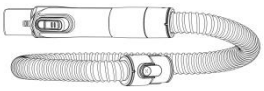

Hose Set



Ironing brush



Steam adapter



Big nylon brush



Brass brush




Small nylon brush



Nozzle brush


Attachment Installation

Host handle installation procedure

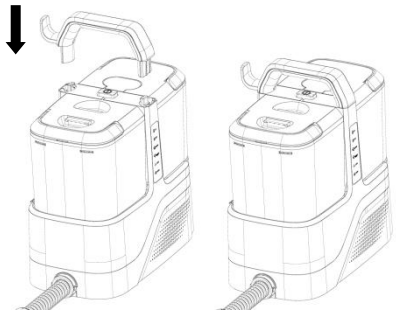


- The hand-crank winding hook and the power cord are on the same side, as shown in the figure.
- Insert the handle vertically into the corresponding port. The gap between the handle and the main unit is minimal, ensuring proper installation.

Installation of the hose handle fastener

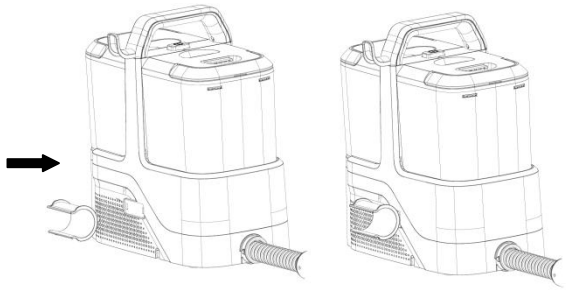


- Align the hose handle fastener with the card slot near the main unit.
- Apply firm downward pressure vertically; a "click" sound indicates proper installation.

Hose bracket installation

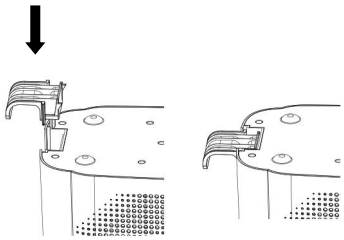


- Invert the host and align the hose bracket with the slot.
- Press downward. When you hear two "click" sounds, the installation is complete.

Power Cord Storage

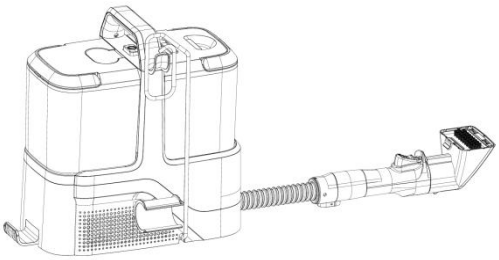

- This product features a long power cord. After use, the power cord can be wrapped around the product's hanging hook, as shown in the figure.

Host Operation Panel Description

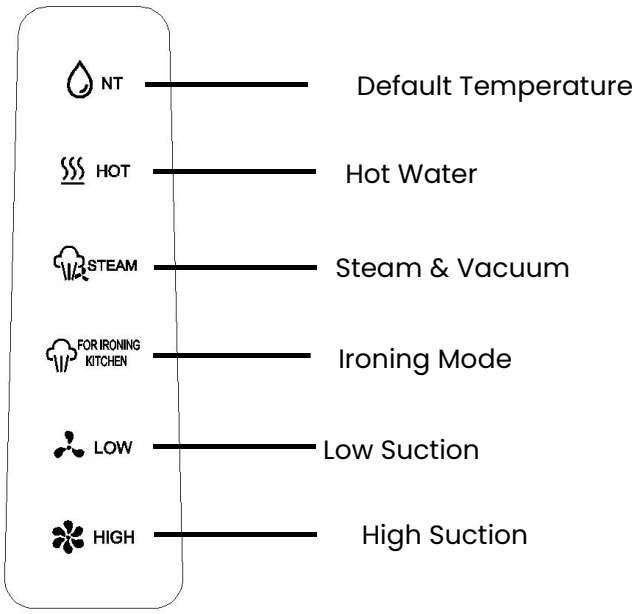

Panel Operation Instructions:

1. Power Switch: Push the power switch, then touch the control panel switch to start the product.
2. Temperature Switch: After startup, the device defaults to normal-temperature mode with the normal-temperature indicator light turned on. Press the "hot water icon" to switch to hot water mode; the indicator light will flash until it stops flashing, indicating that heating is complete. Touch the "Steam Icon" to switch to the steam function. The indicator light will flash; wait until it stops flashing to finish heating, after which the white indicator light will illuminate.
3. Gear Shift Switch: After turning on, the system defaults to the low suction mode with the low-gear indicator light always on. Press the "high gear icon" to switch to high suction mode, where the indicator light remains on.

Operation


To prevent air duct blockage, first remove large debris such as large paper scraps or packaging films from the area. This machine primarily cleans soft surfaces such as fabric and plush materials; with the appropriate accessories, it can also clean hard surfaces such as glass, tiles, and marble countertops. Before using this product, place the machine on a flat surface, ensure the socket voltage matches the product's required voltage, and verify that the hose connection is correct.

1. Remove the water tank, open the lid, and add an appropriate amount of water (the water temperature must not exceed 40°C).
2. Remove the power cord and insert the power cord plug.
3. Turn on the machine.
4. By default, the device operates in ambient water mode upon startup. Touch the screen to activate the hot water function, and touch again to switch to the steam function; repeat this cycle. The corresponding white indicator light will illuminate accordingly.
5. Hold the hose handle (equipped with a cleaning brush), press and hold the "spray button" on the handle to continuously spray water or steam from the nozzle; release the button to stop the spray.
6. Spray water or steam onto the stained areas of the fabric. After spraying, use a cleaning brush to wipe repeatedly, allowing the stains and wastewater to be drawn into the wastewater tank. Repeat this process several times to remove the stains effectively.
7. The product can use different accessories depending on various cleaning requirements.


Disassembly, Installation, and Storage of Hoses, Hose Handles, and Standard Brush Bristles (Applicable only to removable hoses)

1. Disassembling the hose handle: Hold the end near the connector, press the hose lock with your thumb, and pull slightly in the direction of the arrow to remove it (after steam cleaning, wait until the machine has completely cooled before

removal).

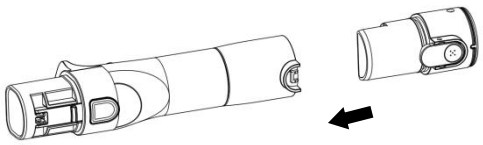


2. Hose handle installation: Hold the hose near the connector end with your hand, apply slight force in the direction of the arrow. Upon hearing a click, drag in the opposite direction until the connection disengages.

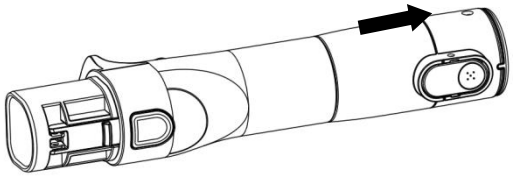


3. Hose storage: After use, the hose can be wrapped in the storage groove at the bottom of the machine.

4. Removal of the standard brush pad: Hold the main body of the standard brush by hand and pull the buckle slightly in the direction indicated by the arrow to remove it.

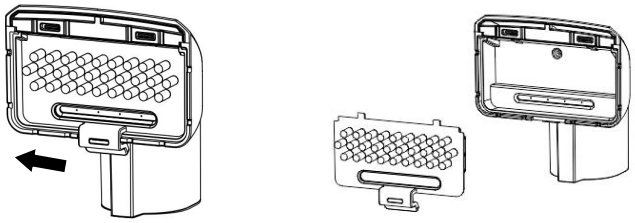


5、Standard brush blade installation: Hold the standard brush body with your hand, align the two protrusions on the brush blade with the slot on the brush body, and gently press the buckle in the direction indicated by the arrow.

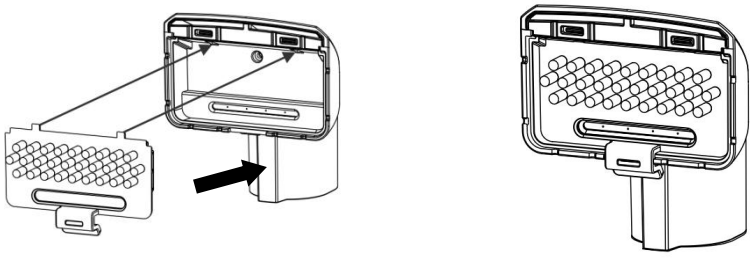

Special Note:


- Ensure the hose is properly installed before starting the machine.
- When using this product, spray water first before suctioning the dirt; do not directly vacuum the waste. This product is not a vacuum cleaner.
- To prevent air duct blockages, first remove large debris, such as large paper scraps or packaging films from the area.
- This device is primarily designed to clean soft flat surfaces such as fabric and plush materials, and can also clean hard surfaces like glass, tiles, and marble countertops.
- After cleaning, continue operating for 10 seconds to draw any residual water from the pipes into the sewage tank; otherwise, the residual water may leak through the nozzle.
- After shutting down the machine to complete the cleaning, hold the water spray button to release all hot water or steam from the pipe.
- Special attention to safety is required when using hot water and steam, as there is a risk of scalding.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or a lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Do not use this machine in environments with temperatures below 5°C or above 35°C.
- Reconstruction of the entire machine or its accessories is strictly prohibited.

Cleaning and Maintenance:

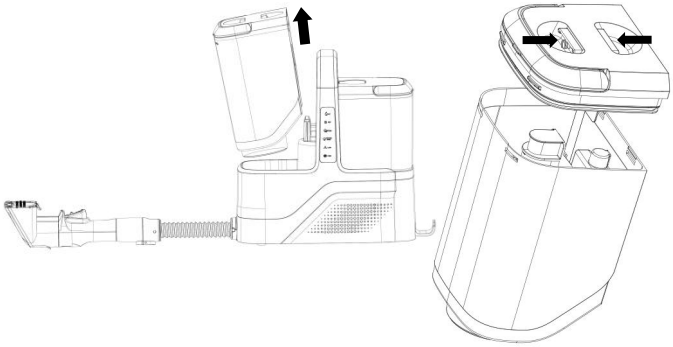


Sewage tank cleaning

- Sewage tank cleaning: To maintain product performance, clean the sewage tank regularly. If the tank contains excessive wastewater, the product's suction power will decrease. Clean the tank promptly when the water level reaches the maximum mark.
- Sewage tank removal: Turn off the machine, pull the sewage tank upward at an angle to remove it completely. Then press the button on the tank cover in the indicated direction to open it, drain the wastewater from the tank, and the tank is ready for cleaning.

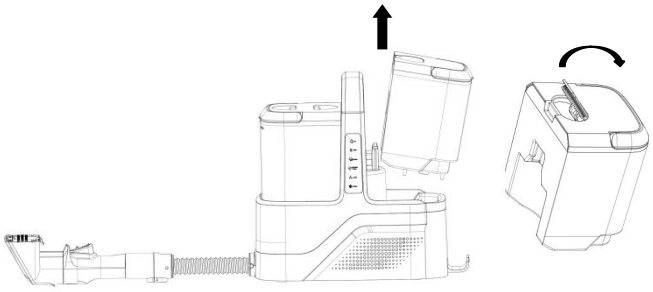


Add water and clean the clear tank

- Watering the clear water tank: When the clear water tank is low, replenish it promptly.
- Water filling procedure: After shutting down the machine, remove the water tank, open the tank lid, and add an appropriate amount of water.
- Disassembly of the water tank: Pull the water tank diagonally upward to remove the entire unit.

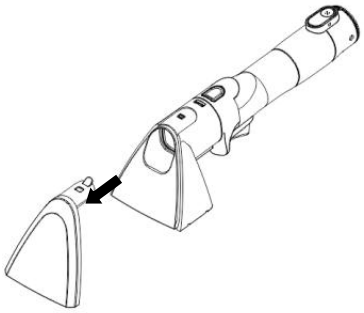

Clean the brush: When the cleaning brush becomes entangled with hair or clogged with dirt, clean it promptly.


- When the cleaning brush is entangled with hair or other debris, use a tool to thoroughly remove the hair or contaminants from the bristles.
- When the cleaning brush becomes clogged, remove the transparent cover above the brush and use an appropriate tool to clean the internal air duct of the brush.
- The cleaning brush can also be rinsed directly with tap water.

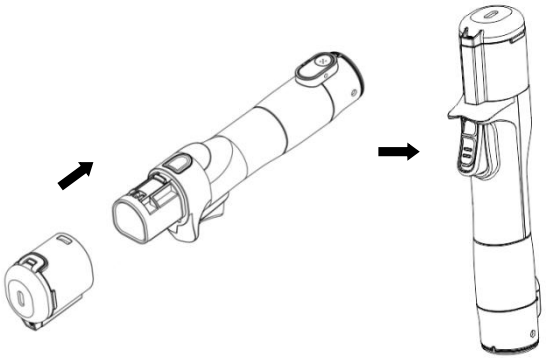

Self-cleaning brush: Self-cleaning of the product's internal pipelines

- Connect the self-cleaning brush to the hose handle
- Power on and start operation
- Hold the hose handle vertically and press the "spray switch button" to clean the internal pipes.
- The detachable hose can also be removed for direct flushing with a running tap.
- Note: If the internal pipes are dirty, it is recommended to extend the flushing time.


Accessories replacement: The corresponding accessories can be replaced according to the different places of use to achieve ideal cleaning effect (Users can choose different accessories as needed)

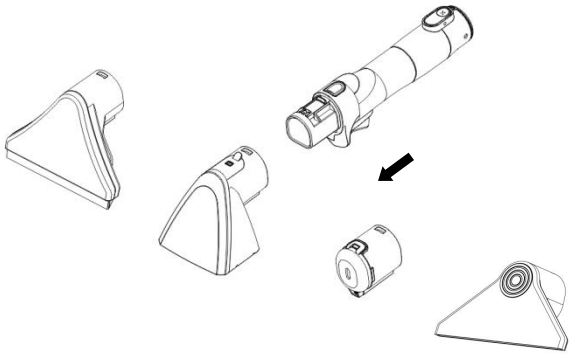

1. Standard brush: Regular use accessories, mainly for medium-area stains. (The brush is implanted with nylon hair in diameter of 0.25mm, and adopts a 4-hole one-row water discharge method, which can produce hot water and steam, which can effectively clean the surface of fabrics such as sofas, carpets, mattresses, pillows, etc.; the silicone brush uses softer silicone to clean fine fabrics, which can better protect the fabric.)
2. Self-cleaning brush: Self-clean the internal pipes of the product after cleaning.
3. Right-angle brush: The effective width of the brush head is 140mm. The integrated brush and reflective water spray can effectively clean the corners, gaps and dead corners of the sofa.


Water spray button self-locking function

Press the water spray button and push the button lock forward to automatically lock the button.

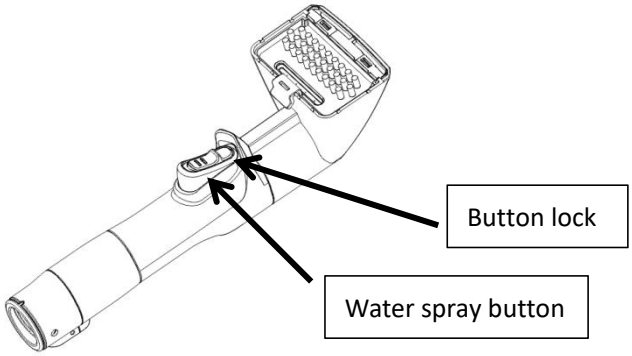

How to use the through-hole needle


If the water spray hole on the brush head does not produce water or the water columns cross, please use this accessory to clean it in time.

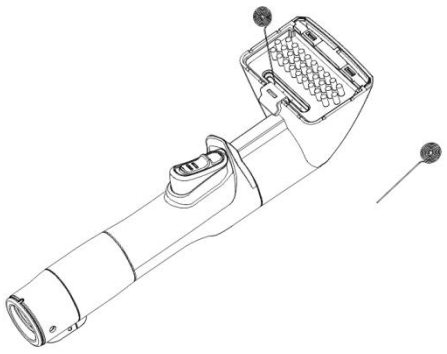


Kitchen Brush and Ironing Brush

Ironing brush: Besides regular clothing, it can also be used to treat large fabric items such as curtains, carpets, and sofa covers. It uses high-temperature steam to sterilize, remove dust mites, quickly remove wrinkles, separate water vapor without wetting the clothes, and can achieve flat ironing and hanging ironing.

If there is excess water inside the ironing brush, simply open the silicone plug to pour it out. You can also fill it with water for cleaning.

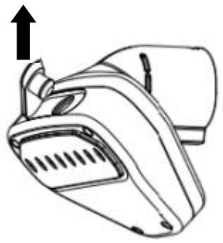


Kitchen Steam Cleaner: Just remove the other brush head, and then insert it directly in the arrow direction for installation.

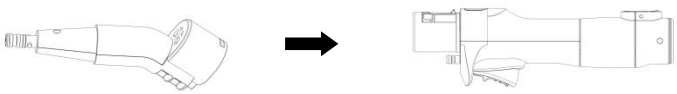


Kitchen Angle Brush: All the installation methods of kitchen brushes. The first picture shows the installation direction. The two small protrusions should be aligned with the two grooves and pressed in. Then rotate it clockwise until it is fully in place. The second picture shows the correct installation direction after completion. The third picture shows the directions of all the brush heads of the kitchen brush.


1

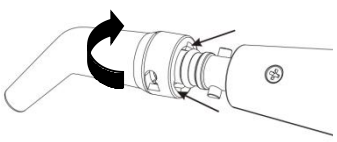

2

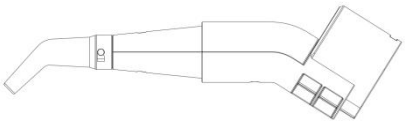

3

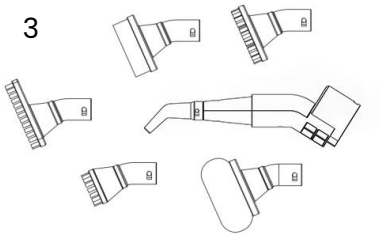

Gap nozzle: Used for cleaning gaps in sinks, corners of tiles, etc.

Small nylon brush/Large nylon brush: Used for cleaning range hoods, gas stoves, ovens, microwave ovens, air conditioner filters, window screens, etc.

Brass brush: Used to clean barbecue grills, wire mesh, gas cover pot racks, etc.

Troubleshooting

Abnormal condition	**Possible reason**	**Solution**
No water being sprayed out	● Nozzle clogging ● The water tank is low in water. ● The internal water pipe is blocked or ruptured.	● Use a fine needle to remove the clog from the nozzle at the spray outlet. ● Add water to the clear tank promptly. ● Contact the merchant or after-sales service
Abnormal noise	● The product suction port is blocked or has drawn in large debris. ● Motor fault	● Clear the blockage ● Contact the after-sales service
Weakened suction or failure to absorb water	● There is too much sewage in the tank. ● The suction port is clogged with dirt.	● Clean the sewage tank promptly. ● Remove the blockage promptly.
The machine is malfunctioning or not working.	● No power ● The ambient temperature is too high or too low.	● Check the power supply ● Keep the machine operating at an appropriate ambient temperature (5°C–35°C). ● Contact the merchant or after-sales service

Security Guidelines

- Only professional or authorized technical personnel may disassemble this product; unauthorized disassembly is strictly prohibited.
- The product's power cord is relatively long; do not place it in water. The power cord can be wrapped around the hanging hook.
- Do not place this product near cigarette butts, lighters, or other open flames.
- If the product needs cleaning, turn it off, unplug the power cord, and then clean the product.
- Do not place heavy objects or sharp items on or around the machine.
- This product is for indoor household use only. Do not use it outdoors.
- This product is prohibited under heavy pressure from objects (or individuals) weighing more than 10 kg.
- Before using this product, remove all fragile items from the floor (such as glass cups and lamps), as well as any objects that may block the suction channel (such as wires, paper scraps, or curtains).
- Do not place this product in a location where it may fall easily (such as on tables or chairs).
- When the sewage tank is full, empty it first before using this product.
- The recommended operating temperature range for this product is 5°C to 35°C. Do not use the product in environments with excessively low or high temperatures.