Russell Taylors

E-WARRANTY

SCAN HERE

www.russelltaylors.co.uk

USER MANUAL

PORTABLE TRAVEL KETTLE RK1




Safety Precautions

1. Please read the relevant instructions carefully before using the electric kettle.
2. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning the use of this appliance in a safe and responsible way. Cleaning and user maintenance should not be made by children. Keep the appliance and its cord of reach of children.
3. Children must be supervised while using this appliance and not play with the appliance.
4. This product is suitable for household and similar environments, such as shopping malls, offices, business trips, and other workplace settings.
5. Before connecting to the power supply, ensure that the required voltage of the product matches the local power supply voltage.
6. Never immerse the entire cup in water at any time, as it may damage the internal electronic components.
7. When cleaning, use a damp cloth. Do not use detergent, thinner, gasoline, cleanser, bleach, chemical wipes, scouring pads, or other abrasive tools.
8. The product should be placed horizontally. Do not place the body directly on an open flame for heating.
9. When not in use, store the product in a well-ventilated and dry place to prevent internal components from getting damp.
10. Do not exceed the maximum water level mark when boiling water. Overfilling may cause boiling water to spill or overflow.
11. Always unplug the power cord when the product is not in use.
12. Be cautious of high-temperature steam! This product can boil water with the lid closed. When boiling, hot steam will escape from the steam vent on the lid. Do not place your hands or face near the steam vent to avoid burns.
13. When the inner tank is still hot, place it on a level, dry surface. Do not use it on heat-sensitive materials such as plastic tablecloths or wool carpets.

All repairs must be carried out by qualified professionals.

Product Details

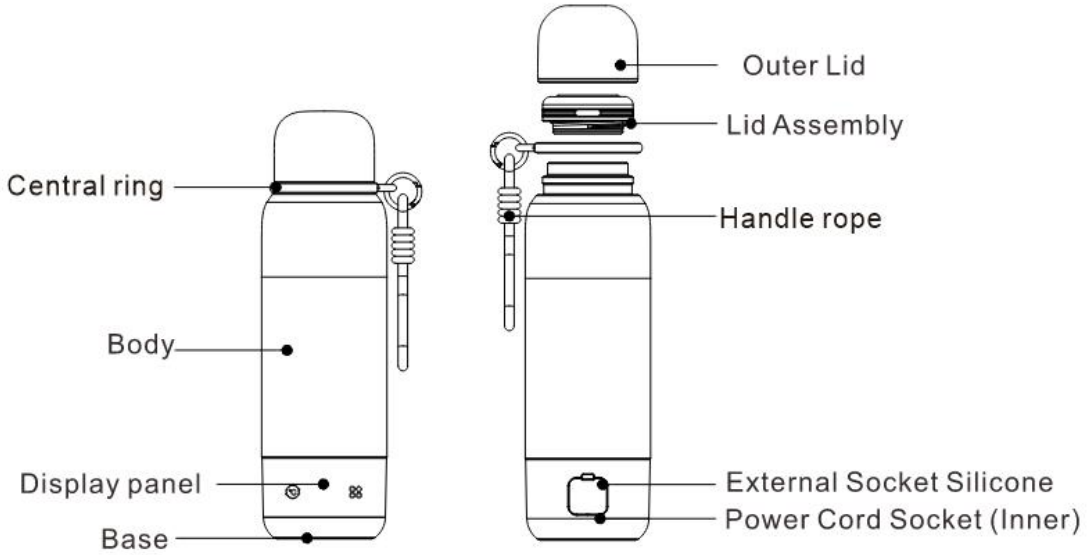

Instructions for Use
Before First Use

Unscrew the lid of the cup. When filling the cup with water, make sure the water does not exceed the maximum water level line. For the first use, boil a full cup of water, then discard it and rinse the cup with cold water (do not immerse the entire cup in water while cleaning). Repeat the process once to clean the interior.

Do not exceed the maximum water level line when filling. Otherwise, boiling water may overflow.

Do not power on the electric kettle without water inside. Dry boiling may shorten the lifespan of the kettle and affect its performance.

Do not tilt or invert the product during use.

IMPORTANT:
The water must be within the maximum scale line. If the water exceeds the maximum level, it may spray out from the cup mouth when boiling.

This product can function without the lid during boiling. It is recommended not to cover the lid while boiling.

Function Button Instructions

1. Standby Mode

After plugging in, the product will beep once, and all function indicator lights will turn on for one second, then go off.
The display shows "--", indicating standby mode.

In standby mode, press the "Function/Select" button to cycle through: Boil – Formula – Brew – Keep Warm. After selecting a function, the display and indicator will blink 5 times, then enter the working state.

While the product is working, press and hold the "Function/Cancel" button for 2 seconds to cancel the function and return to standby mode.

When the display and indicator are blinking after function selection, press the "Temperature Adjustment" button to set the desired temperature. (Adjustable from 45°C to 95°C in 5°C increments)

Function Modes:

Boil: Default temperature is 100°C, not adjustable. When done, beeps 3 times and enters keep warm mode at 60°C. Keeps warm for 8 hours, then returns to standby.

Milk: Default temperature is 45°C. Press and hold the "Temperature Adjustment" button to switch between 40-45-50-55°C. Tap the button to adjust from 40°C to 55°C in 1°C increments. After operation, beeps 6 times and enters constant temperature mode for 24 hours.

Brew: Default temperature is 85°C. Adjustable between 85–95°C in 5°C steps. When finished, beeps 3 times and enters keep warm mode at 85°C for 8 hours, then returns to standby.

Keep Warm: Heats to 60°C by default. Adjustable between 45–80°C in 5°C increments. Keeps warm for 24 hours.

Safety Reminders:

After boiling water, let it sit for 3 minutes before opening the lid to avoid burns.

After boiling, if tilting, inverting, or carrying the cup, make sure the lid is tightly secured to prevent leaks.

If using at high altitudes (1,500 meters or above), always boil water with the lid open.

Maintenance and Cleaning:

Always unplug the power cord before cleaning. Clean only after the product is fully cooled down.

Use a soft dry cloth or sponge with a mild detergent to wipe the inner and outer surfaces.

The lid and inner cup can be cleaned with warm water and then wiped dry.

Do not use steel wool, hard brushes, or other abrasive tools that may damage the protective layers on surfaces.

Do not use gasoline, thinner, polish, or other toxic or corrosive cleaners.

Do not rinse the product with water or immerse it in water.

Common Malfunctions and Troubleshooting

No.	Malfunction/Error Code	Possible Cause	Solution
1	No power	Plug not properly connected	Check whether the power plug is securely inserted
2	Product not working	Product malfunction	Send to an authorized service center or return to the manufacturer for repair
3	Indicator light keeps flashing	1. Sensor malfunction due to dry boiling 2. Sensor fault or ambient temperature below -10°C	1. Check if the water has boiled dry; let it cool, then reconnect and reset 2. Use in temperatures above -10°C or send for repair
4	E1	Sensor fault or ambient temperature below -10°C	Use in temperatures above -10°C or send for repair
5	E2	Sensor fault	Send for repair
6	E3	Dry boil protection triggered; water level too low	Check if the water has boiled dry; let it cool, then reconnect and reset